



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines


Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>

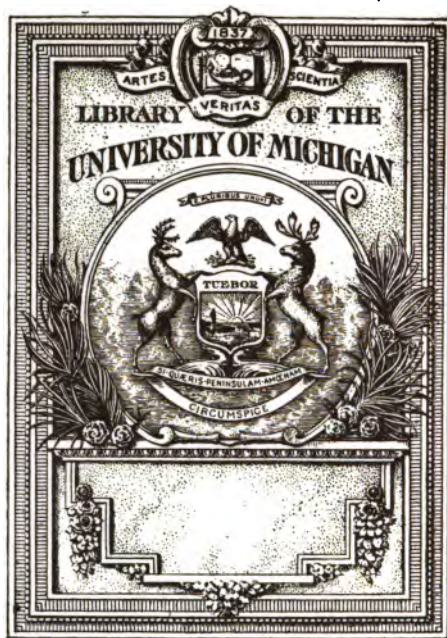



ac

532

, 563

1915





An Electrical Library.

By PROF. T. O'CONOR SLOANE.

How to become a Successful Electrician.

PRICE, \$1.00.

Electricity Simplified.

PRICE, \$1.00.

Electric Toy Making, Dynamo Building, etc.

PRICE, \$1.00.

Arithmetic of Electricity.

PRICE, \$1.00.

Standard Electrical Dictionary.

PRICE, \$3.00.

NORMAN W. HENLEY & CO., Publishers,

132 Nassau Street, New York.

Arithmetic of Electricity

A PRACTICAL TREATISE ON ELECTRICAL CALCULATIONS OF ALL KINDS REDUCED TO A SERIES OF RULES, ALL OF THE SIMPLEST FORMS, AND INVOLVING ONLY ORDINARY ARITHMETIC, EACH RULE ILLUSTRATED BY ONE OR MORE PRACTICAL PROBLEMS, WITH DETAILED SOLUTION OF EACH, FOLLOWED BY AN EXTENSIVE SERIES OF TABLES.

BY

Thomas
T. O'CONOR SLOANE, A.M., E.M., Ph.D.

AUTHOR OF

Standard Electrical Dictionary, Electricity Simplified,
Electric Toy Making, etc.



TWENTY-FIRST EDITION

NEW YORK:

THE NORMAN W. HENLEY PUBLISHING COMPANY

132 NASSAU STREET

1915



COPYRIGHTED, 1915 AND 1909,
BY THE NORMAN W. HENLEY PUBLISHING CO.

COPYRIGHTED, 1903 AND 1891,
BY NORMAN W. HENLEY & CO.

5012 50 100

PREFACE.

The solution of a problem by arithmetic, although in some cases more laborious than the algebraic method, gives the better comprehension of the subject. Arithmetic is analysis and bears the same relation to algebra that plane geometry does to analytical geometry. Its power is comparatively limited, but it is exceedingly instructive in its treatment of questions to which it applies.

In the following work the problems of electrical engineering and practical operations are investigated on an arithmetical basis. It is believed that such treatment gives the work actual value in the analytical sense, as it necessitates an explanation of each problem, while the adaptability of arithmetic to readers who do not care to use algebra will make this volume more widely available.

In electricity there is much debatable ground, which has been as far as possible avoided. Some points seem quite outside of the scope of this book, such as the introduction of the time-constant in battery calculations. Again the variation in constants as determined by different authorities made a selection embarrassing. It is believed that some success has been attained in overcoming or compromising difficulties such as those suggested.

4. 2 38
m.c. 10

320076

Enough tables have been introduced to fill the limits of the subject as here treated.

The full development of electrical laws involves the higher mathematics. One who would keep up with the progress of the day in theory has a severe course of study before him. In practical work it is believed that such a volume as the Arithmetic of Electricity will always have a place. We hope that it will be favorably received by our readers and that their indulgence will give it a more extended field of usefulness than it can pretend to deserve.

PREFACE TO TWENTY-FIRST EDITION.

The steady progress of electrical science in conjunction with a continued demand for this work have made advisable a revision and extension of this book.

The author feels that in the matter which has been added much more could have been said on the subjects treated of, but, since a full exposition of each theme would alone fill a volume, it is hoped that the practical value of the rules, etc., will atone for the brevity of the text.

In the preparation of this edition the author would express his indebtedness to A. A. Atkinson's excellent work on Electrical and Magnetic Calculations and also to the instruction papers of the Electrical Engineering Course of the International Correspondence School of Scranton, Pa. He would also express his thanks to Henry V. A. Parsell, for his valued advice and assistance in the preparation of the manuscript.

THE AUTHOR.

CONTENTS.

CHAPTER I.

INTRODUCTORY.

Space, Time, Force, Resistance, Work, Energy, Mass and Weight.—The Fundamental Units of Dimension, and Derived Units, Geometrical, Mechanical, and Electrical.—C. G. S. and Practical Electrical Units.—Nomenclature.—Examples from Actual Practice..... 9

CHAPTER II.

OHM'S LAW.

General Statement.—Six Rules Derived by Transposition from the Law.—Single Conductor Closed Circuits.—Batteries in Opposition.—Portions of Circuits.—Divided Circuits, with Calculation of Currents Passed by Each Branch, and of their Combined Resistance..... 13

CHAPTER III.

RESISTANCE AND CONDUCTANCE.

Resistance of Different Conductors of the same Material.—Relations of Wires of Equal Resistance.—Ratio of Resistance of Two Conductors.—Specific Resistance.—Universal Rule for Resistances.—Resistance of Wires Referred to Weight.—Conductance.—Ohm's Law expressed in Conductance..... 26

CONTENTS.

CHAPTER IV.

POTENTIAL DIFFERENCE.

Drop of Potential in Leads, and Size of Same for Multiple Arc Connections.—Diminishing Size of Leads Progressively.....	38
---	----

CHAPTER V.

CIRCULAR MILS.

The Mil.—The Circular Mil as a Unit of Area.—Circular Mil Rules for Resistance and Size of Leads.....	43
---	----

CHAPTER VI.

SPECIAL SYSTEMS.

Three Wire System.—Rules for Calculating Leads in Same.—Alternating Current System.—Ratio of Conversion.—Size of Primary Wire.—Converter Winding.....	46
---	----

CHAPTER VII.

WORK AND ENERGY.

Energy and Heating Effect of the Current.—Different Rules Based on Joule's Law.—The Joule or Gram-Calorie.—Quantity of Heat Developed in an Active Circuit in a Unit of Time.—Watts and Amperes in Relation to Time.—Specific Heat.—Heating of Wire by a Current.—Safety Fuses.—Work of a Current.—Electrical Horse-Power.—Duty and Efficiency of Electrical Generators.....	50
--	----

CONTENTS.

vii

CHAPTER VIII.

BATTERIES.

Arrangement of Battery Cells.—General Calculations of Current.—Rules for Arrangement of Cells in a Battery.—Battery Calculations for Specified Electromotive Force and Current.—Efficiency of Batteries.—Chemistry of Batteries.—Calculation of Voltage.—Work of Batteries.—Efficiency of Batteries, to Calculate.—Chemicals Consumed in a Battery.—Decomposition of Compounds by a Battery.—Electroplating 66

CHAPTER IX.

ELECTRO-MAGNETS, DYNAMOS AND MOTORS.

The Magnetic Field and Lines of Force.—Permeance and Reluctance.—Magnetizing Force and the Magnetic Circuit.—General Rules for Electro-Magnets and Ampere-Turns for Given Magnetic Flux.—Magnetic Circuit Calculations.—Leakage of Lines of Force.—Example of Calculation of a Magnetic Circuit.—Dynamo Armatures.—Voltage and Capacity of Armatures.—Drum Type Closed Circuit Armatures.—Field Magnets of Dynamos.—The Kapp Line 82

CHAPTER X.

ELECTRIC RAILWAYS.

Sizes of Feeders.—Power to Move Cars..... 109

CHAPTER XI.

ALTERNATING CURRENTS.

Self-Induction	115
----------------------	-----

CHAPTER XII.

CONDENSERS.

Page	121
------------	-----

CHAPTER XIII.

DEMONSTRATION OF RULES.

Some of the Principal Rules in the Work Demonstrated	127
--	-----

CHAPTER XIV.

NOTATION IN POWERS OF TEN.

The Four Fundamental Operations of Addition, Subtraction, Multiplication, and Division in Powers of Ten	136
---	-----

TABLES.

A Collection of Tables Needed for the Operations and Problems Given in the Work	139
---	-----

ARITHMETIC OF ELECTRICITY.

CHAPTER I.

INTRODUCTORY.

SPACE is the lineal distance from one point to another.

Time is the measure of duration.

Force is any cause of change of motion of matter. It is expressed practically by grams, volts, pounds or other unit.

Resistance is a counter-force or whatever opposes the action of a force.

Work is force exercised in traversing a space against a resistance or counter-force. Force multiplied by space denotes work as foot-pounds.

Energy is the capacity for doing work and is measurable by the work units.

Mass is quantity of matter.

Weight is the force apparent when gravity acts upon mass. When the latter is prevented from moving under the stress of gravity its weight can be appreciated.

Physical and Mechanical calculation, are based on three fundamental units of dimension, as follows: the unit of time—the second, T; the unit of length—the centimeter, L; the unit of mass—the gram, M. Concerning the latter it is to be distinguished from weight. The gram is equal to one cubic centimeter of water under standard conditions and is invariable; the weight of a gram varies slightly with the latitude and with other conditions.

Upon these three fundamental units are based the derived units, geometrical, mechanical and electrical. The derived units are named from the initials of their units of dimension, the C. G. S. units, indicating centimeter-gram-second units.

In practical electric calculations we deal with certain quantities selected as of convenient size and as bearing an easily defined relation to the fundamental units. They are called practical units.

The cause of a manifestation of energy is force; if of electromotive energy, that is to say of electric energy in the current form, it is called electromotive force, E. M. F. or simply E. or difference of potential D. P. What this condition of excitation may be is a profound mystery, like gravitation and much else in the physical world. The practical unit of E. M. F. is the VOLT, equal to one hundred millions (100,000,000) C. G. S. units of E. M. F. The last numeral is expressed more briefly as the eighth

power of 10 or 10^8 . Thus the volt is defined as equal to 10^8 C. G. S. units of E. M. F.

This notation in powers of 10 is used throughout C. G. S. calculations. Division by a power of 10 is expressed by using a negative exponent, thus 10^{-8} means $\frac{1}{100000000}$. *The exponent indicates the number of cyphers to be placed after 1.*

When electromotive force does work a current is produced. The practical unit of current is the AMPERE, equal to $\frac{1}{10}$ C. G. S. unit, or 10^{-1} C. G. S. unit, $\frac{1}{10}$ being expressed by 10^{-1} .

A current of one ampere passing for one second gives a quantity of electricity. It is called the COULOMB and is equal to 10^{-1} C. G. S. units.

A coulomb of electricity if stored in a recipient tends to escape with a definite E. M. F. If the recipient is of such character that this definite E. M. F. is one volt, it has a capacity of one FARAD equal to $\frac{1}{100000000}$ or 10^{-9} C. G. S. unit.

A current of electricity passes through some substances more easily than through others. The relative ease of passage is termed conductance. In calculations its reciprocal, which is resistance, is almost universally used. A current of one ampere is maintained by one volt through a resistance of one practical unit. This unit is called the OHM and is equal to 10^9 C. G. S. units.

Sometimes, where larger units are wanted, the prefix *deka*, ten times, *heka*, one hundred times, *kilo*, one

thousand times, or *mega*, one million times are used, as *dekalitre*, ten liters, *kilowatt*, one thousand watts, *megohm*, one million ohms.

Sometimes, where smaller units are wanted, the prefixes, *deci*, one tenth, *centi*, one hundredth, *milli*, one thousandth, *micro*, one millionth, are used. A microfarad is one millionth of a farad.

For the concrete conception of the principal units the following data are submitted.

A Daniell's battery maintains an E. M. F. of 1.07 *volt*. A current which in each second deposits .00033 grams copper (by electro-plating) is of one *ampere* intensity and from what has been said the copper deposited by that current in one second corresponds to one *coulomb*. A column of mercury one millimeter square and 106.24 centimeters long has a resistance of one *ohm* at 0° C. The capacity of the earth is ~~100000~~ *farad*. A Leyden jar with a total coated surface of one square meter and glass one mm. thick has a capacity of $\frac{1}{10}$ *microfarad*. The last is the more generally used unit of capacity.

These practical units are derived from the C. G. S. units by substituting for the centimeter (C.) one thousand million (10^9) centimeters and for the gram, the one hundred thousand millionth (10^{-11}) part of a gram.

CHAPTER II.

OHM'S LAW.

THIS law expresses the relation in an active electric circuit (circuit through which a current of electricity is forced) of current, electromotive force, and resistance. These three factors are always present in such a circuit. Its general statement is as follows :

In an active electric circuit the current is equal to the electromotive force divided by the resistance.

This law can be expressed in various ways as it is transposed. It may be given as a group of rules, to be referred to under the general title of OHM'S LAW.

Rule 1. The current is equal to the electromotive force divided by the resistance.

$$C = \frac{E}{R}$$

Rule 2. The electromotive force is equal to the current multiplied by the resistance.

$$E = C R$$

Rule 3. The resistance is equal to the electromotive force divided by the current.

$$R = \frac{E}{C}$$

Rule 4. The current varies directly with the electromotive force and inversely with the resistance.

Rule 5. The resistance varies directly with the electromotive force and inversely with the current.

Rule 6. The electromotive force varies directly with the current and with the resistance.

This law is the fundamental principle in most electric calculations. If thoroughly understood it will apply in some shape to almost all engineering problems. The forms 1, 2, and 3 are applicable to integral or single conductor circuits; when two or more circuits are to be compared the 4th, 5th and 6th are useful. The law will be illustrated by examples.

SINGLE CONDUCTOR CLOSED CIRCUITS.

These are circuits embracing a continuous conducting path with a source of electromotive force included in it and hence with a current continually circulating through them.

EXAMPLES.

A battery of resistance 3 ohms and E. M. F. 1.07 volts sends a current through a line of wire of 55 ohms resistance; what is the current?

Solution: The resistance is $3 + 55 = 58$ ohms. By rule 1 we have for the current $\frac{1.07}{58}$ giving .01845 Ampere.

Note.—A point to be noticed here is that whatever is included in a circuit forms a portion of it and its resistance must be included therein. Hence the resistance of the battery has to be taken into account. The resistance of a battery or generator is sometimes called internal resistance

to distinguish it from the resistance of the outer circuit, called external resistance. Resistance in general is denoted by R , electromotive force by E , and current by C .

A battery of R 2 ohms; sends a current of .035 ampere through a wire of R 48 ohms; what is the E. M. F. of the battery?

Solution: The resistance is $48 + 2 = 50$ ohms. By Rule 2 we have as the E. M. F. $50 \times .035 = 1.75$ volts.

A maximum difference of potential E. M. F. of 30 volts is maintained in a circuit and a current of 191 amperes is the result; what is the resistance of the circuit?

Solution: By Rule 3 the resistance is equal to $\frac{30}{191} = .157$ ohms.

In the same circuit several generators or galvanic couples may be included, some opposing the others, i. e. connected in opposition. All such can be conceived of as arranged in two sets, distributed according to the direction of current produced by the constituent elements, in other words, so as to put together all the generators of like polarity. The voltages of each set are to be added together to get the total E. M. F. of each set.


Rule 7. Where batteries or generators are in opposition, add together the E. M. F. of all generators of like polarity, thus obtaining two opposed E. M. F.s. Subtract the smaller E. M. F. from the larger E. M. F. to

obtain the effective E. M. F. Then apply Ohm's law on this basis of E. M. F.

It will be understood that the resistances of all batteries or generators in series are added to give the internal resistance.

EXAMPLES.

There are four batteries in a circuit: Battery No. 1 of 2 volts, $\frac{1}{2}$ ohm; Battery No. 2 of 1.75 volts, 2 ohms; Battery No. 3 of 1 volt, 1 ohm; Battery No. 4 of 1 volt, 4 ohms constants; Batteries 1 and 4 are in opposition to 2 and 3. What are the effective battery constants?

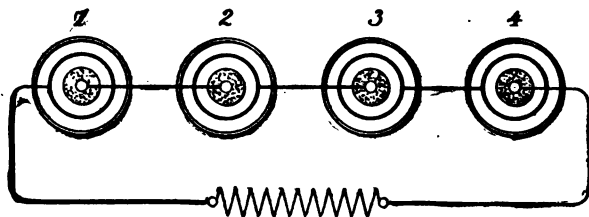

Solution: Voltage = $(2 + 1) - (1.75 + 1) = .25$ volt.
Resistance = $\frac{1}{2} + 2 + 1 + 4 = 7\frac{1}{2}$ ohms, or .25 volt, $7\frac{1}{2}$ ohms constants.

What current will such a combination produce in a circuit of 5 ohms resistance?

Solution: By Ohm's law, Rule 1, the current = $.25 \div (7\frac{1}{2} + 5) = .02$ amperes.

A battery of 51 volts E. M. F. and 20 ohms resist-

ance has opposed to it in the same circuit a battery of 26 volts E. M. F. and 25 ohms resistance. A current of $\frac{1}{8}$ ampere is maintained in the circuit. What is the resistance of the wire leads and connections?

Solution: The effective E. M. F. is $51 - 26 = 25$ volts. By Rule 3 we have $25 \div \frac{1}{8} = 200$ ohms, as the total resistance. But the resistance of the batteries (internal resistance) is $20 + 25 = 45$ ohms. The resistance of leads, etc. (external resistance), is therefore $200 - 45 = 155$ ohms.

PORTIONS OF CIRCUITS.

All portions of a circuit receive the same current, but the E. M. F., in this case termed preferably difference of potential, or drop or fall of potential, and the resistance may vary to any extent in different sections or fractions of the circuit. Ohm's Law applies to these cases also.

EXAMPLES.

An electric generator of unknown resistance maintains a difference of potential of 10 volts between its terminals connected as described. The terminals are connected to and the circuit is closed through a series of three coils, one of 100 ohms, one of 50 ohms, and one of 25 ohms resistance. The connections between these parts are of negligibly low re-

sistance. What difference of potential exists between the two terminals of each coil respectively?

Solution: The solution is most clearly reached by a statement of the proportion expressed in Rule 6, viz.: The electromotive force varies directly with the resistance. The resistance of the three coils is 175 ohms; calling them 1, 2, and 3, and their differences of potential E^1 , E^2 , and E^3 , we have the continued proportion, $175 : 100 : 50 : 25 :: 10 \text{ volts} : E^1 : E^2 : E^3$. because by the conditions of the problem the total E. M. F. = 10. Solving the proportion by the regular rule, we find that $E^1 = 5.7$, $E^2 = 2.8$ and $E^3 = 1.4$ volts.

The same external circuit is connected to a battery of 30 ohms resistance. The difference of potential of the 100 ohm coil is found to be 30 volts. What is the difference of potential between the terminals of the battery, and what is the E. M. F. of the battery on open circuit, known as its voltage or E. M. F. (one of the battery constants)?

Solution: The total external resistance is $100 + 50 + 25 = 175$ ohms. By Rule 6, we have $100 : 175 :: 30 \text{ volts} : x = 52\frac{1}{2}$ volts, difference of potential between the terminals of the battery. The current is found by dividing (Rule 1), the difference of potential of the 100 ohm coil by its resistance. This E. M. F. is 30. The current therefore is $\frac{30}{100}$ amperes. The total resistance of the circuit is that of the three coils or 175 ohms *plus* that of the battery or 30 ohms, a

total of 205 ohms. To maintain a current of $\frac{10}{11}$ amperes through 205 ohms (Rule 2), an E. M. F. is required equal to $\frac{10}{11} \times 205$ volts or $61\frac{1}{2}$ volts.

DIVIDED, BRANCHED OR SHUNT CIRCUITS.

A single conductor, from one terminal of a generator may be divided into one or more branches which may reunite before reaching the other terminal. Such branches may vary widely in resistance.

Rule 8. In divided circuits, each branch passes a portion of a current inversely proportional to its resistance.

EXAMPLES.

A portion of a circuit consists of two conductors, A and B, in parallel of $A = 50$, and $B = 75$ ohms, respectively; what will be the ratio of the currents passing through the circuit, which will go through each conductor?

Solution: The ratio will be current through A : current through B :: 75 : 50, which may be expressed fractionally, $\frac{3}{4} : \frac{2}{5}$.

Where more than two resistances are in parallel, the fractional method is most easily applied.

Three conductors of $A = 25$, $B = 50$, and $C = 75$ ohms are in parallel. What will be the ratio of currents passing through each one?

Solution: Fractionally $A : B : C :: \frac{1}{25} : \frac{1}{50} : \frac{1}{75}$.

Rule 2. To determine the amount of a given current that will pass through parallel circuits of different resistances, proceed as follows: Take the resistance of each branch for a denominator of a fraction having 1 for its numerator. In other words, for each branch write down the reciprocal of its resistance. Then reduce the fractions to a common denominator, and add together the numerators. Taking this sum of the numerators for a new common denominator, and the original single numerators as numerators, the new fractions will express the proportional currents as fractions of one. If the total amperage is given, it is to be multiplied by the fractions to give the amperes passed by each branch. The solution can also be done in decimals.

EXAMPLES.

A lead of wire divides into three branches; No. 1 has a resistance of 10,000 ohms, No. 2 of 39 ohms, and No. 3 of $\frac{1}{2}$ ohm. They unite at one point. What proportion of a unitary current will pass each branch?

Solution: The proportion of currents passed are as $\frac{1}{10000} : \frac{1}{39} : \frac{1}{\frac{1}{2}}$ or 3. Reducing to a common denominator, these become $\frac{1}{10000} : \frac{10000}{39} : 1170000$. The proportions of the numerators is the one sought for; taking the sum of the numerators as a common denominator, we have in common fractions the following proportions of any current passed by the three branches. No. 1, $\frac{1}{1170000}$; No. 2, $\frac{10000}{1170000}$; No. 3, $\frac{1170000}{1170000}$.

Four parallel members of a circuit have resistances respectively of 25, 85, 90, and 175 ohms; express

decimally the ratio of a unitary current that will pass through them.

Solution: The ratio is as $\frac{1}{15} : \frac{1}{15} : \frac{1}{15} : \frac{1}{15}$, or reducing to decimals (best by logarithms), $.04 : .011765 : .011111 : .0057$. Adding these together, we have $.068576$, which must be multiplied by 14.582 to produce unity. Multiplying each decimal by 14.58 (best by logarithms), we get the unitary ratio as $.5832 : .17153 : .1620 : .08310$, whose sum is 1.0000 .

Unless logarithms are used, it is far better to work by vulgar fractions.

A current of $.71$ amperes passes through two branches of a circuit. One is a lamp with its connections of 115 ohms resistance; another is a resistance coil of 275 ohms resistance. What current passes through each branch?

Solution: The proportions of the current are as $\frac{1}{15} : \frac{1}{15}$ or reduced to a common denominator and to their lowest terms $\frac{1}{15} : \frac{1}{15}$. Proceeding as before, and taking the sum of the numerators ($55 + 23 = 78$), as a common denominator, we find that the lamp passes $\frac{4}{78}$, and the resistance coil $\frac{23}{78}$ of the whole current. Multiplying the whole current, $.71$ by $\frac{4}{78}$, we get $\frac{284}{78}$ amperes, or $\frac{1}{3}$ ampere for the lamp, leaving $.21$ or a little over $\frac{1}{5}$ ampere for the resistance coil.

Another problem in connection with parallel branches of a circuit is the combined resistance of parallel circuits. This is not a case of summa-

tion, for it is evident that the more parallel paths there are provided for the current, the less will be the resistance.

Rule 10. In shunt circuits, the resistance of the combined shunts is expressed by the reciprocal of the sum of the reciprocals of the resistances.

EXAMPLE.

Two leads of a 50 volt circuit (leads differing in potential by 50 volts), are connected by a 20 ohm motor. A 50 ohm lamp and 100Q ohm resistance coil are connected in parallel or shunt circuit therewith, what is the combined resistance? and the total current?

Solution: The reciprocal of resistance is conductance, sometimes expressed as mhos. (Rule 19.) The conductance of the three shunts is equal to $\frac{1}{20} + \frac{1}{50} + \frac{1}{100}$ mhos = $\frac{5}{100} + \frac{2}{100} + \frac{1}{100} = \frac{8}{100}$ mhos. The reciprocal of conductance is resistance. The combined resistance is therefore $\frac{100}{8}$ ohms = 14.09 ohms. The current is $\frac{50}{14.09}$ or 3.5 amperes.

Rule 11. The combined resistance of two parallel circuits is found by multiplying the resistances together, and dividing the product by the sum of the resistances. Where there are several circuits, any two can be treated thus, and the result combined in the same way with another circuit, and so on to get the final resistance.

$$R = \frac{r \times r^1}{r + r^1}$$

EXAMPLE.

Four conductors in parallel have resistances of 100 — 50 — 27 — 19 ohms. What is their combined resistance?

Solution: Combining the first and second, we have $\frac{100 \times 50}{100 + 50} = 33\frac{1}{3}$ ohms. Combining this with the resistance of the third wire, we have $\frac{33\frac{1}{3} \times 27}{33\frac{1}{3} + 27} = 14.9$ ohms. Combining this with the resistance of the fourth wire, we have $\frac{14.9 \times 19}{14.9 + 19} = 8.3$ ohms. The result is, of course, identical by whatever rule obtained.

Rule 12. When all the parallel circuits are of uniform resistance, as in multiple arc incandescent lighting, the resistance of the combined circuits is found by dividing the resistance of one circuit by the number of circuits.


$$R = \frac{r}{n}$$

EXAMPLES.

There are fifty lamps of 100 ohms resistance each in multiple arc connection. What is their combined resistance?

Solution: $\frac{100}{50} = 2$ ohms.

A motor can take 3 amperes of currents at 30 volts safely without burning out or heating injuriously. A 110 volt incandescent circuit is at hand. The motor is to be connected across the leads so as to receive the above amperage. A shunt or branch of some resistance is carried around it, and a resistance coil intervenes between the united branches and one of the main leads. The resistance of the coil is 20 ohms. What should the resistance of the shunt be?

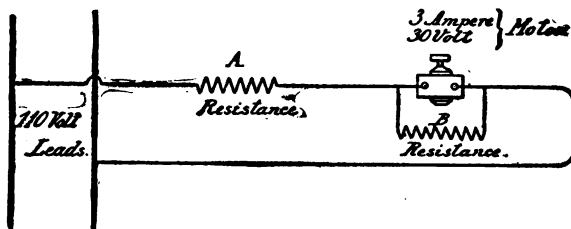

Solution: The resistance of the motor (Ohm's Law, Rule 3), is found by dividing the E. M. F. by the resistance— $30 \div 3 = 10$ ohms. By Rule 5 the resistance of the coil in series (20 ohms) must be to the combined (not added) resistance of the motor and shunt coil, as $110 - 30$ (total voltage minus voltage for motor) : 30 (voltage for motor) or $20 : x :: 80 : 30 \therefore x = 7.5$ combined resistance of parallel or shunt coil and motor. The reciprocal of 7.5 (conductance, Rule 19), may be expressed as $\frac{4}{75}$ ths of the combined (in this case added) conductances of shunt coil and motor. The conductance of the motor is equal to the reciprocal of 10 which may be expressed as $\frac{1}{10}$ or as $\frac{75}{750}$. The conductance of the shunt coil must therefore be $\frac{4}{75} - \frac{75}{750} = \frac{75}{750} = \frac{1}{10}$ mho. The reciprocal of this gives the resistance of the shunt coil which is 30 ohms. The total current going through the system by Ohm's law is $\frac{110}{75 + 20} = 4$ amperes. The resistance of the shunt coil—30 ohms—is to that of the motor in parallel with it—10 ohms—as the current received by the motor is to

that received by the coil, a ratio of 30 : 10 or 3 : 1 giving 3 amperes for the motor and 1 ampere for the coil. This is a proof of the correctness of operations.

Two conductors through which a current is passing are in parallel circuit with each other. One has a resistance of 600 ohms. The other has a resistance of 3 ohms. A wire is carried across from an intermediate point of one to a corresponding point of the other. It is attached at such a point of the first wire that there are 400 ohms resistance before it and 200 after it. Where must it be connected to the other in order that no current may pass?

Solution: The E. M. F. up to the point of connection of the bridge or cross wire is to the total E. M. F. in the 600 ohm wire as 400: 600 or as 2: 3. The other wire which by the conditions has the same drop of potential in its full length must be divided therefore in this ratio. The bridge wire must therefore connect at 2 ohms from its beginning, leaving 1 ohm to follow. The principle here illustrated can be proved generally and is the Wheatstone Bridge principle.

CHAPTER III.

RESISTANCE AND CONDUCTANCE.

RESISTANCE OF DIFFERENT CONDUCTORS OF THE SAME MATERIAL.

Conductors are generally circular in section. Hence they vary in section with the square of their diameters. The rule for the resistance of conductors is as follows:

Rule 13. The resistance of conductors of identical material varies inversely as their section, or if of circular section inversely as the squares of their diameters, and directly as their lengths.

EXAMPLE.

1. A wire *a*, is 30 mils in diameter and 320 feet long; another *b*, is 28 mils in diameter and 315 feet long. What are their relative resistances?

Solution: Calling the resistances $R^a : R^b$ we would have the inverse proportion if they were of equal lengths $R^b : R^a :: 30^2 : 28^2$ or as 900 : 784. Were they of equal diameter the direct proportion would hold for their lengths: $R^b : R^a :: 315 : 320$. Combining the two by multiplication we have the compound proportion $R^b : R^a :: 900 \times 315 : 784 \times 320$ or as 283,500 : 250,880, or as 28 : 25 nearly. The

combined proportions could have been originally expressed as a compound proportion thus: $R^b : R^a :: 30^2 \times 315 : 28^2 \times 320$.

For wires of equal resistance the following is given.

Rule 14. The length of one wire multiplied by the square of the diameter of the other wire must equal the square of its own diameter multiplied by the length of the other if their resistances are equal. Or multiply the length of the first wire by the square of the diameter of the second. This divided by the length of the second will give the square of the diameter of the first wire; or divided by the square of the diameter of the first will give the length of the second.

$$ld^2 = l'd'^2$$

EXAMPLES.

1. There are three wires, a is 2 mils, b is 3 mils, and c is 4 mils in diameter; what length must b and c have to be equal in resistance to ten feet of a ?

Solution: Take a and c first and apply the rule, $10 \times 4^2 + 2^2 = 40$ feet; then take a and b $10 \times 3^2 + 2^2 = 22\frac{1}{2}$ feet. To prove it compare a and c directly by the same rule $22\frac{1}{2} \times 4^2 + 3^2 = 40$. As this gives the same result as the first operation, we may regard it as proved.

A conductor is 75 mils in diameter and 79 feet long; how thick must a wire 1264 feet long be to equal it in resistance?

Solution: $75^2 \times 1264 \div 79 = 7,110,000 \div 79 = 90,000$. The square root of this amount is 300 which is the required diameter.

For problems involving the comparison of wires of unequal resistance the rule may be thus stated:

Rule 15. Multiply the square of the diameter of each wire by the length of the other. Of the two products divide the one by the other to get the ratio of resistance of the dividend to that of the divisor taken at unity. The term including the length of a given wire is the one expressing the relative resistance of such wire.

EXAMPLES.

A wire is 40 mils in diameter, 3 miles long and 40 ohms resistance. A second wire is 50 mils in diameter and 9 miles long. What is its resistance?

Solution: $9 \times 40^2 = 14,400$ relative resistance of the first wire. $3 \times 50^2 = 7,500$ relative resistance of second wire. $14,400 \div 7,500 = 1.92$ — ratio of resistance of second wire to that of first taken at unity. But the latter resistance really is 40 ohms. Therefore the resistance of the second wire is $40 \times 1.92 = 76.80$ ohms.

The result may also be worked out thus:

$40^2 \times 9 = 14,400 =$ relative resistance of the 3 mile wire.

$50^2 \times 3 = 7500 =$ relative resistance of the 9 mile wire.

$14,400 \div 7500 = 1.92 =$ ratio of 9 mile (dividend) to 3 mile (divisor) wire.

$\therefore 40 \text{ ohms} \times 1.92 = 76.8 \text{ ohms.}$

A length of a thousand feet of wire 95 mils in diameter has 1.15 ohms resistance; what is the di-

iameter of a wire of the same material of which the resistance of 1000 feet is 10.09 ohms? (R. E. Day, M. A.).

Solution: $10.09 \div 1.15 = 8.77$ ratio of resistances. If we divide 1000 by 8.77 we obtain a length of the first wire which reduces the question to one of identical resistances. $1000 \div 877 = 114$ feet. Then applying Rule 14, $114 \times 95^2 \div 1000 = 1037.88$. This is the square of the diameter of the other wire. Its square root gives the answer: 32.2 mils.

SPECIFIC RESISTANCE.

Specific resistance is the resistance of a cube of one centimeter diameter of the substance in question between opposite sides. It is expressed in ohms for solutions and in microhms for metals. From it may be determined the resistance of all volumes, generally prisms or cylinders, of substance. Very full tables of Specific Resistance are given in their place.

Rule 16. The resistance of any prism or cylinder of a substance is equal to its specific resistance multiplied by its length in centimeters and divided by its cross-sectional area in square centimeters. If the dimensions are given in inches or other units of measurements they must be reduced to centimeters by the table.

$$R = \frac{\text{Sp. R} \times l}{a}$$

EXAMPLES.

An electro-plater has a bath of sulphate of copper, sp. resistance 40 ohms. His electrodes are each 1

foot square and 1 foot apart. What is the resistance of such a bath?

Solution: By the table 1 square foot = 929 sq. cent. and 1 foot = 30.4797 cent. \therefore Resistance = $40 \times 30.4797 \div 929 = 1.31$ ohms.

Where the electrodes in a solution are of uneven size take their average size per area. The facing areas are usually the only ones calculated, as owing to polarization the rear faces are of slight efficiency, and where the electrodes are nearly as wide as the bath or cell the active prism is practically of cross-sectional area equal to the area of one side of a plate.

In a Bunsen battery the specific resistances of the solutions in inner and outer cells were made alike, each equalling 9 ohms. The central element was a $\frac{1}{2}$ inch cylinder of electric light carbon. The outer element was a plate of zinc 6 inches long bent into a circle. When there were 2 inches of solution in the cell what was the resistance?

Solution: Area of carbon = $\frac{\pi}{4} \times 2 = 3.14$ square inches. Area of zinc = $2 \times 6 = 12$ square inches. This gives an average facing area of $(12 + 3.14) \div 2 = 7.57$ square inches = 48.38 sq. cent. The distance apart = $\frac{3}{4}$ inches (nearly) = 1.9049 cent. \therefore Resistance = $9 \times 1.9049 \div 48.38 = .354$ ohms.

For wires, the specific resistance of metals being given in microhms, the calculation may be made in microhms, or in ohms directly. As wire is cylindri-

cal a special calculation may be made in its case to reduce area of cross section to diameter. This may readily be taken from the table of wire factors, thus avoiding all calculation.

Rule 17. The resistance in microhms of a wire of given diameter in centimeters is equal to the product of the specific resistance by 1.2737 by the length in centimeters divided by the square of the diameter in centimeters.

$$r = \frac{\text{Sp. Res.} \times 1.2737 \times l}{d^2}$$

EXAMPLES.

The Sp. Res. of copper being taken at 1.652 microhms what is the resistance of a meter and a half of copper wire 1 millimeter thick?

Solution: The diameter of the wire (1 millimeter) is .1 centimeter. The square of .1 is .01. The length of the wire (1½ meter) is 150 centimeters. Its resistance therefore is $1.652 \times 1.2737 \times 150 \div .01 = 31,561$ microhms or .031,561 ohms.

UNIVERSAL RULE FOR RESISTANCES.

Into the problem of resistances of one or two wires eight factors can enter, these are the lengths, sectional areas, specific resistances and absolute resistances of two wires. Their relation may be expressed by an algebraic equation, which by transposition may be made to fit any case. The rule is arithmetically expressed by adopting the method of cancellation, drawing a vertical line and placing on

the left side, factors to be multiplied together for a divisor, and on the right side factors to be multiplied together for a dividend. In the expression of the rule as below the quotient is 1, in other words the product of all the factors on the left hand of the line is equal to that of all the factors on the right hand. Calling one wire *a* and the other *b* we have the following expression:

Resistance of <i>b</i>	Resistance of <i>a</i>
Specific Resistance of <i>a</i>	Specific Resistance of <i>b</i>
Length of <i>a</i>	Length of <i>b</i>
Cross-sectional area of <i>b</i>	Cross-sectional area of <i>a</i>

Rule 18. Substitute in the above expression the values of any factors given. Substitute for factors not given or required the figure 1 or unity. Such a value determined by division must be given to the required factor and substituted in its place as will make the product of the left-hand factors equal to that of the right-hand factors. Only one factor can be determined, and all factors not given are assumed to be respectively equal for both conductors.

EXAMPLES.

If the resistance of 500 feet of a certain wire is .09 ohms what is the resistance of 1050 feet of the same wire?

Solution: The cross sectional areas and specific resistance not being given are taken as equal. (This of course follows from the identical wire being referred to.) The vertical line is drawn and the values substituted :

<i>Resistances :</i>	Resistance of required wire	.09
<i>Lengths :</i>	500	1050

(Other factors omitted as unnecessary.)

$$1050 \times .09 \div 500 = .189 \text{ ohms.}$$

What is the diameter of a wire 2 miles long of 23 ohms resistance, if a mile of wire of similar material of seventy mils diameter has a resistance of 10.82 ohms?

Solution. We use for simplicity the square of the diameter in place of the cross sectional area of the known wire, thus:

<i>Resistances :</i>	23	10.82
<i>Lengths :</i>	1	2
<i>Areas :</i>	Unknown	70 ²

As the specific resistances are identical they are not given.

$2 \times 70^2 \times 10.82 \div 23 \times 1 = 4610$ square of diameter required: $4610^{\frac{1}{2}} = 68$ mils.

What must be the length of an iron wire of cross-sectional area 4 square millimeters to have the same resistance as a wire of pure copper 1000 yards long, of cross-sectional area 1 square millimeter, taking the conductance of iron as $\frac{1}{3}$ that of copper? (Day).

Solution:

<i>Specific Resistances :</i>	1	7 (i.e. the reciprocal of conductance)
<i>Lengths :</i>	1000	Unknown
<i>Cross-sectional areas :</i>	4	1

As the resistances are identical they are not given.

Solving we have $1000 \times 4 \div 7 = 571\frac{1}{7}$ yards.

There are two conductors, one of 35 ohms resistance, 1728 feet long and 12 square millimetres cross-sectional area and specific resistance 7: the other of 14 ohms resistance, 432 feet long and 8 square millimetres cross-sectional area. What is its specific resistance?

<i>Resistances :</i>	35	14
<i>Specific Resistances</i>		
	Unknown	7
<i>Lengths :</i>	432	1728
<i>Cross-Sectional areas :</i>	12	8

By cancellation this reduces to $14 \times 8 \div 5 \times 3 = 7.4$ Specific Resistance.

In these cases it is well to call one wire *a* and the other *b*, and to arrange the given factors in two columns headed by these designations. Then the formula can be applied with less chance of error. Thus for the last two problems the columns should be thus arranged.

<i>a</i>	<i>b</i>	<i>a</i>	<i>b</i>
Area, 4 sq. mils.	1	Resist. 85 ohms	14 ohms
L. Unknown	1,000 yards	L. 1,728 feet	432 feet
Sp. Res. 7	1	Area, 12 sq. mils.	8 sq. mils.
		Sp. Res 7	required

From such statements of known data the formula can be conveniently filled up.

RESISTANCE OF WIRES REFERRED TO WEIGHT.

The weight of equal lengths of wire is in proportion to their sections. The problems involving weight therefore can be reduced to the Rules already given.

Problem. A wire, A, is 334 feet long and weighs 25 oz.; another, B, is 20 feet long and weighs 1 oz. what are the relative resistances?

Solution: 20 feet of the wire "A" weigh $\frac{20}{334} \times 25 = 1.50$ oz. The weights of equal lengths of A and B respectively are as 1.50 : 1.00 which is also the inverse ratio of the resistances of equal lengths. By compound proportion Rule we have R. of "A" : R. of "B" :: $1 \times 334 :: 1.50 \times 20$; reducing to 16.7 : 1.5 or 11.1 : 1.0 or the wire "A" has about eleven times the resistance of the wire "B."

Solution: By general Rule for resistance (Rule 18). Taking 1.50 : 1.00 as the ratio of cross-sectional areas and taking the resistance of the long wire A as 1 we have:

<i>Resistances :</i>	1	Unknown
<i>Lengths :</i>	20	334
<i>Cross-sectional area :</i>	1.50	1

Resistance of B = $1.50 \times 20 \div 334 = .0899$ or about $\frac{1}{11}$ as before.

CONDUCTANCE.

Conductance is the reciprocal of resistance and is sometimes expressed in units called MHOS, which is derived from the word ohm written backwards.

Rule 19. To reduce resistance in ohms to conductance in mhos express its reciprocal and the reverse.

$$K = \frac{1}{R}$$

EXAMPLES.

A wire has a resistance of $1\frac{1}{2}$ ohms, what is its conductance?

Solution: $126 \div 18 = 7$ mhos.

Reduce a conductance of $1\frac{1}{2}$ to ohms.

Solution: $1\frac{1}{2} = \frac{3}{2}$ mhos which gives $\frac{2}{3}$ ohms.

It is evident that the data for problems or that constants could be given in mhos instead of ohms. In some ways it is to be regretted that the positive quality of conductance was not adopted at the outset instead of the negative quality of resistance. One or two illustrations may be given in the form of examples involving conductance.

Express Ohm's law in its three first forms in conductance.

Solution: This is done by replacing the factor "resistance" by its reciprocal. Thus, Rule 1 reads for conductance: "The current is equal to the electromotive force multiplied by the conductance" ($C = EK$)—Rule 2 as "The electromotive force is equal to the current divided by the conductance"

($E = \frac{C}{K}$)—Rule 3 as "The conductance is equal to the current divided by the electromotive force." ($K = \frac{C}{E}$)

A circuit has a resistance of .5 ohm and an E. M. F. of 50 volts; determine the current, using conductance method.

Solution: The conductance $= \frac{1}{.5} = 2$ mhos. The current $= 50 \times 2 = 100$ amperes.

In a circuit a current of 20 amperes is maintained through $2\frac{1}{2}$ ohms. Determine the E. M. F. using conductance.

Solution: The conductance $= \frac{1}{2\frac{1}{2}} = \frac{2}{5}$ mhos. E. M. F. $= 20 \div \frac{2}{5} = 50$ volts.

Assume a current of 30 amperes and an E. M. F. of 50 volts, what is the conductance and resistance?

Solution: Conductance $= 30 \div 50 = .6$ mho. Resistance $= 1 \div .6 = 1.667$.

CHAPTER IV.

POTENTIAL DIFFERENCE.

DROP OF POTENTIAL IN LEADS AND SIZE OF SAME FOR MULTIPLE ARC CONNECTIONS.

SUBSIDIARY leads are leads taken from large sized mains of constant E. M. F. or from terminals of constant E. M. F. to supply one or more lamps, motors, or other appliances. A constant voltage is maintained in the mains or terminals. There is a drop of potential in the leads so that the appliances always have to work at a diminished E. M. F. The E. M. F. of the leads is known, the requisite E. M. F. and resistance of the appliance is known, a rule is required to calculate the size of the wire to secure the proper results. It is based on the principle that the drop or fall in potential in portions of integral circuits varies with the resistance. (See Ohm's law). A rule is required for a single appliance or for several connected in parallel.

Rule 20. The resistance of the leads supplying any appliance or appliances for a desired drop in potential within the leads is equal to the reciprocal of the current of the appliances multiplied by the desired drop in volts.

EXAMPLE.

A lamp, 100 volts \times 200 ohms, is placed 100 feet from the mains, in which mains a constant E. M. F. of 110 volts is maintained. What must be the resistance of the line per foot of its length; and what size copper wire must be used?

Solution: The lamp current is obtained (Ohm's law) by dividing its voltage by its resistance, ($\frac{100}{200} = \frac{1}{2}$ ampere). The reciprocal of the current is 2; multiplied by the drop ($\frac{1}{2} \times 10 = 20$) it gives the resistance of the line as 20 ohms. As the lamp is 100 feet from the mains there are 200 feet of the wire. Its resistance per foot is therefore $\frac{20}{200} = \frac{1}{10}$ ohm or it is No. 30 A. W. G. (about).

For several appliances in parallel on two leads a similar rule may be applied. There is inevitably a variation in E. M. F. supplied to the different appliances unless resistances are intercalated between the appliances and the leads.

Rule 21. The E. M. F. of the main leads or terminals the factors of the lamps or other appliances, their number and the distance of their point of connection are given. The combined resistance is found by Rules 8 to 12. Then by Rule 20 the resistance of the leads is calculated.

EXAMPLE.

A pair of house leads includes 260 feet of wire, or 130 in each lead. Six 50 volt 100 ohm lamps are connected thereto at the ends. The drop is to be 5

volts, giving 55 volts in the main leads. Required the total resistance of and size of wire for the house leads.

Solution: The resistance of six 100 ohm lamps in parallel is $100 \div 6 = 16.66$ ohms. The current required is by Ohm's law $50 \div 16.66$ or 3 amperes. Its reciprocal multiplied by the drop, ($\frac{1}{3} \times 5 = \frac{5}{3} = 1\frac{2}{3}$ ohms) gives the required resistance = $1\frac{2}{3}$ ohms. This, divided by 260 feet gives the resistance per foot as .0064 ohm, corresponding by the table to No. 18 A. W. G.

A rule for the above cases is sometimes expressed otherwise, being based on the proportion: Resistance of appliances is to resistance of leads as 100 *minus* the drop expressed as a percentage is to the drop expressed as a percentage. This gives the following:

Rule 22. The resistance of the leads is equal to the combined resistance of the appliances multiplied by the percentage of drop and divided by 100 *minus* the percentage of drop.

Problem. Take the data of last problem and solve.

Solution: The percentage of drop is $\frac{5}{55} = 9\%$. The resistance of the leads = $\frac{16.66 \times 9}{100 - 9} = \frac{149.94}{91} = 1\frac{2}{3}$ ohms about.

Note.—To obtain accurate results the figures of percentage, etc., must be carried out to two or more decimal places. Rules 20 and 21 are to be preferred to any percentage rule. Also see Rule 23.

Where groups of lamps are to be connected along a pair of leads but at considerable intervals, the succeeding sections of leads have to be of diminishing size. The same problem arises in calculating the sizes of street leads. The identical rule is applied, care being taken to express correctly the exact current going through each section of the lead. The calculation is begun at the outer end of the leads. A diagram is very convenient; it may be conventional as shown below.

EXAMPLES.


At three points on a pair of mains three groups of fifty 220 ohm lamps in parallel are connected; a total drop of 5 volts is to be divided among the three groups, thus: 1.6 volts — 1.6 volts — 1.8 volts. The initial E. M. F. is 115 volts; what must be the resistances of the three sections of wire?

Solution: The following diagram gives the data as detailed above:



Starting at group 3 we have 50 lamps in parallel each of 220 ohms resistance, giving a combined resistance (Rule 12) of 4.4 ohms and a total current (Ohm's law) of $110 \div 4.4 = 25$ amperes. The resistance of section 2—3 is by the present rule $\frac{1}{4} \times$


1.8 = .072 ohms. Taking group 2 the current through this group of lamps is $111.8 + 4.4 = 25.41$ amperes. The section 1—2 has to pass also the current 25 amperes for group 3 giving a total current of $25 + 25.41 = 50.41$ amperes. The resistance of section 1—2 is therefore $\frac{1}{50.41} \times 1.6 = .0317$ ohm. Taking group 1 the current for its lamps is $113.4 + 4.4 = 25.7$ amperes. The total current through section 0—1 is therefore $25 + 25.4 + 25.7 = 76.1$ amperes. The resistance of the section is $\frac{1}{76.0} \times 1.6 = .021$ ohms. Arranging all these data upon a diagram we have the full presentation of the calculation in brief as below:

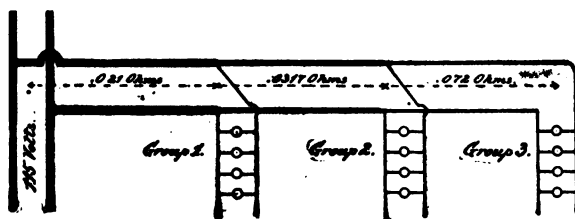

CHAPTER V.

CIRCULAR MILS.

A MIL is $\frac{1}{1000}$ of an inch. The area of a circle, one mil in diameter, is termed a circular mil. The area of the cross-section of wires is often expressed in circular mils. Thus a wire, 3 mils in diameter, has an area of 9 circular mils, as shown in the cut. A

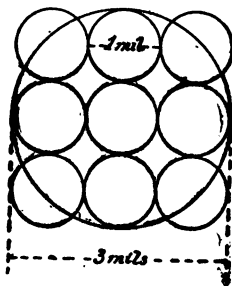

circular mil is .7854 square mil. Rules for the sizes of wires for given resistances are often based on circular mils, and include a constant for the conductivity of copper. By the table of specific resistances, the values found can be reduced to wires of iron or other metals.

A commercial copper wire, one foot long, and one circular mil in section, has a resistance of 10.79 ohms at 75° F. This is, of course, largely an assumption, but is taken as representing a good average. No two samples of wire are exactly alike, and many vary largely. From Rule 13, and from the above constant, we derive the following rules:

Rule 23. The resistance of a commercial copper wire is equal to its length divided by the cross-section in circular mils, and multiplied by 10.79.

EXAMPLE.

A wire is 1050 feet long, and has a cross-section of 8234 circular mils. What is its resistance?

Solution: $1050 \times 10.79 \div 8234 = 1.37$ ohms.

Rule 24. The cross-section of a wire in circular mils is equal to its length divided by its resistance, and multiplied by 10.79.

EXAMPLE.

A wire is 1050 feet long, and has a resistance of .68795 ohms. What is its cross-section in circular mils?

Solution: $1050 \times 10.79 \div .68795 = 16,468$ circular mils.

Rule 25. The cross-section of the wires of a pair of leads in circular mils for a given drop expressed in percentage is equal to the product of the length of leads by the number of lamps (in parallel), by 21.58, by the difference between 100 and the drop, the whole divided by the resistance of a single lamp multiplied by the drop.

$$A = \frac{ln \times 21.58 \times (100 - e)}{or}$$

EXAMPLE.

Fifty lamps are to be placed at the end of a double lead 150 feet long (= 300 feet of wire). The resistance of a lamp is 220 ohms. What size must the wire be for 5% drop?

Solution: $150 \times 50 \times 21.58 \times (100 - 5) + (220 \times 5) = 13,977.9$ circular mils.

In these calculations and in the calculations given on page 48 it is important to bear in mind that the percentage is based upon the difference of potential at the beginning of the leads or portion thereof under consideration; in other words upon the highest difference of potential within the system or the portion of the system treated in the calculation.

CHAPTER VI.

SPECIAL SYSTEMS.

THREE WIRE SYSTEM.

As there are three wires in the three wire system, where there are two in the ordinary system, and as each of the three wires is one quarter the size of each of the two ordinary system wires, the copper used in the three wire system is three-eighths of that used in the ordinary system.

In the three wire system the lamps are arranged in sets of two in series. Hence but one-half the current is required. The outer wires, it will be noticed, have double the potential of the lamps. Hence to carry one-half the current with double the E. M. F., a wire of one quarter the size used in the ordinary system suffices.

Rule 26. The calculations for plain multiple arc work apply to the three wire system, as regards size of each of the three leads, if divided by 4.

While the central or neutral wire will have nothing to do when an even number of lamps are burning on each side, and may never be worked to its full capacity, there is always a chance of its having to carry a full current to supply half the lamps (all on

one side). Hence it is made equal in size to the others.

ALTERNATING CURRENT SYSTEM.

The rules already given apply in practice to this system also, although theoretically Ohm's law and those deduced from it are not correct for this current. A calculation has to be made to allow for the conversion from primary to secondary current in the converter as below.

Note.—The ratio of primary E. M. F. to secondary is expressed by dividing the primary by the secondary, and is termed *ratio of conversion*. Thus in a 1000 volt system with 50 volt lamps in parallel the *ratio of conversion* is $1000 \div 50 = 20$.

Rule 27. The current in the primary is equal to the current in the secondary divided by the ratio of conversion.

EXAMPLES.

On an alternating current circuit whose ratio of conversion = 20, there are 1000 lamps, each 50 volt; 50 ohms. When all are lighted what is the primary current?

Solution: By Ohm's law the secondary current is 1000×1 (each lamp using $\frac{1}{2}$ — 1 ampere, Ohm's law) = 1000 amperes. $1000 \div 20 = 50$ amperes is the primary current.

The current being thus determined the ordinary rules all apply exactly as given for direct current work.

Given 650 lamps, 50 volt 50 ohms each, 3600 feet from the station. The primary circuit pressure is 1031 volts. A drop of 3% is to be allowed for in the primary leads. What is the resistance of the primary wire?

Solution: Current of a single lamp = $50 \div 50 = 1$ ampere; current of 650 lamps = 650 amperes, current of primary $650 \div 20 = 32\frac{1}{2}$ amperes, drop of primary = $1031 \times 3\% = 30.9$ volts, resistance of primary (Rule 20) $\frac{1}{32\frac{1}{2}} \times 30.9 = .9516$ ohm.

Rule 28. For obtaining the size of the primary wire in circular mils, calculate by Rule 25, and divide the result by the square of the ratio of conversion.

EXAMPLE.

Take data of last problem and solve.

Solution: $[3600 \times 650 \times 21.58 \times (100-3) \div (50 \times 3)] \div 20^2 = 81,637$ circular mils.

The two last examples may be made to prove each other, thus:

The total length of leads is $3600 \times 2 = 7200$ feet. If of 1 mil thickness its resistance would be $7200 \times 10.79 = 77,688$ ohms. As resistance varies inversely as the cross sectional area we have the proportion

$.9516 : 77,688 :: 1 : x$ which gives $x = 81,639$ circular mils corresponding within limits to the result obtained by Rule 28.

In all cases of this sort where percentage is expressed the statement in the last paragraph on page

45 should be kept in mind. The ratio of conversion must be based on the E. M. F. at the coil (in this case on $1031 - 31 = 1000$ volts) not on the E. M. F. at the beginning of the leads or portion thereof considered in the calculation. The percentage of drop must be subtracted before the ratio of conversion is calculated.

For winding the converters, the following is the rule :

Rule 29. The convolutions of the primary are equal in number to the product of the convolutions of the secondary multiplied by the ratio of conversion, and vice versa.

EXAMPLES.

The ratio of conversion of a coil is 20; there are 1000 convolutions of the secondary. How many should there be of the primary?

Solution: $1000 \times 20 = 20,000$ convolutions.

There are in a coil 5000 convolutions of the primary; its ratio of conversion is 50. How many convolutions should the secondary have?

Solution: $5000 \div 50 = 100$ convolutions.

CHAPTER VII.

WORK AND ENERGY.

ENERGY AND HEATING EFFECT OF THE CURRENT.

It has been shown experimentally by Joule that the total quantity of heat developed in a circuit is equal to the square of the current multiplied by the resistance. This is equal, by Ohm's law, to the square of the E. M. F. divided by the resistance, which again reduces to the E. M. F. multiplied by the current. Each of these expressions has its own application, and they may be given as three rules.

Rule 30. The energy or heat developed in circuits is in proportion to the square of the current multiplied by the resistance.

$$H = C^2 R.$$

EXAMPLES.

An electric lamp has a resistance of 50 ohms; it is connected to a street main by leads of $2\frac{1}{2}$ ohms resistance. What proportion of heat is wasted in the house circuit?

Solution: The current being the same for all parts of the circuit, the heat developed is in proportion to the resistance, or as $2\frac{1}{2} : 50$ equal to $1 : 20$. The

heat developed in the wire is wasted, therefore the waste is $\frac{1}{10}$ of the total heat developed.

The internal resistance of a battery is equal to that of 3 meters of a particular wire. Compare the quantities of heat produced both inside and outside the battery when its poles are connected with one meter of this wire with the quantities produced in the same time when they are connected by 37 meters of the same wire. (*Day.*)

Solution: The relative currents produced in the two cases are found (Ohm's law) by dividing the E. M. F. of the battery (a constant quantity = E) by the relative resistance. As the battery counts for the resistance of 3 meters of wire, the relative resistances are as 4 : 40. Were the same current developed in both cases these figures would give the desired ratio. But as the current varies it has to be taken into account. To determine the relative battery heat only, we may neglect resistance of the battery, as it is a constant for both cases, the battery remaining identical. By Ohm's law the currents are in the ratio of $\frac{E}{4} : \frac{E}{40}$ and their squares are in proportion to $\frac{E^2}{16} : \frac{E^2}{1600} = 100 : 1$. By the rule this is the proportion of the heats developed in the battery alone, with the short wire 100, with the long wire 1. For the heating effects on the outside circuit, as resistance and current both vary, the full formula of the rule must be applied. The ratio of the heat in the short wire connection to that in the long

wire connection is as $(\frac{2}{3})^2 \times 1 : (\frac{2}{10})^2 \times 37 = 100 \times 1 : 37 \times 1$. The ratio therefore is as 100 is to 37 for the total heat produced in the circuit which includes battery and connections.

Owing to irregular working of a dynamo, an incandescent lamp receives sometimes the full amount or $\frac{1}{2}$ ampere of current; at other times as little as $\frac{1}{4}$ ampere. What proportion of heat is developed in it in both cases, assuming its resistance to remain sensibly the same?

Solution: By the rule the ratio is $(\frac{1}{2})^2 : (\frac{1}{4})^2$ or $\frac{1}{4} : \frac{1}{16} = 2025 : 400$. The diminution of current therefore cuts down the heat to $\frac{1}{4}$ the proper amount.

Rule 31. The energy or heat developed in a circuit is in proportion to the square of the electromotive force divided by the resistance.

$$H = \frac{E^2}{R}$$

EXAMPLES.

There are two Grove batteries, each developing 1.98 volts E. M. F. One has an internal resistance of $\frac{1}{16}$ ohm; the other of $\frac{1}{4}$ ohm. They are placed in succession on a circuit of 2 ohms resistance. What is the ratio of heats developed by the batteries in each case?

Solution: As the E. M. F. is constant it may be taken as unity. Then for the two cases we have $\frac{1}{\frac{1}{16}} : \frac{1}{\frac{1}{4}} = 2\frac{1}{4} : 2\frac{1}{2}$ as the ratio of heat produced.

A battery of one ohm resistance and two volts E.

M. F. is put in circuit with 4 ohms resistance. Another battery of 4 ohms and 1 volt is connected through 1 ohm resistance. What ratio of heat is developed in each case?

Solution: $\frac{2 \times 2}{5} : \frac{1 \times 1}{5}$ or 4 : 1.

Rule 32. The energy or heat developed in a circuit is in proportion to the E. M. F. multiplied by the current.

$$H = EC$$

EXAMPLES.

Take data of last problem and solve.

Solution: For first battery, by Ohm's law, current = $\frac{2}{5}$ ampere; for the second, current = $\frac{1}{5}$ ampere. The heat developed, is by the present rule, in the proportion as $\frac{2}{5} \times 2 : \frac{1}{5} \times 1$ or 4 : 1.

Compare the heat developed in a 100 volt 200 ohm lamp and in a 35 volt 35 ohm lamp and in a 50 volt 50 ohm lamp.

Solution: The currents (Ohm's law) are: $\frac{100}{200}$, $\frac{35}{35}$ and $\frac{50}{50}$ in amperes = $\frac{1}{2}$, 1, and 1 amperes. The heats developed are, by the rule, in the ratio $100 \times \frac{1}{2} : 35 \times 1$ and 50×1 or 50 : 35 : 50.

The same problem can be done directly by Rule 31, thus: The three lamps develop heat in the ratio $\frac{100^2}{200} : \frac{35^2}{35} : \frac{50^2}{50} = 50 : 35 : 50$. This is the direct and preferable method of calculation.

Note.—For "heat," "rate of energy," or "rate of work" can be read in these rules.

THE JOULE OR GRAM-CALORIE.

The last rules and problems only touch upon the *relative proportions* of heat; they do not give any actual quantity. If we can express in units of the same class a standard quantity of heat, then by determining the relation of the standard to any other quantity, we arrive at a real quantity. Such a standard is the joule, sometimes called the "calorie" or "gram-calorie." A joule is the quantity of heat required to raise the temperature of 1 gram of water 1 degree centigrade. It is often expressed as a water-gram-degree C. or w. g. d. C. or for shortness g. d. C., from the initials of the factors. It is unfortunate that it is called the calorie as the name is common to the water-kilogram-degree C. or kg.d. C. The joule is equal to 4.16×10^7 or 41,600,000 ergs.

It will be remembered that practical electric units are based on multiples of the C. G. S. units of which the erg is one. The joule comes in the C. G. S. order. Therefore to determine quantities of heat the following is a general rule when the practical electric units are used.

Rule 33. Obtain the expression of rate of heat developed, or of rate of energy, or of rate of work in volt amperes. Reduce to C. G. S. units (ergs) by multiplying by 10^7 and divide by the value of a joule in ergs (4.16×10^7). The quotient is joules or water-gram degrees C. per second.

$$Q = \frac{E \times C \times 10^7}{4.16 \times 10^7}$$

EXAMPLE.

A current of 20 amperes is flowing through a wire. What heat is developed in a section of the wire whose ends differ in potential by 110 volts?

Solution: The rate of energy in watts or volt-amperes $= 110 \times 20 = 2200$. In the C. G. S. units this is expressed by $(110 \times 10^8) \times (20 \times 10^{-1}) = 2200 \times 10^7$ ergs. per second; \therefore quantity of heat $= 2200 \times 10^7 \div 4.16 \times 10^7 = 528.8$ joules or gram-degrees-centigrade per second.

As $10^7 \div 10^7 = 1$ the rule can be more simply stated thus:

Rule 34. The quantity of heat produced per second in a circuit by a current is equal to the product of the watts by $\frac{1}{4.16}$ or by .24.

$$Q = 0.24 CE \text{ or } 0.24 \frac{E^2}{R}$$

EXAMPLES.

A difference of potential of 5.5 volts is maintained at the terminals of a wire of $\frac{1}{10}$ ohm resistance. How many joules per second are developed?

Solution: By Ohm's law, current $= 5.5 \div \frac{1}{10} = 55$ amperes. By the rule $55 \times 5.5 \times 0.24 = 72.6$ joules per second.

Note.—The energy of a current is given by Rules 30, 31 and 32 in watts, so that all cases are provided for by a combination of one or the other of these rules with Rule 34. An example will be given for each case.

A current of .8 ampere is sent through 50 lamps in series, each of $137\frac{1}{2}$ ohms resistance. What heat does it develop per second?

Answer: The resistance = $137\frac{1}{2} \times 50$. By rules 30 and 34 we have, rate of heat produced = $.8^2 \times 137\frac{1}{2} \times 50 = 4400$ watts. $4400 \times 0.24 = 1056$ joules per second.

Rules 31 and 34. Fifty incandescent lamps, 110 volt, $137\frac{1}{2}$ ohms, each are placed in parallel. What heat per second do they develop?

Solution: By Ohm's law total resistance = $137\frac{1}{2} \div 50 = 2.75$ ohms. By rules 31 and 34 rate of heat produced = $110^2 \div 2.75 = 4400$ watts and $4400 \times 0.24 = 1056$ joules per second as before.

Rules 32 and 34. Through 50 incandescent 110 volt lamps a current of .8 ampere is passed, the lamps being in series. What heat per second do they develop?

Solution: By rules 32 and 34 rate of heat = $110 \times 50 \times .8 = 4400$ watts and 1056 joules per second as before.

These three examples are purposely made to refer to the same set of lamps, to show that rules 30, 31, and 32 are identical. Each fits one of the three forms of statement of data. They also are designed to bring out the fact that the unit "watts," being based partly on amperes, includes the idea of rate, not of absolute quantity. Hence watts "per second" is not stated, as it would be meaningless or

redundant, while the joule, denoting an absolute quantity, has to be stated "per second" to indicate the rate. There is such a unit as an "ampere-second," viz., the "coulomb," but there is no such thing as an "ampere per second," or if used it means the same as an "ampere per hour," "ampere per day" or "ampere." The same applies to watts and to power units such as "horse-power."

SPECIFIC HEAT.

The specific heat of a substance is the ratio of its capacity for heat to that of an equal quantity of water. It almost invariably is referred to equal weights. Here it will be treated only in that connection.

The coefficient of specific heat of any substance is the factor by which the specific heat of water (= 1 or unity) being multiplied the specific heat of the substance is produced.

Rule 35. The weight of any substance corresponding to any number of joules multiplied by its specific heat gives the corresponding weight of water, and *vice versa*.

EXAMPLE.

A current of .75 amperes is sent for 5 minutes through a column of mercury whose resistance was 0.47 ohm. The quantity of mercury was 20.25 grams, and its specific heat 0.0332. Find the rise of temperature, assuming that no heat escapes by radiation. (*Day.*)

Solution: By Rules 30 and 34, we find rate of heat $= .75^2 \times .47 = .264375$ watts; $.264375 \times .24 = .06345$ joules per second. The current is to last for 300 seconds \therefore total joules $= .06345 \times 300 = 19.035$ joules. This must be divided by the specific heat of mercury to get the corresponding weight of mercury; $19.035 \div .0332 = 573$ gram degrees of mercury. Dividing this by the weight of mercury, 20.25 grams, we have $573 \div 20.25 = 28^\circ \text{C}$.

Rule 36. By radiation and convection, $\frac{1}{4000}$ joule about is lost by any unpolished substance in the air for each square centimeter of surface, and for each degree that it is heated above the atmosphere.

EXAMPLE.

A conductor of resistance, 8 ohms, has a current of 10 amperes passing through it. It is 1 centimeter in circumference, and 100 meters long. How hot will it get in the air?

Solution: By Rule 30, etc., the heat developed per second in joules is $10^2 \times 8 \div 4.16 = 192.3$ joules. The surface of the conductor in centimeters is $10,000 \times 1 = 10,000$ sq. cent. It therefore develops heat at the rate of $192.3 \times 10^{-4} = .01923$ joules per second per square centimeter of surface. When the loss by radiation and convection is equal to this, it will remain constant in temperature. Therefore $.01923 \div \frac{1}{4000} = 76.92$, the number of degrees C. above the air to which the conductor could be heated by such a current.

Results of this character are only approximate, as the coefficient, $\frac{1}{1000}$, is not at all accurate.

Rule 37. The cube of the diameter in centimeters of a wire of any given material that will attain a given temperature centigrade under a given current is equal to the product of the square of the current in amperes \times Sp. Resistance in microhms of the substance of the wire, multiplied by .000391, and divided by the temperature in degrees centigrade.

$$d^3 = \frac{C^2 \times \text{Sp. Res.} \times .000391}{t^2}$$

EXAMPLES.

A lead safety catch is to be made for a current of 7.2 amperes. Its melting point is 335°C ., and its specific resistance 19.85 microhms per cubic centimeter. What should its diameter be? (*Day.*)

Solution: By the rule, the cube of the diameter = $7.2^2 \times 19.85 \times .000391 \div 335 = .001198$. The cube root of this gives the diameter in centimeters. It is .10582 or .106 cm.

A copper wire is to act as safety catch for 500 amperes: melting point 1050°C —Sp. Resistance 1.652 microhms. What should its diameter be? (*Day.*)

Solution: Cube of diameter = $\frac{500^2 \times 1.652 \times .000391}{1050} = \frac{159,418}{1050} = .1523$. The cube root of this is .5341 centimeter, the thickness of the wire sought for.

It will be observed that in this rule no attention is paid to the length of the wire, as the effect of a current in melting a wire has no reference to its

length. The time of fusion will vary with the specific heat, but will, of course, be only momentary.

WORK OF A CURRENT.

Rule 38. The work of a current in a given circuit is proportional to the volt amperes. $W = EC$

EXAMPLE.

A current A of 3.5 amperes with difference of potential in the circuit of 20 volts is to be compared to B, a 3 ampere current with a difference of potential of 1000 volts in the circuit; what is the ratio of work produced in a unit of time?

Solution: Work of A : work of B :: 3.5×20 : 3×1000 or as 70 : 3000 or as 1 : $42\frac{8}{100}$.

Rule 39. The work of a current in a given circuit is equal to the volt-coulombs divided by the acceleration of gravitation (9.81 meters). This gives the result in kilogram-meters. (7.23 foot pounds.) $W = \frac{E.C.t}{9.81}$

EXAMPLE.

A current of 20 amperes is maintained in a circuit by an E. M. F. of 20 volts. What work does it do in one minute and a half (90 sec.)?

Solution: Work = $20 \times 20 \times 90 \text{ sec} \div 9.81 = 3670$ kgmts. and $3670 \times 7.23 = 26,534$ foot pounds.

Note.—This is easily reduced to horse-power. 26,534 foot pounds in 90 sec. = 17,688 foot pounds in 1 min. 1 H. P. = 33,000 foot pounds per min. $\therefore \frac{17688}{33000} = .536$ H. P. of above current and circuit. The same result can be obtained by Rule 41 thus: $\frac{20 \times 20}{746} = .536$ H. P.

Rule 40. To determine work done by a current in a given circuit apply Rules 30, 31 or 32 as the case requires. These give directly the watts. Multiply by seconds and divide by 9.81. The result is kilogram-meters.

EXAMPLES.

10 amperes are maintained for 55 sec. through 15 ohms. What is the work done?

Solution: By rule 32, watts — $10^2 \times 15 = 1500$.
 Work = $1500 \times 55 \div 9.81 = 8409$ kgmts.

1000 volts are maintained between terminals of a lead of 20 ohms resistance. Calculate the work done per hour.

Solution: By Rule 32 watts = $1000^2 \div 20 = 50,000$.
 One hour = 3600 sec. Work = $50,000 \times 3600 \div 9.81 = 18,348,623$ kgmts.

These rules give the basis for determining the expense of maintaining a current. The expense of maintaining a horse-power or other unit of power or work being known the cost of electric power is at once calculable.

ELECTRICAL HORSE-POWER.

Power is the rate of doing work or of expending energy. In an electric circuit one horse-power is equal to such a product of the current in amperes, by the E. M. F. in volts as will be equal to 746.

Rule 41. The electric horse power is found by multiplying the total amperes of current by the volts or E. M. F. of a circuit or given part of one and dividing by 746.

$$\text{H.P.} = \frac{EC}{746}$$

EXAMPLE.

250 incandescent lamps are in parallel or on multiple arc circuit. Each one is rated at 110 volts and 220 ohms. What electric H. P. is expended on their lighting?

Solution: The resistance of all the lamps in parallel is equal to $\frac{220}{250}$ ohm. The current is equal to $110 \div \frac{220}{250} = 125$ amperes. H. P. = $125 \times 110 = 13750$ = $18\frac{1}{2}$ H. P. or $13\frac{1}{2}$ lamps to the electrical H. P.

As it is a matter of indifference as regards absorption of energy how the lamps are arranged, a simpler rule is the following, where horse-power required for a number of lamps or other identical appliances is required.

Rule 42. Multiply together the voltage and amperage of a single lamp or appliance; multiply the product by the number of lamps or appliances and divide by 746.

EXAMPLE.

Take data of last problem and solve it.

Solution: Current of a single lamp = $\frac{110}{220} = \frac{1}{2}$ ampere. H. P. = $110 \times \frac{1}{2} \times 250 \div 746 = 18\frac{1}{2}$ H. P.

When the voltage and amperage are not given directly, the missing one can always be calculated by Ohm's law and the above rules can then be applied. The same can be done by applying following:

Rule 43. To determine the electrical horse-power apply Rules 30, 31, or 32; these give directly the watts; multiplying the result by $\frac{1}{746}$ or dividing by 746 gives the horse-power.

EXAMPLES.

A current of 10 amperes is maintained through 50 ohms resistance. What is the electrical horse-power?

Solution: By rules 30 and 43 we have watts = $10^2 \times 50 = 5000$ and electrical horse-power = $5000 \div 746$ or 6.7 H. P.

An electromotive force of 1500 volts is maintained in a circuit of 200 ohms resistance. What is the electrical horse-power?

Solution: By Rules 31 and 43 we have watts = $1500^2 \div 200 = 11,250$. Electrical horse-power = $11,250 \div 746$ or 15 H. P. (nearly).

Thus the volt-amperes or watts are units of rate of heat energy or of rate of mechanical energy. The ratio of joules per second to a horse-power is 746: 4.16 or 179.3 joules per second = 1 H. P. Other ratios of power and heat units will be found in the tables.

DUTY AND EFFICIENCY OF ELECTRIC GENERATORS.

Rule 44. The duty of an electric generator is the quotient obtained by dividing the total electric energy by the mechanical energy expended in turning the armature.

$$D = \frac{e. H. P. (total)}{m. H. P.}$$

EXAMPLES.

A dynamo is driven by the expenditure of 58 H. P. Its internal resistance is 10.7 ohm. The

resistance of the outer circuit is 150 ohms and it maintains a current of 16 amperes. What is its duty?

Solution: The total electrical H. P. is found by Rules 30 and 43 to be $16^2 \times 160.7 \div 746 = 55.1$ H. P. Duty = $55.1 \div 58.0 = 95\%$.

The result must always be less than unity; if it exceeded unity it would prove that there had been an error in some of the determinations.

Rule 45. The commercial efficiency of a generator is the quotient obtained by dividing the electric energy in the outer circuit by the mechanical energy expended in turning the armature.

$$\text{C. Eff.} = \frac{\text{e. H. P. (outer circuit)}}{\text{m. H. P.}}$$

EXAMPLES.

What is the commercial efficiency of the dynamo just cited?

Solution: The electrical H. P. of the outer circuit is found by the same rules to be $16^2 \times 150 \div 746 = 51.5$ commercial efficiency = $51.5 \div 58.0 = 88.8\%$.

Rule 46. The resistance of the outer circuit is to the total resistance, as the commercial efficiency is to the duty.

EXAMPLES.

Take the case of the generator last given and from its duty calculate the commercial efficiency.

Solution: $150 : 160.7 :: x : 95.0 \therefore x = 88.8$ or **88.8%.**

CHAPTER VIII.

BATTERIES.

GENERAL CALCULATIONS OF CURRENT.


A BATTERY is rated by the resistance and electro-motive force of a single cell, which factors are termed the cell constants. In the case of storage batteries, whose susceptibility to polarization is very slight, the resistance is often assumed to be negligible. It is not so, and in practice is always knowingly or otherwise allowed for.

From the cell constants its energy-constant may be calculated by Rule 31, as equal to the square of its electro-motive force divided by its resistance. This expresses its energy in watts through a circuit of no resistance.

There are two resistances ordinarily to be considered, the resistance of the battery which is designated by R or by $n R$ if the number of cells is to be implied and the resistance of the external circuit which is designated by r .

Rule 47. The current given by a battery is equal to its electro-motive force divided by the sum of the external and internal resistances.


$$C = \frac{E}{R + r}$$




Six cells in parallel.



Six cells in series.

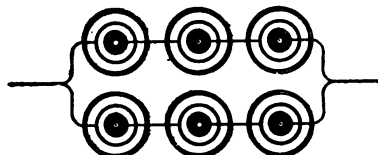

Six cells—two in parallel, three in series.

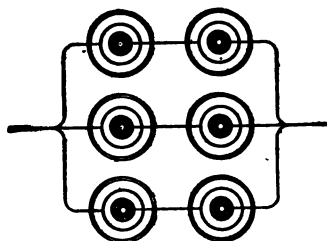

Six cells—three in parallel, two in series.

ARRANGEMENT OF BATTERY CELLS.

EXAMPLE.

A battery of 50 cells arranged to give 75 volts E. M. F. with an internal resistance of 100 ohms sends a current through a conductor of 122 ohms resistance. What is the strength of the current?

Solution: Current = $75 \div (100 + 122) = .338$ ampere. This rule has already been alluded to under Ohm's law (page 14).

ARRANGEMENT OF CELLS IN BATTERY.

In practice the cells of a battery are arranged in one of three ways. *a*: All may be in series; *b*: all may be in parallel; *c*: some may be in series and some in parallel, so as to represent a rectangle, *s* cells in series by *p* cells in parallel, the total number of cells being equal to the product of *s* and *p*.

Other arrangements are possible. Thus the cells may represent a triangle, beginning with one cell, followed by two in parallel and these by three in parallel and so on. This and similar types of arrangement are very unusual and little or nothing is to be gained by them.

Rule 48. The electromotive force of a battery is equal to the E. M. F. of a single cell multiplied by the number of cells in series.

Rule 49. The resistance of a battery is equal to the number of its cells in series, multiplied by the resistance of a single cell and divided by the number of its cells in parallel.

$$R_{\text{battery}} = \frac{s R}{p}$$

EXAMPLES.

A battery of 50 gravity cells 1 volt, 3 ohms each is arranged 10 in parallel and 5 in series. What is its resistance and electromotive force?

Solution: Resistance = $5 \times 3 + 10 = 1.5$ ohms.

E. M. F. = $5 \times 1 = 5$ volts.

The same battery is arranged all in parallel; what is its resistance and E. M. F.?

Solution: This gives one cell in series.

Resistance = $1 \times 3 + 50 = .06$ ohms.

E. M. F. = $1 \times 1 = 1$ volt.

The same battery is arranged all in series; what is its resistance?

Solution: This gives one cell in parallel.

Resistance = $\frac{50 \times 3}{1} = 150$ ohms.

E. M. F. = $50 \times 1 = 50$ volts.

The current given by a battery is obtained from these rules and from Ohm's law.

EXAMPLE.

150 cells of a battery (cell constants 1.9 volts, $\frac{1}{3}$ ohm) are arranged 10 in series and 15 in parallel. They are connected to a circuit of 1.7 ohms resistance. What is the current?

Solution: The resistance of the battery = $\frac{10 \times \frac{1}{3}}{15} = .333$ ohms. The E. M. F. = $10 \times 1.9 = 19$ volts.
Current = $19 \div (.333 + 1.7) = 9.34$ amperes.

CELLS REQUIRED FOR A GIVEN CURRENT.

To calculate the cells required to produce a given current through a given resistance and the arrangement of the cells proceed as follows.

Rule 50. Calculate the cell current through zero external resistance. **Case A.** If it is twice as great or more than twice as great as the current required apply **Rule 51**. **Case B.** If less than twice as great and more than equal or less than equal and more than one half as great as the current required and so on apply **Rule 52**. **Case C.** If the cell current is equal to or is a unitary fraction ($\frac{1}{4}$, $\frac{1}{5}$, $\frac{1}{8}$, etc.) of the current required apply **Rule 53**.

Rule 51. Case A. Divide the required difference of potential of the outer circuit by the voltage of a single cell diminished by the product of the required current multiplied by the resistance of a single cell. Arrange the cells in series.

$$N = \frac{e}{E - CR}$$

EXAMPLES.

Five lamps in parallel, each of 100 volts 200 ohms, are to be supplied by a battery whose cell constants are 2 volts $\frac{1}{4}$ ohm. How many cells and what arrangement are required?

Solution: Cell current = $\frac{2}{\frac{1}{4}} = 10$ amperes. The resistance of the five lamps in parallel (**Rule 12**) = $\frac{200}{5} = 40$ ohms. The required current therefore = $\frac{100}{40} = 2\frac{1}{2}$ amperes. As 10 exceeds $2\frac{1}{2} \times 2$ (**Rule 50**) it falls under case A. By **Rule 51** the number of cells is $\frac{100}{2 - (2\frac{1}{2} \times \frac{1}{4})} = \frac{100}{\frac{1}{2}} = 66.6$ or 67 cells, as a cell cannot be divided. The cells must be in series.

Proof: The E. M. F. of the 67 cells in series $= 67 \times 2 = 134$ volts; their resistance $= 67 \times \frac{1}{2} = 13.4$ ohms. The resistance of the lamps in parallel is 40 ohms. Hence by Ohm's law the current $= \frac{134}{40 + 13.4} = 2.51$ amperes, the current required.

The same lamps are placed in series. Calculate the cells of the same battery required. Cell current $= 10$ amperes. Current required $= \frac{100 \times 5}{200 \times 5}$ or $\frac{1}{2}$ ampere. As 10 exceeds $\frac{1}{2} \times 2$ (Rule 50) it falls again under case A. By Rule 51 cells required $= \frac{500}{2 - (\frac{1}{2} \times 2)} = 263$.

Proof: Current $= \frac{526}{52.6 + 1000} = \frac{1}{2}$ ampere the current required. 526 is the number of cells multiplied by the voltage of one cell; 52.6 is the number of cells multiplied by the resistance in ohms of a single cell; 1000 is the resistance of a single lamp, 200 ohms, multiplied by the number, 5, of lamps in series.

Whenever the arrangement and number of cells of a battery has been calculated the calculation should be proved as above.

Rule 52. Case B. Group two or more cells in parallel so as to obtain by calculation from them through no external resistance a current twice as great or more than twice as great as the required current. Then treating the group as if it was a single cell apply Rule 51 to determine the number of groups in series.

EXAMPLE.

Assume the same lamps in parallel, requiring the

current already calculated of $2\frac{1}{2}$ amperes. Assume a battery of constants 1 volt .25 ohm, giving a cell current of 4 amperes. This is less than $2\frac{1}{2} \times 2$ and more than $2\frac{1}{2} \times 1$; therefore it falls under Case B.

Solution: A group of two cells in parallel gives $\frac{1}{.125} = 8$ amperes. 8 exceeds $2\frac{1}{2} \times 2 \therefore$ applying Rule 49 we have number of groups = $100 \div [1 - (2\frac{1}{2} \times .125)] = 146$ groups in series. Total number of cells = 2 in parallel, 146 in series = 292 cells.

Proof: Current = $146 \div (40 + 18.25) = 2.5$ amperes.

Rule 53. Case C. Place as many cells in series as will give twice the required voltage. Place as many cells in parallel as will give a resistance equal to that of the external circuit.

EXAMPLE.

Assume the same lamps in parallel. Assume a battery of cell constants, 1 volt, 4 ohms. The lamp current is $2\frac{1}{2}$ amperes. The cell current is $\frac{1}{4}$ ampere. The cell current therefore equals $(\frac{1}{4} + 2\frac{1}{2}) \frac{1}{10}$ of the required current. This falls under Case C. and is solved by Rule 53.

Solution: Voltage required 100. By the rule cells in series = $100 \times 2 = 200$. These have a resistance of 800 ohms. To reduce this to the resistance of the outer circuit, viz., 40 ohms, $800 \div 40 = 20$ cells must be placed in parallel. Total cells = $20 \times 200 = 4000$ cells.

Proof: Current = $200 \div (40 + 40) = 2.5$.

Rule 54. All cases coming under Case C. may be simply solved for the total number of cells by dividing the external energy by the cell energy and multiplying by 4. This gives the number of cells.

EXAMPLE.

Take as cell constants .75 volt $1\frac{1}{2}$ ohm giving $\frac{1}{2}$ ampere. Assume 20 lamps, each 50 volts, 50 ohms and 1 ampere. As $\frac{1}{2} + 1$ is a unitary fraction ($\frac{1}{2}$) Case C. applies.

Solution: Cell energy = $\frac{1}{2} \times .75 = .375$ watts. External energy = $50 \times 1 \times 20 = 1000$ watts. $(1000 \div .375) \times 4 = 10,666$ cells.

Solution by Rule 53: Voltage required taking lamps in series = $20 \times 50 = 1000$. To give twice this voltage requires $2000 \div .75 = 2667$ cells in series whose resistance is $2667 \times 1.5 = 4000$ ohms. To reduce this to 1000 ohms we need 4 such series of cells in parallel giving 10,668 cells.

Proof: Current = $\frac{2667 \times .75}{(2667 \times 1\frac{1}{2}) + 1000} = 1$ ampere.

Slight discrepancies will be noticed in the current strength given by different calculations. This is unavoidable as a cell cannot be fractioned or divided.

EFFICIENCY OF BATTERIES.

Rule 55. The efficiency of a battery is expressed by dividing the resistance of the external circuit by the total resistance of the circuit.

$$\text{Efficiency} = \frac{R}{R + r}$$

EXAMPLE.

A battery consists of 67 cells in series of constants 2 volts $\frac{1}{2}$ ohm. It supplies 5 lamps in parallel, each 100 volts 200 ohms constants. What is its efficiency?

Solution: The resistance of the battery is $67 \times \frac{1}{2} = 13.4$ ohms. The resistance of the lamps is (Rule 12) $\frac{200}{5} = 40$ ohms. Therefore the efficiency of the battery is $40.0 \div (40 + 13.4) = .749$ or 74.9%.

Rule 56. To calculate the number of battery cells and their arrangement for a given efficiency: Express the efficiency as a decimal, multiply the resistance of the external circuit by the complement of the efficiency (1—efficiency) and divide the product by the efficiency; this gives the resistance of the battery. Add the two resistances and multiply their sum by the current to be maintained for the E. M. F. of the battery. Arrange the cells accordingly as near as possible to these requirements.

EXAMPLES.

Five lamps, each 100 volts 200 ohms in parallel are to be supplied by a battery of cell constants 2 volts .4 ohm. The efficiency of the battery is to be as nearly as possible 75%. Calculate the number of cells and their arrangement.

Solution: The constants of the external circuit are 40 ohms (Rule 12) and 100 volts. Applying the rule we have $[40 \times (1-.75)] \div .75 = 13\frac{1}{3} = 13\frac{1}{3}$ ohms, the resistance of the battery. By Ohm's law the E. M. F. of the battery = $(40 + 13\frac{1}{3}) \times 2.5 =$

133½ volts. These constants, 13½ ohms and 133½ volts, require 67 cells in series and 2 in parallel.

Proof: *a.* Of efficiency, by Rule 55, $\frac{40}{40+13\frac{1}{2}} = .75$ or 75%. *b.* Of number of cells and of their arrangement $67 \times 2 = 134$ volts; $(67 \times .4) + 2 = 13.4$ ohms; $134 \div (13.4 + 40) = 2.5$ amperes.

Rule 57. Where a fractional or mixed number of cells in parallel are called for to produce a given efficiency, take a group of the next highest integral number of cells in parallel and proceed as in Rule 51.

EXAMPLE.

Assume a current of 3½ amperes to be supplied through a resistance of 30 ohms, absorbing 100 volts E. M. F. Let the cell constants of a battery to supply this circuit be 2 volts, ½ ohm. Calculate the cells and their arrangement for 80 per cent. efficiency.

Solution: By Rule 56 efficiency = .80 and $\frac{30 \times (1-.80)}{.80} = 7\frac{1}{2}$ ohms, which is the required resistance of the battery; $7\frac{1}{2} + 30 = 37\frac{1}{2}$ ohms are the total resistance of the circuit. By Ohm's law, $37\frac{1}{2} \times 3\frac{1}{2} = 125$ volts, the required E. M. F. of the battery. This requires 63 cells in series, with a resistance for one series of $63 \times \frac{1}{2} = 10\frac{1}{2}$ ohms. To reduce this to $7\frac{1}{2}$ ohms $\frac{10\frac{1}{2}}{7\frac{1}{2}} = 1.4$ cells in parallel are required. As this is a mixed number we take the next highest integral number and place 2 cells in parallel. The constants of this group of 2 cells are 2 volts, ¼

ohm. Applying Rule 51 we have for the number of such groups in series; $\frac{100}{2 - (81 \times \frac{1}{16})} = 58$ groups in series. As there are 2 cells in parallel the total cells are 116, of resistance, $58 \times \frac{1}{16} = 4.83$ ohms, and of E. M. F., $58 \times 2 = 116$ volts.

Proof: Of efficiency by Rule 55, $\frac{80}{80 + 4.83} = 86.1\%$. Of number and arrangement of cells $\frac{116}{80 + 4.83} = 3.33$ amperes.

It is to be observed that the efficiency thus obtained is far from what is required. In most cases accuracy can only be attained by arranging the battery irregularly, which is unusual in practice. An example will be found in a later chapter.

CHEMISTRY OF BATTERIES.

One coulomb of electricity will set free .010384 milligrams of hydrogen. The corresponding weights of other elements or compounds are found by multiplying this factor by the chemical equivalent, and dividing by the valency of the element or metal of the base of the compound in question.

An element or other substance in entering into any chemical combination develops more or less heat, always the same for the same weight and combination. The atomic weight of an element or the molecular weight of a compound divided by the valency of the element or metal of its base gives the original chemical equivalent.

The quantities of heat evolved by the combination of quantities of substances expressed by their original chemical equivalents multiplied by one gram are termed the thermo-electric equivalents of the elements or substances in question. In the tables it is expressed in kilogram-degrees C. of water (kilogram-calories).

From the thermo-electric equivalent of a combination we find the volts evolved by it or absorbed by the reciprocal action of decomposition.

Rule 58. The volts evolved by any chemical combination or required for any chemical decomposition are equal to the thermo-electric equivalent in kilogram-calories multiplied by .043.

$$E = .043 \times H.$$

EXAMPLES.

What number of volts is required to decompose water?

Solution: From the table we find that the combination of one gram of hydrogen with eight grams of oxygen liberates 34.5 calories. Then $34.5 \times .043 = 1.48$ volts.

Rule 59. To determine the voltage of a galvanic couple subtract the kilogram calories corresponding to decompositions in the cell from those corresponding to combinations in the cell for effective energy and multiply by .043 for volts.

EXAMPLES.

Calculate the voltage of the Smee couple.

Solution: In this battery zinc combines with

oxygen, giving out 43.2 calories and combines with sulphuric acid, giving 11.7 more calories; a total of 54.9 calories. An equivalent amount of water is at the same time decomposed acting as counter-energy of 34.5 calories. The effective energy is $54.9 - 34.5 = 20.4$ calories. The voltage $= 20.4 \times .043 = .877$ volts.

Calculate the voltage of the sulphate of copper battery.

Solution: Here we have combination of zinc with sulphuric acid as above 54.9 calories; decomposition of copper sulphate $19.2 + 9.2 = 28.4$ $\therefore 54.9 - 28.4 = 26.5$ calories effective energy $26.5 \times .034 = 1.14$ volts.

It will be noticed that these results are approximate. Some combinations are omitted in them as either of unknown energy, or of little importance.

WORK OF BATTERIES.

The rate of work of a battery is proportional to the current multiplied by the electro-motive force. The work is distributed between the battery and the external circuit in the ratio of their resistances as by Rule 55. The horse-power, and heating power are calculated by Rules 30-43, care being taken to distribute the energy according to the resistance by the following rule:

Rule 60. The effective rate of work or the rate of work in the external circuit of a battery, is equal to the

total rate multiplied by the efficiency of the battery expressed decimally.

EXAMPLE.

25 cells of 2 volt 1 ohm battery are arranged in series on an external circuit of 250 ohms resistance. What work do they do in that circuit?

Solution: The current (Ohm's law) = $\frac{25 \times 2}{25 + 250} = \frac{2}{11}$ 1.818 amperes. Total rate of work = 1.818×50 volts = 90.9 watts. Efficiency of battery = $\frac{2}{2.2} = 90$ per cent. (nearly). Effective rate of work = $1.818 \times 50 \times .90 = 81.81$ watts.

CHEMICALS CONSUMED IN A BATTERY.

Rule 61. The chemicals consumed in grams by a battery for one kilogram-meter (7.23 foot lbs.) of work are found by multiplying the combining equivalent of the chemical by the number of equivalents in the reaction by the constant .000101867 and dividing by the product of the E. M. F. by the valency of the element in question.

$$W = \frac{\text{Equiv.} \times n \times .000101867}{E \times \text{valency}}$$

EXAMPLES.

What is the consumption of zinc and sulphate of copper per kilogram-meter of work in a Daniel's battery?

Solution: Take the E. M. F. as 1.07 volt. The equivalent of zinc, a dyad, is 65 and one atom enters into the reaction. The zinc consumed therefore = $\frac{65 \times 1 \times .000101867}{1.07 \times 2} = .00309$ gram.

The equivalent of copper sulphate, is 159.4. One equivalent enters into the reaction carrying with it one atom of the dyad metal copper. The weight consumed therefore $= \frac{159.4 \times 1 \times .000101867}{1.07 \times 2} = .0076$ grams. Add 56.46% for water of crystallization.

All these quantities are for one kilogram-meter of work (7.23 foot lbs.) which may be more or less effective according to circumstances as developed in Rules 44, 45, and 60.

DECOMPOSITION OF COMPOUNDS BY THE BATTERY.

In cases where a compound has to be decomposed by a battery two resistances may be opposed to the work. One is the ohmic resistance of the solution, which is calculated by Rule 16. The other is the electromotive force required to decompose the solution. This is best treated as a counter-electromotive force. Then from the known data the current rate is calculated, and from the electro-chemical equivalents the quantity of any element deposited by a given number of coulombs is determined.

Rule 62. To calculate the metal or other element liberated by a given current per given time proceed as follows: Calculate the resistance. Determine the counter-electromotive force of the solution by Rule 58 and subtract it from the E. M. F. of the battery or generator. Apply Ohm's law to the effective voltage thus determined and to the calculated resistances to find the current. Multiply the electro-chemical equivalent of the element by the coulombs or ampere-seconds.

EXAMPLE.

A bath of sulphate of copper is of specific resistance 4 ohms. The electrodes are supposed to be 10,000 sq. centimeters in area and 5 centimeters apart. Two large Bunsen elements in series of 1.9 volts .12 ohms each are used. What weight in milligrams of copper will be deposited per hour?

Solution: By Rule 16 the resistance of the solution is $\frac{46 \times 5}{10000} = 0.023$. The electro-chemical equivalent of copper is .00033 grams. The thermo-electric equivalent for copper from sulphate of copper is $19.2 + 9.2 = 28.4$ calories. The E. M. F. corresponding thereto $= 28.4 \times .043 = 1.22$ volts counter E. M. F. The E. M. F. of the battery $= 1.9 \times 2 = 3.8$ volts, giving an effective E. M. F. of $3.8 - 1.22 = 2.58$ volts. The resistance of the battery $= .12 \times 2 = .24$ ohms. The current $= \frac{2.58}{.24 + .023} = 9.8$ amperes. This gives per hour $9.8 \times 3,600 = 35,280$ coulombs, and for copper deposited $.00033 \times 35,280 = 11.64$ grams.

In many cases one electrode is made of the material to be deposited and being connected to the carbon end of the battery or generator is dissolved as fast as the metal is deposited. In such case there is no counter electro-motive force to be allowed for.

EXAMPLE.

Take the last case and assume one electrode (the anode) to be of copper and to dissolve. Calculate the deposit.

Solution: Current = $3.8 + (.24 + .023) = 14.4$
amperes = 51,840 coulombs per hour = $.00033 \times$
 $51,840 = 17.10$ grams of copper.

CHAPTER IX.

ELECTRO-MAGNETS, DYNAMOS AND MOTORS.

THE MAGNETIC FIELD AND LINES OF FORCE.

A CURRENT of electricity radiates electro-magnetic wave systems, and establishes what is known as a field of force. The field is more or less active or intense according to the force establishing it. The intensity of a field is for convenience expressed in LINES OF FORCE. These are the units of magnetic intensity, often called units of magnetic flux, and the line as a unit is comparable to the ampere $\times 10$, which is the C. G. S. unit of current. A line of force is that quantity of magnetic flux which passes through every square centimeter of normal cross-section of a magnetic field of unit intensity. The line is at right angles to the plane of normal cross-section of such field. Such intensity of field exists at the center of curvature of an arc of a circle of radius 1 centimeter, and whose length is 1 centimeter, when a current of 10 amperes passes through this arc. Practically it is the amount which passes through an area of one square centimeter, situated in the center of a circle 10 centimeters in diameter,

surrounded by a wire through which a current of 7.9578 amperes is passing. The plane of the circle is a cross-sectional plane of the field; a line perpendicular to such plane gives the direction of the lines of force, or of the magnetic flux.

This cross-sectional area is often spoken of as the field of force. As a field exists wherever there are lines of force, there are in each magnetic circuit either an infinite number of fields of force, or a field of force is a volume and not an area.

The number of lines of force or of magnetic flux per unit cross-sectional area of the magnetic circuit, i. e. per unit area of magnetic field, expresses the intensity of the field. In soft iron, it may run as high as 20,000 or more lines per square centimeter of cross-section of the iron which is magnetized.

Just as we might speak of a bar of copper acting as conductor for 20,000 C. G. S. units of current, or 2000 amperes, so we may speak of the iron core of a magnet carrying 20,000 lines of force.

PERMEANCE AND RELUCTANCE.

This action of centralizing in its own material lines of force is analogous to "conductance." It is termed PERMEANCE. Its reciprocal is termed RELUCTANCE, which is precisely analogous to "resistance." Iron, nickel, and cobalt possess high permeance; the permeance of air is taken as unity. At a low degree of magnetization, soft iron pos-

sesses 10,000 times the permeance of air. At high degrees of magnetization, it possesses much less in comparison with air, whose permeance is unchanged under all conditions.

There is no substance of infinitely high reluctance, which is the same as saying that there is no insulator of magnetism.

MAGNETIZING FORCE AND THE MAGNETIC CIRCUIT.

The producing cause of the magnetic flux or magnetization just described is in practice always a current circulating around an iron core. The name of **MAGNETIZING FORCE** is often given to it. It is the analogue of electro-motive force, and is measured by the lines of force it establishes in a field of air of standard area.

A high value for the magnetic force is 585 lines per square centimeter. It is proportional to the amperes of current and to the number of turns the conductor makes around it. Its intensity is often given in ampere-turns.

Magnetization always implies a circuit. As far as known, magnetic lines of force cannot exist without a return circuit, exactly like electric currents. But owing to the imperfect reluctance of all materials, the lines of force can complete their circuit through any substance. In a bar magnet the return branch of the circuit is through air.

In the same magnetic circuit, the planes of normal cross-section lie at various angles with each other.

The law of a magnetic circuit is exactly comparable to Ohm's law. It is as follows:

Rule 63. The magnetization expressed in lines of force is equal to the magnetizing force divided by the reluctance or multiplied by the permeance of the entire circuit.

This rule would be of very simple application, except for the fact that reluctance increases, or permeance decreases, with the magnetization, and the rate of variation is different for different kinds of iron.

Rule 64. Permeability is the ratio of magnetization to magnetizing force, and is obtained by dividing magnetization by magnetizing force.

Permeability has to be determined experimentally for each kind of iron. It is simply the expression of a ratio of two systems of lines of force. It always exceeds unity for iron, nickel, and cobalt. The specific susceptibility of any particular iron to magnetization is its permeability. The susceptibility of a portion, or of the whole of a magnetic circuit is its permeance.

GENERAL RULES FOR ELECTRO-MAGNETS.

The traction of a magnet is the weight it can sustain when attached to its armature. It is pro-

portional to the square of the number of lines of force passing through the area of contact.

Rule 65. The traction of a magnet in pounds is equal to the square of the number of lines of force per square inch, multiplied by the area of contact and divided by 72,134,000. In centimeter measurement the traction in pounds is equal to the square of the number of lines of force per square centimeter multiplied by the area of contact and divided by 11,183,000. The traction in grams is equal to the latter dividend divided by 24,655 ($8\pi \times 981$); for dynes of traction the divisor is 25.132 (8π).

EXAMPLES.

A bar of iron is magnetized to 12,900 lines per square inch; its cross-section is 3 square inches. What weight can it sustain, assuming the armature not to change the intensity of magnetization?

Solution: $12,900^2 \times 3 = 499,230,000$. This divided by 72,134,000 gives 6.914 lbs. traction.

A table calculated by this rule is given. A diminished area of contact sometimes increases traction, and a non-uniform distribution of lines may occasion departures from it. The above rule and the table alluded to are practically only accurate for uniform conditions. The reciprocal of the rule is applied in determining the lines of force of a magnet experimentally.

Rule 66. The lines of force which can pass through a magnet core with economy are determined by the tables, keeping in mind that it is not advisable to let the permeability fall below 200–300. From them a number is taken (40,000 lines per square inch for cast iron or

ELECTRO-MAGNETS, DYNAMOS AND MOTORS. 87

100,000 lines per square inch for wrought iron are good general averages) and is multiplied by the cross-sectional area of the magnet core.

Rule 67. To calculate the magnetizing force in ampere turns required to force a given number of magnetic lines through a given permeance, multiply the desired lines of force by the reluctance determined as below.

Rule 68. a. The reluctance of a core or of any portion thereof for inch measurements is equal to the product of the length of the core or of the portion thereof by 0.3132 divided by the product of its cross-sectional area and permeability.

b. The reluctance for centimeter measurements is equal to the length of the core divided by the product of 1.2566, by the cross-sectional area and the permeability.

EXAMPLES.

440,000 lines are to be forced through a bar of wrought iron 10 inches long and 4 square inches in area; calculate its reluctance and the magnetizing force in ampere turns required to effect this magnetization.

Solution: The reluctance (a) = $10 \times .3132 \div (4 \times \text{permeability})$. 440,000 lines through 4 square inches area is equal to 110,000 lines through 1 square inch; for this intensity and for wrought iron the permeability = 166. $166 \times 4 = 664$. The reluctance therefore = $3.132 \div 664 = .0047$. The magnetizing force in ampere turns = $440,000 \times .0047 = 2068$.

The same number of lines are to be forced through a bar 25.80 square centimeters area and

25.40 centimeters long. Calculate the ampere turns.

Solution: 440,000 lines through 25.80 sq. cent.
 $= \frac{440,000}{25.80} = 17,054$ through 1 sq. cent., for which the permeability = 161. The reluctance therefore, (b)
 $= 25.40 + (1.2566 \times 25.80 \times 161) = .0048$. The ampere turns = $440,000 \times .0048 = 2112$.

MAGNETIC CIRCUIT CALCULATIONS.

Practically useful calculations include always the attributes of a full magnetic circuit, because magnetization can no more exist without a circuit than can an electric current. In practice an electro-magnetic circuit consists of four parts: 1, The magnet cores; 2 and 3, the gaps between armature and magnet ends; 4, the armature core. To calculate the relations of magnetizing force to magnetization the sum of the reluctances of these four parts has to be found. A further complication is introduced by leakage. The permeability of well magnetized iron being so low, not exceeding 150 to 300 times that of air, a quantity of lines leak across through the air from magnet limb to magnet limb. Leakage is included in the sum of the reluctances by multiplying the reluctance of the magnet core by the *coefficient of leakage*, which is calculated for each case by more or less complicated methods. For parallel cylindrical limb magnets the calculation is

exceedingly simple. The calculation in all cases is simplified by the fact already stated, that in air permeability is always equal to unity, whatever the degree of magnetization. For copper and other non-magnetizable metals the variation from unity is so slight that it may, for practical calculations, be treated as unity.

LEAKAGE OF LINES OF FORCE.

Leakage is the magnetic flux through air from surfaces at unequal magnetic potential, such as north and south poles of magnets. It is measured by lines of force and is proportional to the relative permeance of its path.

The coefficient of leakage of a magnetic circuit is the quotient obtained by dividing the total magnetic flux by the flux through the armature. The total magnetic flux is the maximum flux through the magnet core.

Rule 69. To obtain the coefficient of leakage divide the permeance of the armature core and of the two gaps plus one-half the permeance of air between magnet limbs by the permeance of the armature core and of the two gaps.

EXAMPLE.

The total flux through an armature core is found to be at the rate of 70,000 lines per square inch, and the armature core is 3 inches diameter and 10 inches long. The average length of travel of the magnetic

lines through it is $1\frac{1}{2}$ inches. The air gaps are 10×3 inches area and $\frac{1}{8}$ inch thick. The permeance between the limbs of the magnet is 500. Calculate the coefficient of leakage.

Solution: 70,000 lines per square inch gives a permeability of 1,921. By Rule 68 the reluctance of the armature core is $\frac{1\frac{1}{2}}{80 \times 1921} \times .3132 = .000008$. The reluctance of a single air gap is $\frac{\frac{1}{8}}{30} \times .3132 = .0052$. Thus the armature reluctance is so small that it may be neglected. The permeance of the two air gaps is given by $\frac{1}{.0052 \times 2} = 100$ (about). The coefficient of leakage = $\frac{100 + 250}{100} = 3.5$.

As the coefficient of leakage is the factor used in these calculations, the permeance of the leakage paths is the desired factor for its determination. In the case of cylindrical magnet cores parallel to each other, they are obtained from Table XIII. given in its place later. It is thus calculated and used. The least distance separating the cores (b) is divided by the circumference of a core (p) giving the ratio ($\frac{b}{p}$) of least distance apart to perimeter of a core. The number corresponding in columns 3 or 5 is multiplied by the length of a core. The product is the permeance. Columns 2 and 4 give the reluctance. To reduce to average difference of magnetic potential divide by 2.

EXAMPLE.

Calculate the permeance between the legs of a magnet, 3 inches in diameter and 12 inches high and 5 inches apart.

Solution: The perimeter $= 3 \times 3.14 = 9.42$. $\frac{5}{9.42} = \frac{1}{2}$ or .5 nearly. From the table of permeability we find 6.278. Multiplying this by 12 we have $6.278 \times 12 = 75.336$, the permeance. Dividing by 2 we have $\frac{75.336}{2} = 37.668$, the permeance for use in the calculation of leakage coefficient.

It will be observed that this calculation is based entirely on the ratio stated, and that absolute dimensions have no effect on it.

For flat surfaces, parallel and facing each other, the following method precisely comparable to the rule for specific resistance is used:

Rule 70. The permeance of the air space between flat parallel surfaces is equal to their average area multiplied by 3.193 and divided by their distance apart, all in inch measurements.

EXAMPLE.

Determine the permeance between the two facing sides of a square cored magnet 15 inches long, 3 inches wide and 8 inches apart.

Solution: $3 \times 15 = 45$ (the average area); $45 \times 3.193 \div 8 = 17.96$. For use in calculations it should be divided by 2 giving 8.98. This division by 2 is to reduce it to the average difference of magnetic potential between the two magnet legs.

CALCULATIONS FOR MAGNETIC CIRCUITS.

A magnetic circuit is treated like an electric one. The permeance (analogue of conductance) or reluctance (analogue of resistance) is calculated for its four parts, magnet core, two air gaps, and armature core. The leakage coefficient is determined and applied. The requisite magnetizing force is calculated in the form of ampere turns (the analogue of volts of E. M. F.). The preceding leakage rules cover the case of parallel leg magnets. For others a slight change is requisite in the leakage calculations, but in practice an average can generally be estimated.

EXAMPLE.

Assume the magnet and armature of a dynamo. The magnet is of cast iron, each leg is cylindrical in shape, 4 inches in diameter and 20 inches high. From center to center of leg the distance is 9 inches. The armature core of soft wrought iron is 4 inches in diameter and 8 inches long, the pole pieces curving around it are 4 inches, measured on the curve inside, by 8 inches long. The air gap is $\frac{1}{2}$ inch thick. Calculate the reluctance of the circuit and the ampere turns for 500,000 lines of force.

Solution: The pole pieces approach within $2\frac{1}{2}$ inches of each other. This leaves $1\frac{1}{2}$ inches of the diameter of the armature core embedded or included within or embraced by them. One-half of this

amount may be taken and added to $2\frac{1}{2}$ giving $3\frac{1}{2}$ as the average depth of core for an area $4 \times 8 = 32$ square inches. The lines per square inch of armature core are $\frac{500,000}{32} = 15,625$ lines per square inch. By the table of permeability, 4650 is given for permeability for 30,000 lines in soft iron. For 15,625 lines per square inch 9,000 can safely be taken for permeability. Its relative reluctance is therefore $\frac{3\frac{1}{2}}{32 \times 9000} = .000011$ relative armature core reluctance. (1)

The relative reluctance of one air gap (permeability = 1) is $\frac{1}{2} \div 32 = .0078$ and $.0078 \times 2 = .0156 =$ air gaps reluctance (2).

The ratio $\frac{b}{p}$ of the table for determining the leakage between cylindrical magnet legs is $\frac{5}{4 \times 3.14} = .4$. 5 is the distance between the legs. Permeance corresponding thereto is 6.897, which multiplied by 20, the length of the legs, and divided by 2 for average magnetic potential difference gives 68.97 for relative effective permeance (3).

The relative reluctance of the air gaps and armature core is .015611; the reciprocal or permeance is 64.06 (4).

For coefficient of leakage we have $(64.06 + 68.97) \div 64.06 = 2.08$ (5).

To find the relative reluctance of the magnet core whose yoke may be taken as of mean length 9 inches

and of area equal to that of the core ($3.14 \times 2^2 = 12.56$) we have to first determine the permeability. $\frac{500,000}{12.56} = 40,000$ lines per square inch, corresponding to a permeability of 258. For the effective reluctance of the magnet core introducing the factor of leakage (2.08) we have the expression $\frac{(20 + 20 + 9) \times 2.08}{12.56 \times 258} = .0314$.

To get ampere turns, we add the reluctances of circuit, multiply by .3132 and by the required lines, $(.000011 + .0156 + .0314) \times .3132 \times 500,000 = 7362$ ampere turns required.

In the above calculations, the multiplication by .3132 was omitted to save trouble, relative reluctances only being calculated, until the end when one multiplication by .3132 brought out the ampere turns. The leakage appears excessive partly because of the high reluctance of the two air gaps. These should be increased in area and reduced in depth if possible. The leakage is also high on account of the legs of the magnet being close together. Were these separated, a larger armature core might be used, justifying a lower speed or rotation of armature, reducing reluctance of air gaps by increasing their area, and reducing leakage between magnet legs by increasing their distance. The magnet legs might also be made shorter, thus reducing leakage.

Thus assume the magnet core of the same cross-sectional area, but only 10 inches long and with a distance apart of legs of 7 inches, giving a 7×10 inch armature core and pole piece areas (air gap areas) of $7 \times 10 = 70$ sq. inches.

For leakage ratio we have $(\frac{b}{p}) = \frac{7}{12.56} = .56$ giving from the proper table 6.000 (about), $\frac{6.000 \times 10}{2} = 30$ relative permeance of air space between legs.

For air gaps reluctance $\frac{1}{2} + 70 = .00357$ which for the two gaps gives .00714 relative reluctance.

Treating the armature core as a prism $7 \times 10 = 70$ sq. inches area and 5 inches altitude, we have for lines per sq. inch $500,000 \div 70 = 7000$ giving it about 9000 and reluctance as $5 \div (70 \times 9,000) = .000008$ reluctance.

Air gaps and armature core reluctance = .007148
and permeance = $\frac{1}{.007148} = 139$.

Coefficient of leakage = $\frac{139 + 30}{139} = 1.21$.

If the depth of the air gaps was reduced to $\frac{1}{2}$ inch the coefficient of leakage would then be about 1.11.

Every surface in a magnet leaks to other surfaces and the leakage from leg to leg is sometimes but one third of the total leakage. In practice the total leakage often runs as high as 50%, giving a coefficient of 2.00 and in other cases as low as 25%, giving a coefficient of 1.33.

DYNAMO ARMATURES.

An armature of a dynamo generally comprises two parts—the core and the winding. The core is of soft iron. Its object is to direct and concentrate the lines of force, so that as many as possible of them shall be cut by the revolving turns or convolutions of wire. The winding is usually of wire. It is sometimes, however, made of ribbon or bars of copper. Iron winding has also been tried, but has never obtained in practice. The object of the winding is to cut the lines of force, thereby generating electro motive force. The number of the lines of force thus cut in each revolution of the armature is determined from the intensity of the field per unit area, and from the position, area and shape of the armature, coils and pole pieces. The number thus determined, multiplied by the number of times a wire cuts them in a second, and by the effective number of such wires, gives the basis for determining the voltage of the armature.

Rule 71. One volt E. M. F. is generated by the cutting of 10^8 (100,000,000) lines of force in one second.

EXAMPLES.

A single convolution of wire is bent into the form of a rectangle 7×14 inches. It revolves 25 times a second in a field of 20,000 lines per square inch. What E. M. F. will it develop at its terminals?

Solution: The area of the rectangle is $7 \times 14 = 98$

square inches. Multiplying this by the lines of force in a square inch, we have $98 \times 20,000 = 1,960,000$. Each side of the rectangle cuts these lines twice in a revolution, and makes 25 revolutions in a second. This gives $25 \times 2 \times 1,960,000 = 98,000,000$ lines cut per second, corresponding to $98 \times 10^6 \times 10^{-8} = 98 \times 10^{-2} = \frac{98}{100}$ volts E. M. F. generated, or $\frac{98000000}{100000000} = \frac{98}{100}$ volts.

The field of the earth in the line of the magnetic dip = .5 line per square centimeter. Calculate a size, number of layers, and speed of rotation for a one volt earth coil.

Solution: We deduce from the rule the following: Area of coil \times revolutions per sec. \times convolutions of wire $\times .5 \times 10^{-8} = .5$. We may start with revolutions per second, taking them at 20. Next we may take 50,000 convolutions. $20 \times 50,000 \times .5 = 500,000$. This must be multiplied by 200 to give 10^6 ; in other words, the average area within the wire coils must be 100 square centimeters, or 10×10 centimeters. $2 \times 100 \times 2000 \times 500 \times .5 = 10^6$, and $10^6 \times 10^{-8} = 1$ volt.

Rule 72. The capacity of an armature for current is determined by the cross-section of its conductors. This should be such as to allow 520 square mils per ampere = 1923 amperes per square inch area.

EXAMPLE.

A drum armature coil is of 4 inches diameter, and is wound with wire $\frac{1}{16}$ of the periphery of the

drum in diameter; the wire is 100 feet long. Its E. M. F. is 90 volts. What is the lowest admissible external resistance?

Solution: The circumference of the drum is $3.14 \times 4 = 12.56$ inches. The diameter of the wire is $\frac{12.56}{300} = .0418$ in. or 42 mils. The area of the wire is $21^2 \times 3.14 = 1387$ square mils. By the rule the allowable current in amperes for a single lead of such wire is $\frac{1387}{517} = 2.66$ amperes. But on a drum armature the wire lies with two leads in parallel. Hence it has double the above capacity or $2.66 \times 2 = 5.32$ amperes. The resistance of such wire may be taken at .137 ohm. By Ohm's law the total resistance for the current named must be $\frac{90}{5.32}$ or 17 ohms. The external resistance is given by $17 - .137 = 16.863$ ohms.

These two rules enable us to calculate the capacity of any given armature. Certain constants depending on the type of armature have to be introduced in many cases.

DRUM TYPE CLOSED CIRCUIT ARMATURES.

For these armatures the following rules of variation hold, when they do not differ too much in size, and are of identical proportions.

Rule 73. a. The E. M. F. varies directly with the square of the size of core and with the number of turns of wire.

b. The current capacity varies with the sixth root of the size of core for identical E. M. F.

c. The resistance varies directly with the cube of the number of turns and inversely with the size of core.

d. The amperage on short circuit varies directly with the cube of the size and inversely with the square of the number of turns.

In these rules the proportions of the drum are supposed to remain unchanged. Size may be referred to any fixed factor such as diameter, as lineal size is referred to.

These rules enable us to calculate an armature for any capacity and voltage. As a starting point a given intensity of field, speed of rotation, and number of turns of wire and size of wire has to be taken. The wire is selected to completely fill the periphery of the drum. Then a trial armature is calculated of the required voltage and its amperage is calculated. With this as a basis, by applying Rule 73, sections *a* and *b*, the size of an armature for the desired current capacity is calculated, the E. M. F. being kept identical. As a standard for medium sized machines 20% of the turns of wire may be considered inactive.

EXAMPLE.

Calculate a 100 volt, 20 ampere armature, whose length shall be twice its diameter, to work at a speed of 15 revolutions per second.

Solution: Take as intensity of field 20,000 lines per square inch. Allow 80% of active turns of



wire. Start with a core $8 \times 16 = 128$ square inches, including $128 \times 20,000 = 256 \times 10^4$ lines of force. The given speed is 15 rotations per second. For the number of active turns of wire per volt we have to divide 10^8 or 100,000,000 by one half the lines of force cut by one wire per second. This number is $256 \times 10^4 \times 15$, or 38,400,000; and $\frac{100,000,000}{38,400,000} = 2.6$ turns. For 100 volts, therefore, 260 active turns are needed. If one half the lines were not taken the result would be one half as great, because each line cuts each line of force twice in a revolution, and in the computation a single cutting per revolution only is allowed for.

The reason for thus taking one half the lines cut by a single wire as a base is because in the drum armature the wires work in two parallel series, giving one half the possible voltage. The actual turns are $260 \div .80 = 325$, say 324 turns. Assume it to be laid in two layers giving 162 turns to the layer. The space occupied by a wire is equal to the perimeter divided by the number of wires or $\frac{2\pi}{162} = .154$ in. Allowing 25% for thickness of insulation, lost space, etc., we have .115 in. or 115 mils as the diameter of the wire. In the drum armature as just stated the wire is parallel, so that the area of one lead of wire has to be doubled, giving $10,573 \times 2$ square mils as the area of the two parallel leads. This is enough for 40 amperes or double the amperage required. This capacity is reached by taking

520 square mils per ampere as the proper cross-sectional area of the wire. (Rule 72.)

We must therefore reduce the size to give $\frac{1}{2}$ the ampere capacity; this reduction (by Rule 73 *b*) is in the ratio $1 : \frac{1}{2}^{\frac{1}{2}} = 1 : .89018$; the size therefore is $8 \times .89018$ diameter by $16 \times .89018$ length = 7.12×14.24 inches.

Applying *a* for voltage we have for the same number of turns on the new armature a voltage in the ratio of $1 : .89018^2$ or about $\frac{1}{4}$ of that required. We must therefore divide the number of turns in the trial armature by $.89018^2$, giving for the number of turns $\frac{324}{.7924} = 409$, say 410 turns.

To prove the operation we first determine the voltage of the new armature. Its area is $7.12 \times 14.24 = 101.4$ square inches including 2,028,000 lines of force. The active wires are $410 \times .8 = 328$. We have for the voltage = $\frac{4,068,000 \times 164 \times 15}{10^8} = 99.78$ volts.

The relative capacity of the wire is deduced from the square of its diameter. The circumference of the new armature is $7.12 \times 3.14 = 22.3568$. There are 205 turns in a layer giving as diameter of wire $\frac{22.3568}{205} = .1091$ mils. This must be squared, giving .0119, and compared with the square of the corresponding number for the original armature. This number was $25 + .162 = .154$ inch. $.154^2 = .02371$

and $.01190 + .02371 = \frac{1}{2}$ (nearly), showing that the new armature has one half the ampere capacity of the old, or $40 \times \frac{1}{2} = 20$ amperes as required.

The gauge of the wire is reached by making the same allowance for insulation and lost space, viz., 25%. $.1091 \times .75 = .0818$ in. or 81.8 mils diameter, for size of wire. Of course there is nothing absolute about 25% as a loss coefficient; it will vary with style of insulation and even to some extent with the gauge of wire. But as Rule 73 is based upon the assumption that this loss is a constant proportion of the diameter of the wire, too great a variation of sizes should not be allowed in its application. In other words the trial armature should be as near as possible in size to the final one.

Suppose on the other hand that an armature for 100 amperes was required. This is for $2\frac{1}{2}$ times 40 amperes (the capacity of the first calculated or trial armature).

Applying b we extract the 6th root of $2\frac{1}{2}$. $(2\frac{1}{2})^{\frac{1}{6}} = 1.1653$ (by logarithms or by a table of 6th roots). The size of the new armature is therefore 8×1.1653 by 16×1.1653 or 9.3224×18.6448 inches.

Applying a for voltage we have for the same number of turns of the new armature a voltage in the ratio of $1.1653^2 : 1$ or 1.358 times too great. We

must therefore multiply the original turns by the reciprocal of 1.358, giving $\frac{324}{1.358} = 239$ turns.

To prove the voltage, we multiply 239 by .8 for the active turns of wire, giving 191.2 turns. The area of the armature is $9.32 \times 18.64 = 172.7$ square inches. For voltage this gives $172.7 \times 191.2 \times 20,000 \times 15 \times 10^{-8} = 98.6$ volts (about).

To prove the capacity we must divide the circumference of the new armature, $9.32 \times 3.14 = 29.26$ inches, by the turns of wire in one layer, $\frac{29.26}{.24} = 120$ turns (about). This gives a diameter of 244 mils (nearly). The ratio of capacities of the original and this wire is $.244^2 \div .154^2$ inches = $.059536 \div .02371 = 2.51$ corresponding to $40 \times 2.51 = 100$ amperes.

These results, owing to omissions of decimals, do not come out exactly right and it is quite unnecessary that they should. The accuracy is ample for all practical purposes. For armature dimensions it would be quite unnecessary to work out to the second decimal place. It would answer to take as armature sizes in the two cases given $7 \times 14\frac{1}{2}$ inches and $9\frac{1}{4} \times 18\frac{3}{4}$ inches.

It is also to be noted that a very low rate of rotation was taken. 25 to 30 turns per second would not have been too much. The latter would give double the voltage and the same amperage.

FIELD MAGNETS OF DYNAMOS.

The calculation for a magnetic circuit given on

pages 92 et seq., is intended to supply an example of the calculation of the circuit formed by a field magnet and its armature, such as required for dynamos. The leakage of lines of force is and can only be so incompletely calculated that it is probably the best and most practical plan to assume a fair leakage ratio and to make the magnet cores larger than required by the lines of force of the armature in this ratio. A low multiplier to adopt is 1.25, which is lower than obtains in most cases; 1.50 is probably a good average.

Rule 74. The cross-sectional area of the field-magnet cores is equal to the lines of force in the field divided by the magnetic flux (column B) for the material selected and corresponding to the chosen permeability (μ), multiplied by the leakage coefficient.

A good range for permeability is from 200 to 400 giving for wrought iron from 100,000 to 110,000 lines of force per square inch and for cast iron from 35,000 to 45,000 lines per square inch; for the field from 15,000 to 20,000 lines per square inch may be taken.

The permeability table gives data for different qualities of iron.

EXAMPLE.

Taking the 100 volt 100 ampere armature last calculated, determine the size of field-magnet cores to go with it, and the ampere turns and other data.

Solution: Assume 20,000 lines of force per square

inch in the field, 45,000 in cast iron and 110,000 in wrought iron core and a leakage coefficient of 1.25. We have for total lines of force passing through armature $172.7 \times 20,000 = 3,454,000$; cross-sectional area for cast iron core $\frac{3,454,000}{45,000} \times 1.25 = 96$ square inches; cross-sectional area for wrought iron core $\frac{3,454,000}{110,000} \times 1.25 = 39$ square inches.

As length of cores we may take 20 inches with a distance between them of 10 inches. Assume wrought iron to be selected. If cylindrical they would be 7 inches in diameter to give the required cross-sectional area. The yoke connecting them would average in length $10 + 7 = 17$ inches, giving for magnet cores and yoke a length of $17 + 20 + 20 = 57$ inches. The reluctance of cores and yoke (Rule 68) $= \frac{57 \times .3182}{72 \times 200}$ (taking $\mu = 200$) which reduces to .00132 (1).

The armature area is 172.7 inches. As average length of the path of lines of force through it 5 inches may be taken. As it passes only 20,000 lines of force per square inch of field its permeability is high, say 9000. Its reluctance is given by $\frac{5 \times .3182}{172 \times 9000}$.

This is so low that it may be neglected.

The area of each air-gap may be taken as 173 square inches, and of depth of two windings *plus* about $\frac{1}{4}$ inch for clearance or windage giving $(.224 \times 2) + .1 =$ about .6 inch for its depth. Its

reluctance is $\frac{.6 \times .3182}{178} = .00108$. As there are two air gaps we may at once add their reluctances giving .00216 (2).

By Rule 67 the ampere turns are equal to the product of the reluctances (1) and (2), by the lines of force giving $(.00121 + .00216) \times (172.7 + 20,000) = 11640$ ampere turns.

The proper size of wire for series winding may be determined by Sir William Thompson's rule that in series wound dynamos the resistance of the field magnet windings should be $\frac{1}{3}$ that of the armature. The length of the wire in the armature is equal approximately, to the circumference $9.32 \times 3.14 = 29.26$ multiplied by the number of turns (240) giving $29.26 \times 240 = 7022$ inches.

The wire turns on the field magnets are found by dividing the ampere turns by the amperes giving $\frac{11640}{50} = 232$ turns. The circumference of the magnet leg is $7.0 \times 3.14 = 22$ inches. The total length of wire is therefore, approximately, $232 \times 22 = 5104$ inches.

To compare the resistances we must use $\frac{2022}{4}$ for the length of the armature wire, because it is in parallel, and therefore is $\frac{1}{2}$ the length and $\frac{1}{4}$ the resistance of the full wire in one length. Dividing by 4 introduces this factor.

As the resistances of the wires are to be in the ratio of 2 : 3, we have by Rule 13 (calling the thickness of armature wire $244 \times .75 = 183$ mils to allow for

insulation, etc.), $2:3 :: 183^2 \times 5104 : x^2 \times \frac{2022}{4}$, and solving we find $x^2 = 73026 \therefore x = 270$ mils.

For shunt winding Sir William Thompson's rule is that the product of armature and field resistance should equal the square of the external resistance. The latter may be taken (Ohm's law) as equal to $\frac{100 \text{ volts}}{100 \text{ amperes}} = 1 \text{ ohm}$. Properly the armature resistance should be allowed for, but it is so small that it need not be included. We have therefore, armature resistance \times field resistance $= 1^2 \times 1$.

The armature resistance is .0419 ohms. Therefore the field resistance is $\frac{1}{.0419} = 24$ ohms. The current through this is equal to $\frac{100}{24} = 4$ amperes (nearly). Therefore $\frac{11922}{4} = 2910$ turns of wire are needed. The length of such wire will be $\frac{22 \times 2910}{12} = 5335$ feet. The resistance is about 4.4 ohms per 1000 feet corresponding to about .48 mils diameter.

THE KAPP LINE.

Mr. Gisbert Kapp, C. E. who has given much investigation to the problems of the magnetic circuit and especially to dynamo construction, is the originator of this unit. He considered the regular C. G. S. line of force to be inconveniently small. He adopted as a line of force the equivalent of 6000 C. G. S. lines and as the unit of area one square inch. Therefore to reduce Kapp lines to regular lines of force they must be multiplied by 6000, and ordi-

nary lines of force must be divided by 6000 to obtain Kapp lines. These lines are often used by English engineers. The regular system is preferable and by notation by powers of ten can be easily used in all cases.

CHAPTER X.

ELECTRIC RAILWAYS.

SIZES OF FEEDERS.

To calculate the sizes of feeders for a trolley line Rules 23, 24, and 25 in Chapter V. will be found useful in conjunction with the following ones:

A. For load at end of feeders:

Rule 75. The cross-section of the feeder in circular mils is equal to the product of 10.79 times the current in amperes times the length of the conductor in feet, divided by the allowable drop in volts.

EXAMPLE.

What should be the cross section of a feeder 3,000 feet long carrying 90 amperes with 35 volts drop?

Solution: $3,000 \times 90 \times 10.79 = 2,913,300$. Dividing this by 35 gives 83,237 circular mils. This would correspond to a No. 1 wire, which has 83,694 cir. mils area.

All computations of this kind should be checked by table XVI. of current capacity on page 153 in order to be sure that the wire will not become heated above the allowable limit.

Referring the above example to this table, it is seen that a No. 1 wire will carry 80 amperes with a rise in temperature of 18° F., and 110 amperes with a rise of 36° F. Hence the current of 90 amperes will cause a rise of 24° F. This is calculated by simple proportion; subtracting 80 from 90 and from 110 gives 10 and 30 as the respective differences and shows 90 to lie at just one-third the distance from 80 to 110. Hence the resulting temperature rise will be at one-third the distance between 18° and 36° . The difference between these last two figures is 18° , one-third of which is 6° . Add this 6° to 18° gives us 24° F. as the answer.

It is often desirable to compute the drop on a feeder carrying a given current; this is done by the following:

Rule 76. The drop in volts on any conductor is found by multiplying together 10.79, the current in amperes and its length in feet, then divide this product by its area in circular mils.

EXAMPLE.

What is the drop on a feeder 2,800 feet long, of 105,592 cir. mils area and carrying a current of 125 amperes?

Solution: $10.79 \times 125 \times 2,800 = 3,776,500$.

Dividing this product by 105,592 gives 35.76 volts drop.

B. For a uniformly distributed load:

The effect of a uniform distribution of load along a main or trolley wire is the same as that of half the total current passing the full length of the wire; hence we require but half the cross-section needed to deliver the current at the extremity of the wire.

This is readily done by substituting the constant 5.4 in place of 10.79 in the foregoing rules.

In designing electric railway circuits where the track forms the path for the return current the rails should be of ample area and well bonded, with an extra bare wire connected to the bonds and materially reducing the drop in the track circuit.

POWER TO MOVE CARS.

At ordinary speeds on a level track in average condition it is safe to assume that the force necessary to move a car is 30 pounds per ton of weight of car.

Rule 77. To find the force required to pull or push a car on a level track in average condition, multiply the weight of the car in tons by 30.

EXAMPLE.

Find the force required to drag a car weighing 7 tons on a level track.

Solution: $7 \times 30 = 210$ lbs. Ans.

Should it be required to find the force needed to start a car on a level, or to propel it when rounding a curve, substitute the constant 70 in place of 30 in the foregoing rule.

EXAMPLE.

What force is needed to start an 8 ton car on a level track?

Solution: $8 \times 70 = 560$ pounds. Ans.

As the above does not take into account the speed of the car we shall have to add this factor in order to find the horse power needed to move it; we will also allow for the efficiency of the motors.

Rule 78. To find the horse power required to move a car along a level track multiply together the distance in feet traveled per minute and the force in pounds necessary to move the car (as found by Rule 77), and divide the result by 33,000 times the efficiency of the motors.

EXAMPLE.

What horse power is needed to propel a loaded car weighing 9 tons along a level track at the rate of 800 feet per minute, with motors of 70 per cent. efficiency?

Solution: Force to move car is $9 \times 30 = 270$ pounds. The product of $800 \times 270 = 216,000$ foot pounds per minute. Dividing this by 33,000 gives 6.54 H. P. required to propel the car. Dividing by the efficiency .70 gives 9.34 H. P. to be delivered to the motors.

It will be noted in this solution that the quantity 216,000 should, according to the rule, have been divided by the product of 33,000 times .70; it was,

however, divided by these two factors successively in order to show the difference between the power actually moving the car and that supplied to the motors.

In computing the power taken by a car ascending a grade the equivalent perpendicular rise of the car together with its weight in pounds have to be considered in addition to the factors involved in the rule just preceding.

Rule 79. To find the horse power required to propel a car up a grade, take the product of the perpendicular distance in feet ascended by the car in one minute multiplied by its weight in pounds; to this add the product of the horizontal distance in feet traveled in one minute multiplied by the force in pounds required to propel the car; divide this sum by 33,000 times the efficiency of the motors.

Note.—The *grade* of a road or track is generally stated as being so many per cent. This means that for any given horizontal travel of a car its change of altitude when referred to a fixed horizontal plane is expressed as a certain percentage of the horizontal travel. For illustration; if a car while traveling horizontally 100 feet has a total vertical rise (or fall) of 7 feet, the incline on which it moves is termed a 7 per cent grade.

EXAMPLE.

Find the electrical horse power taken by the motors of an 8 ton car to propel it up a 5 per cent grade at

a speed of 1,000 feet per minute, the motors having 70 per cent efficiency.

Solution: Perpendicular rise of car is 1,000 feet $\times .05 = 50$ feet. Weight of car in pounds is $8 \times 2,000 = 16,000$ pounds. Product of lift and weight is $50 \times 16,000 = 800,000$ foot pounds. Force required to propel car is $30 \times 8 = 240$ pounds. Product of force and distance is $240 \times 1,000 = 240,000$ foot pounds. Sum of the two products is $800,000 + 240,000 = 1,040,000$ total foot pounds.

Product of 33,000 by efficiency is $33,000 \times .70 = 23,100$. Electrical H. P. is the quotient of $1,040,000 \div 23,100 = 45.021$ H. P. **Ans.**

CHAPTER XI.

ALTERNATING CURRENTS.

By far the greater part of calculations in the domain of alternating currents lie in the realm of trigonometry and the intricacies of the calculus. On this account it is hoped that the following presentation of some of the simpler formulæ may prove welcome to the craft.

A current flowing alternately in opposite directions may be considered as increasing from zero to a certain amount flowing in, say, the positive direction, then diminishing to zero and increasing to an equal amount flowing in the negative direction and again decreasing to a zero value. This action is repeated indefinitely. The sequence of a positive and negative current as just described is called a *cycle*.

The *frequency* of an alternating current is the number of cycles passed through in one second. An *alternation* is half a cycle. That is to say, an alternation may be taken as either the positive or the negative wave of the current.

The frequency may be expressed not only in cycles per second but in alternations per minute.

Since one cycle equals two alternations we can interchange these expressions as follows:

Rule 80. A. Having given the cycles per second, to find the alternations per minute multiply the cycles per second by 120; B. Having given the alternations per minute, to find the cycles per second divide the alternations per minute by 120.

EXAMPLES.

If a current has 60 cycles per second, how many alternations are there per minute?

Solution: $60 \times 120 = 7,200$ alternations.

A current has 15,000 alternations per minute; how many cycles per second are there?

Solution: $15,000 \div 120 = 125$ cycles per second.

A bipolar dynamo having an armature with but a single coil wound upon it (like an ordinary magneto generator) gives one complete cycle of current for every revolution of the armature. That is to say, its frequency equals the number of revolutions per second. A four-pole generator will have a frequency equal to twice the revolutions per second, etc.

Rule 81. To find the frequency of any alternator, divide the revolutions per minute by 60 and multiply the quotient by the number of pairs of poles in the field.

EXAMPLE.

Find the frequency of a 16-pole alternator running at 937.5 revolutions per minute.

Solution: $937.5 \div 60 = 15.625$ rev. per second.
 $15.625 \times 8 =$ frequency of 125 cycles per second.

Electrical measuring instruments used on alternating currents do not indicate the maximum volts or amperes of such circuits, but the *effective* values are what they show. These effective values are the same as those of a continuous current performing the same work.

Rule 82. The maximum volts or amperes of an alternating current may be found by multiplying the average volts or amperes by 1.11. Reciprocally, the average values can be found by taking .707 times the maximum values.

Note that these figures are strictly true only for an exactly sinusoidal current.

EXAMPLE.

Find the maximum pressure of an alternating current of 55 volts.

Solution: $55 \times 1.11 = 61.05$ volts. Ans.

SELF-INDUCTION.

In an alternating current circuit the flow of a current under a given voltage is determined not only by the resistance of the conductor in ohms but also by the *self-induction* of the circuit. Suppose a current to start at zero and increase to 10 amperes in a coil of 1,000 turns of wire. This magnetizing force, growing from zero to 10,000 ampere-turns, surrounds the coil with lines of force whose action

upon the current in the coil is such as to resist its increase. Conversely, when the current is decreasing from 10 amperes to zero, the lines of force change their direction and tend to prolong the flow of current. This opposing effect which acts on a varying or an alternating current is called the *counter E. M. F.* or *E. M. F. of self-induction* and is measured in volts.

Rule 83. The *E. M. F. of self-induction* of a given coil is found by multiplying together 12.5664, the total number of turns in the coil, the number of turns per centimeter length of the coil, the sectional area of the core of the coil in square centimeters, the permeability of the magnetic circuit and the current; divide the resulting product by 1,000,000,000, multiplied by the time taken by the current to reach its maximum value.

EXAMPLE.

Find the volts of counter *E. M. F.* in a coil of 300 turns wound uniformly on a ring made of soft iron wire, the ring having a mean circumference of 60 centimeters and an effective sectional area of 25 square centimeters; its permeability to be taken as 200, and a current of 5 amperes in the coil requires .02 second to reach its maximum value.

Solution: Product of $12.5664 \times 300 \times 5 \times 25 \times 200 \times 5$ is 471,240,000. Product of $10^9 \times .02$ is 20,000,000. Dividing the former product by the latter gives 23.562 volts, Answer.

The *coefficient of self-induction* or, as it is more

frequently termed, the *inductance* of a coil, is measured by the number of volts of counter E. M. F. when the current changes at the rate of one ampere per second. (Atkinson.)

The unit of inductance is the *henry*.

Rule 84. The inductance of a coil is found by multiplying together 12.5664, the total number of turns in the coil, the number of turns per centimeter length, the sectional area of the core of the coil in square centimeters, and the permeability of the magnetic circuit; divide the resulting product by 1,000,000,000.

EXAMPLE.

Find the inductance of the coil specified in the preceding example.

Solution: The factors are the same as before, omitting the current and time. Product of $12.5664 \times 300 \times 5 \times 25 \times 200$ is 94,848,000. Dividing this by 1,000,000,000 gives the inductance .094248 henrys.

The E. M. F. of self-induction may be computed when the inductance, the current and the time taken for the current to reach its maximum are known.

Rule 85. To find the E. M. F. of self-induction divide the product of the inductance and current by the time of current rise.

EXAMPLE.

Using again the data of the foregoing examples, find the counter E. M. F., the inductance being

.094248 henrys, the current 5 amperes, and the time .02 second.

Solution: $5 \times .094248 = .47124$; dividing this by .02 gives 23.562 volts, as before.

Rule 86. The resistance due to self-induction equals 6.2832 times the product of the frequency and the inductance.

EXAMPLE.

Find the inductive resistance of a circuit whose frequency is 60 cycles per second and the inductance is .05 henry.

Solution: $6.2832 \times 60 \times .05 = 18.8496$ ohms.

Ans.

The *time constant* of an inductive circuit is a measure of the growth or increase of the current. It is the time required by the current to rise from zero to its average value. The average value of an alternating current is .634 times its maximum value. It must not be confused with its effective value, which is .707 times the maximum.

The average value may be obtained by multiplying the effective value, as shown by instruments, by .897.

Rule 87. To find the time constant of a coil or circuit, divide its inductance by its resistance.

EXAMPLE.

What is the time constant of a coil whose inductance is 3.62 henrys and resistance is 20 ohms.

Solution: $3.62 \div 20 = .181$ second. **Ans.**

CHAPTER XII.

CONDENSERS.

A condenser, though it will allow no current to pass through it, yet it will accumulate or store up a quantity of electricity depending on various factors which the following rules will show:

Rule 88. The quantity stored equals the product of the E. M. F. applied and the capacity of the condenser.

$$Q = EC.$$

Rule 89. The capacity of a condenser equals the quantity stored divided by the applied E. M. F.

$$C = \frac{Q}{E}$$

Rule 90. The E. M. F. applied to a condenser equals the quantity stored divided by its capacity.

$$E = \frac{Q}{C}$$

The quantity stored in a condenser is measured in coulombs (i. e., ampere-seconds); the E. M. F. in volts, and the capacity in farads. Condensers in practical use have, however, so small a capacity that

it is usually stated in microfarads and the quantity in microcoulombs.

EXAMPLES.

A battery of 30 volts E. M. F. is connected to a condenser whose capacity is one half microfarad. What quantity of electricity will be stored?

Solution: 30 volts \times .0000005 farads = .000015 coulombs. This solution could also be given directly in micro-quantities, thus: 30 volts \times $\frac{1}{2}$ microfarad = 15 microcoulombs.

A condenser is charged with 7.5 microcoulombs under an E. M. F. of 15 volts. What is its capacity?

Solution: 7.5 microcoulombs \div 15 volts = .5 microfarad. Ans.

What E. M. F. is required to charge a condenser whose capacity is .1 microfarad with 21 microcoulombs of electricity?

Solution: 21 microcoulombs \div .1 microfarad = 210 volts. Ans.

By connecting condensers in *parallel* the resulting capacity is the *sum* of their individual capacities. When they are connected in *series* the resulting capacity equals 1 divided by the sum of the reciprocals of their individual capacities. It will be noticed that these laws of condenser connections are the inverse of those for the parallel and series connection of resistances.

When applying a direct current to a condenser, as in the above examples, it flows until the increasing charge opposes an E. M. F. equal to that of the charging current.

With an alternating current a charge would be surging in and out of the condenser, so that a real current will be flowing on the charging wires in spite of the fact that the actual resistance of a condenser, in ohms, is practically infinite.

Rule 91. The alternating current in a circuit having capacity equals the product of 6.2832, the frequency, the capacity, and the applied voltage.

EXAMPLE.

Find the current produced by an E. M. F. of 50 volts and a frequency of 60 cycles per second in a circuit whose capacity is 125 microfarads.

Solution: The capacity 125 microfarads equals .000125 farads.

$$6.2832 \times 60 \times .000125 \times 50 = 2.3562 \text{ amperes.}$$

Ans.

Rule 92. The alternating E. M. F. required to be impressed upon a circuit of a given capacity in order to produce a certain current is equal to the current divided by 6.2832 times the product of the capacity and the frequency.

EXAMPLE.

Find the E. M. F. necessary to produce an alternating current of 50 amperes at 50 cycles per second in a circuit of 80 microfarads capacity.

$$\text{Solution: } 6.2832 \times .000080 \times 50 = .0251328$$

Dividing the current 50 amp. by .0251328 gives 2,000 volts, nearly.

Since, in a condenser circuit, a real current flows under a given E. M. F., the circuit may be treated as though it was of a resistance such as would allow the given current to flow.

Rule 93. The resistance due to capacity equals 1 divided by the product of 6.2832, the frequency and the capacity.

EXAMPLE.

Find the capacity resistance of a circuit having a frequency of 60 cycles per second and a capacity of 50 microfarads.

Solution: $6.2832 \times 60 \times .000050 = .01885$.
 $1 \div .01885 = 53$ ohms, very nearly.

By comparing this Rule 93 for capacity resistance with Rule 86 on page 120, which is for inductive resistance, it will be seen that they are mutually reciprocal and hence the effect of capacity is directly opposite to that of self-induction and *vice versa*.

It follows from this that it is possible, by the proper proportioning of the inductance and the capacity, to have their effects neutralized, and when this adjustment is effected the current will be controlled by the volts and ohmic resistance the same as if it were a direct current circuit.

The *impedance* is the apparent resistance of an alternating current circuit.

Rule 94. To find the impedance of a circuit whose ohmic resistance can be neglected and which has an inductance and a capacity in series, calculate both the inductive resistance and the capacity resistance; their difference will be the impedance.

EXAMPLE.

Find the current produced by an alternating E. M. F. of 40 volts on a circuit of slight ohmic resistance whose capacity is 100 microfarads, the frequency being 60 cycles per second, and having in series an inductance of .02 henry.

Solution: Inductive resistance is $6.2832 \times 60 \times .02 = 7.42$; capacity resistance is $1 \div 6.2832 \times 60 \times .000100 = 1 \div .0377 = 26.52$.

Impedance = $26.52 - 7.42 = 19.1$ ohms.

Current, by Ohm's Law, = $40 \div 19.1 = 2.08$ amperes. **Ans.**



CHAPTER XIII.

DEMONSTRATION OF RULES.

In the following chapter we give the demonstration of some of the rules. As this is not within the more practical portion of the work, algebra is used in some of the calculations. It is believed that rules not included in this chapter, if not based on experiment, are such as to require no demonstration here.

Rule 1 to 6, pages 13 and 14. Ohm's law was determined experimentally, and all the six forms given are derived by algebraic transposition from the first form which is the one most generally expressed.

Rule 8, page 19. This is simply the expression of Ohm's law as given in Rule 1, because in the case of divided circuits branching from and uniting again at common points, it is obvious that the difference of potential is the same for all. Hence the ratio as stated must hold.

Rule 9, page 20. This rule is deduced from Rule 8. It first expresses by fractions the relations of the current. Next these fractions are reduced to a common denominator, so as to stand to each other in

the ratio of their numerators. By applying the new common denominator made up of the sum of the numerators the ratio of the numerators is unchanged, and the ratio of the new fractions is the same as that of their numerators, while by this operation the sum of the new fractions is made equal to unity. Thus by multiplying the total current by the respective fractions it is divided in the ratio of their numerators, which are in the inverse ratio of the resistances of the branches of the circuit and as the sum of the fractions is unity, the sum of the fractions of the current thus deduced is equal to the original current.

Rule 10, page 22. Resistance is the reciprocal of conductance. By expressing the sum of the reciprocals of the resistances of parallel circuits we express the conductance of all together. The reciprocal of this conductance gives the united resistance.

Rule 11, page 22. This is a form of Rule 10. Call the two resistances x and y . The sum of their reciprocals is $\frac{1}{x} + \frac{1}{y}$ which is the conductance of the two parallel circuits or parts of circuits. Reducing them to a common denominator we have: $\frac{y}{xy} + \frac{x}{xy}$ which equals $\frac{x+y}{xy}$, whose reciprocal is $\frac{xy}{x+y}$.

Rule 17, page 31. Taking the diameter of a wire as d , its cross sectional area is $\frac{\pi d^2}{4}$. The resistance is inversely proportional to this or varies directly with $\frac{4}{\pi d^2} = \frac{1.2737}{d^2}$. As the resistance of a conductor

varies also with its length and specific resistance we have as the expression for resistance:

$$\frac{\text{Sp. Res.} \times 1.2737 \times l}{d^2}$$

Rule 18, page 32. Assume two wires whose lengths are l and l_1 , their cross sectional areas a and a_1 , their specific resistances s and s_1 , and their resistances r and r_1 . From preceding rules we have for each wire: $r = s \frac{l}{a}$ (1) and $r_1 = s_1 \frac{l_1}{a_1}$ (2).

Dividing (1) by (2) we have:

$$\frac{r}{r_1} = \frac{s}{s_1} \times \frac{l}{l_1} \times \frac{a_1}{a} \quad (3). \quad (\text{Day})$$

If we take the reciprocal of either member of this equation and multiply the other member thereby it will reduce it to unity, or:

$$\frac{r_1}{r} \times \frac{s}{s_1} \times \frac{l}{l_1} \times \frac{a}{a_1} = 1$$

For convenience this is put into a shape adapted for cancellation.

Rule 20, page 38. This is merely the expression of Ohm's Law, Rule 3.

Rule 22, page 40. Call the drop e , the combined resistance of the lamps R , and the resistance of the leads x . Then as the whole resistance is expressed as 100 (because the work is by percentage) the difference of potential for the lamps is $100 - e$. By Ohm's law we have the proportion: $100 - e : e :: R : x$ or

$$x = \frac{e R}{100 - e}$$

Rule 25, page 44. From Rule 22 we have:

$$x = \frac{e R}{100 - e} \quad (1)$$

Call the resistance of a single lamp r , then we have by Rule 12:

$$R = \frac{r}{n} \quad (2)$$

Substituting this value of R in equation (1) we have:

$$x = \frac{er}{n \times (100 - e)} \quad (3)$$

From Rule 24 we have, calling the cross-section a :

$$a = \frac{l \times 10.79}{x} \quad (4)$$

Substituting for x its value from equation (3) we have:

$$a = \frac{l \times 10.79 \times n \times (100 - e)}{er} \quad (5)$$

But as l expresses the length of a pair of leads, not the total length of lead but only one-half the total, the area should be twice as great. This is effected by using the constant $10.79 \times 2 = 21.58$ in the equation giving:

$$a = \frac{l \times 21.58 \times n \times (100 - e)}{er}$$

Rule 28, page 48. Assuming the converter to work with 100% efficiency (which is never the case), the watts in the primary and secondary must be equal to each other or:

$$C^2 R = C_1^2 R_1, \text{ and } R = \frac{C_1^2}{C^2} R_1,$$

or the resistances of primary and secondary are in the ratio of the squares of the currents. The direct ratio is expressed by the ratio of conversion, when squared it gives the ratio of the squares as required.

Rule 37, page 59. Let d = diameter of the wire in centimeters. The resistance of one centimeter of such a wire in ohms = Sp. Resist. $\times 10^8 \times \frac{4}{\pi d^2}$. The specific resistance is here assumed to be taken in microhms. The quantity of heat in joules developed in such a wire in one second is equal to the square of the current in C. G. S. units, multiplied by the resistance in C. G. S. units and divided by 4.16×10^7 , the latter division effecting the reduction to joules. 1 ohm = 10^9 C. G. S. units of resistance. Multiplying the expression for ohmic resistance by 10^9 we have: Sp. Resist. $\times 10^8 \times \frac{4}{\pi d^2}$. 1 ampere = 10^{-1} C. G. S. unit. If we express the current in amperes we must multiply it by 10^{-1} , in other words take one-tenth of it. Our expression then becomes for heat developed in one second

$$\left(\frac{c}{10}\right)^2 \times \frac{\text{Sp. Resist.} \times 10^8 \times 4}{\pi d^2 \times 4.16 \times 10^7}$$

The area of one centimeter of the wire is πd square centimeters. The heat developed per square centimeter is found by dividing the above expression by πd giving:

$$\left(\frac{c}{10}\right)^2 \times \frac{\text{Sp. Resist.} \times 10^8 \times 4}{\pi^2 d \times 4.16 \times 10^7}$$

The heat developed is opposed by the heat lost which we take as equal to $\frac{1}{1000}$ per square centimeter per degree Cent. of excess above surrounding medium. Therefore taking t° as the given tempera-

ture cent. we may equate the loss with the gain, thus:

$$\begin{aligned} \frac{t^{\circ}}{4000} &= \left(\frac{c}{10}\right)^3 \times \frac{\text{Sp. Resist.} \times 10^3 \times 4}{\pi^2 d^3 \times 4.16 \times 10^7} \\ d^3 &= \frac{c^3 \times \text{Sp. Resist.} \times 10^3 \times 4 \times 40000}{\pi^2 \times 4.16 \times 10^7 \times t^{\circ}} = \\ &\quad \frac{c^3 \times \text{Sp. Resist.} \times .00089}{t^{\circ}} \end{aligned}$$

Rule 51, page 69. Call the external resistance r ; number of cells n ; resistance of one cell R ; E. M. F. of one cell E ; E. M. F. of outer circuit e .

Then from Ohm's law we have:

$$C = \frac{nE}{nR + r} \quad (1)$$

which reduces to:

$$n = \frac{Cr}{E - CR} \quad (2)$$

but $Cr = e$.

$$\therefore n = \frac{e}{E - CR} \quad (3)$$

Rule 54, page 72. This rule is deduced from the following considerations. The current being constant the work expended in the battery and external circuit respectively will be in proportion to their differences of potential or E. M. F's. But these are proportional to the resistances. Therefore the resistance of the external circuit r should be to the resistance of the battery R as efficiency: $1 - \text{efficiency}$ or $r : R :: \text{efficiency} : 1 - \text{efficiency}$ or $R = \frac{(1 - \text{efficiency}) \times r}{\text{efficiency}}$. The rest of the rule is deduced from Ohm's law.

Rule 57, page 74. This rule gives the nearest approximation attainable without irregular arrangement of cells. By placing some cells in single series and others two or more in parallel, an almost exact arrangement for any desired efficiency can be obtained. Such arrangement are so unusual that it is not worth while to deduce any special rule for them. Thus taking the example given on page 74 the impossible arrangement of 1.4 cells in parallel and 63 in series would give the desired current and efficiency. The same result can be obtained by taking 72 cells in 36 pairs with a resistance of $36 \times \frac{1}{2} = 3$ ohms, and adding to them 27 cells in series with a resistance of $27 \times \frac{1}{3} = 4\frac{1}{2}$ ohms, a total of $7\frac{1}{2}$ ohms. The E. M. F. is equal to $(36 + 27) \times 2 = 126$ volts. The total cells are $72 + 27 = 99$.

Rule 58, page 76. One coulomb of electricity liberates from an electrolyte .000010384 gram of hydrogen. This has been determined experimentally. Let H be the heat liberated by the chemical combining weight of any body combining with another. H is taken in kilogram calories. Hence it follows that for a quantity of the substance equal to .000010384 gram \times chemical combining weight, the heat liberated will be equal to $H \times .000010384$, which corresponds to a number of kilogram meters of work expressed by $.000010384 \times H \times 424$. The work done by a current in kilogram-meters =

44

$\frac{\text{volts} \times \text{coulombs}}{9.81}$ or for one coulomb = $\frac{\text{volts}}{9.81}$. This expresses the work done by one coulomb. Let the volts = E , and equate these two expressions:

$$\frac{E}{9.81} = .000010384 \times H \times 424,$$

which reduces to

$$E = H \times .043.$$

Rule 61, page 78. For the work (in kilogram-meters) done by a current (volt-coulombs) we have the general expression:

$$W = \frac{\text{volts} \times \text{coulombs}}{9.81} \text{ or } \frac{E Q}{9.81} \quad (1)$$

Making $W = 1$ (i. e. one kilogram-meter) and transforming, we have, as the coulombs corresponding to 1 kilogram-meter:

$$Q = \frac{9.81}{E} \quad (2)$$

One coulomb of electricity liberates a weight (in grams) of an element equal to the product of the following: .000010384 \times equivalent of element in question \times number of equivalents \div valency of the element. Therefore, the coulombs corresponding to one kilogram-meter, liberates this weight multiplied by $\frac{9.81}{E}$ or, indicating weight by G ,

$$G = \frac{.000010384 \times \text{equiv.} \times \text{number equiv.}}{\text{valency}} \times \frac{9.81}{E} \quad (3)$$

$$\text{but } .000010384 \times 9.81 = .000101867.$$

$$\therefore G = \frac{\text{equiv.} \times n \times .000101867}{E \times \text{valency}} \quad (4)$$

Rule 73, page 98-99. The voltage of an armature of

a definite number of turns of wire and a fixed speed, varies with the lines included within its longitudinal area, as such lines are cut in every revolution. These lines vary with its area, and the latter varies with the square of its linear dimensions.

To maintain a constant voltage if the size is changed, the number of turns must be varied inversely as the square of the linear dimensions. This ensures the cutting of the same number of lines of force per revolution.

If, therefore, its size is reduced from x to $\frac{1}{x}$ the turns of wire must be changed from x to x^2 . The relative diameters of the two sizes of wire is found by dividing a similar linear dimension by the relative size of the wire. But $\frac{1}{x} + x^2 = \frac{1}{x^3} = \text{diameter of the wire for maintenance of a constant voltage with change of size.}$

The capacity of a wire varies with the square of its diameter and $(\frac{1}{x^3})^2 = \frac{1}{x^6}$.

Therefore the amperage, if a constant voltage is maintained, will vary inversely as the sixth power of the linear dimensions of an armature.

CHAPTER XIV.

NOTATION IN POWERS OF TEN.

THIS adjunct to calculations has become almost indispensable in working with units of the C. G. S. system. It consists in using some power of 10 as a multiplier which may be called the factor. The number multiplied may be called the characteristic. The following are the general principles.

The power of 10 is shown by an exponent which indicates the number of ciphers in the multiplier. Thus 10^2 indicates 100; 10^3 indicates 1000 and so on.

The exponent, if positive, denotes an integral number, as shown in the preceding paragraph. The exponent, if negative, denotes the reciprocal of the indicated power of 10. Thus 10^{-2} indicates $\frac{1}{100}$; 10^{-3} indicates $\frac{1}{1000}$ and so on.

The compound numbers based on these are reduced by multiplication or division to simple expressions. Thus: $3.14 \times 10^7 = 3.14 \times 10,000,000 = 31,400,000$. $3.14 \times 10^{-7} = \frac{3.14}{10,000,000}$ or $\frac{314}{1,000,000,000}$. Regard must be paid to the decimal point as is done here.

To add two or more expressions in this notation if the exponents of the factors are alike in all respects, add the characteristics and preserve the same factor. Thus:

$$(51 \times 10^6) + (54 \times 10^6) = 105 \times 10^6.$$

$$(9.1 \times 10^{-9}) + (8.7 \times 10^{-9}) = 17.8 \times 10^{-9}.$$

To subtract one such expression from another, subtract the characteristics and preserve the same factor. Thus:

$$(54 \times 10^6) - (51 \times 10^6) = 3 \times 10^6.$$

If the factors have different exponents of the same sign the factor or factors of larger exponent must be reduced to the smaller exponent, by factoring. The characteristic of the expression thus treated is multiplied by the odd factor. This gives a new expression whose characteristic is added to the other, and the factor of smaller exponent is preserved for both.

Thus:

$$(5 \times 10^7) + (5 \times 10^9) = (5 \times 10^7) + (5 \times 100 \times 10^7) = 505 \times 10^7.$$

The same applies to subtraction. Thus:

$$(5 \times 10^9) - (5 \times 10^7) = (5 \times 100 \times 10^7) - (5 \times 10^7) = 495 \times 10^7.$$

If the factors differ in sign, it is generally best to leave the addition or subtraction to be simply ex-

pressed. However by following the above rule it can be done. Thus:

Add 5×10^3 and 5×10^3 .

$5 \times 10^3 = 5 \times 10^5 \times 10^{-3}$; $(5 \times 10^5 \times 10^{-3}) + (5 \times 10^5 \times 10^{-3}) = 500005 \times 10^{-3}$. This may be reduced to a fraction $\frac{500005}{100} = 5000.05$.

To multiply add the exponents of the factors, for the new factor, and multiply the characteristics for a new characteristic. The exponents must be added algebraically: that is, if of different signs the numerically smaller one is subtracted from the other one, its sign is given the new exponent.

Thus:

$$(25 \times 10^6) \times (9 \times 10^8) = 225 \times 10^{14}.$$

$$(29 \times 10^{-6}) \times (11 \times 10^7) = 319 \times 10^{-1}.$$

$$(9 \times 10^8) \times (98 \times 10^{-9}) = 882 \times 10^0.$$

To divide, subtract (algebraically) the exponent of the divisor from that of the dividend for the exponent of the new factor, and divide the characteristics one by the other for the new characteristic. Algebraic subtraction is effected by changing the sign of the subtrahend, subtracting the numerically smaller number from the larger, and giving the result the sign of the larger number. (Thus to subtract 7 from 5 proceed thus: $5 - 7 = -2$.)

Thus:

$$(25 \times 10^6) \div (5 \times 10^8) = 5 \times 10^{-2}$$

$$(28 \times 10^{-6}) \div (5 \times 10^8) = 5.6 \times 10^{-11}.$$

TABLES.

I—EQUIVALENTS OF UNITS OF LENGTH.

	Millimeter	Centim ^{ts}	Meter	Kilometer	Mile	Inch	Foot	Yard	Mile (Statute)	Mile (Geog. h. l.)
Millimeter	1	.1	.001	.000001	39.37079	.039371	.003281	.001094	.0000006	.0000007
Centimeter	10	1	.01	.00001	393.7079	.3937079	.032809	.010936	.0000062	.000007
Meter	1000	100	1	.001	39,370.79	39.37079	3.28090	1.09363	.000621	.000716
Kilometer	1,000,000	100,000	1000	1		39,370.79	3,280.899	1093.633	.621362	.716330
Mile	.025399	.0025399	.0000254		1	.001	.000083	.000028		
Inch	25.3994	2.53994	.025399	.0000254	1000	1	.083333	.027777	.0000158	.000015
Foot	304.7945	30.47945	.304795	.0003048	12000	12	1	.333333	.000189	.000164
Yard	914.3835	91.43835	.914384	.0009144	36000	36	3	1	.00068	.000483
Mile (Statute)		160,934.4	1,609.314	1.609314		63,360	5280	1760	1	.868382
Mile (Geograph.)		185,320	1853.20	1.85320		72,963.2	6080.27	2026.76	1.1516	1

II.—EQUIVALENTS OF UNITS OF AREA.

	Square Millimeter	Square Centimeter	Circular Mil.	Square Mil.	Square Inch.	Square Foot.
Square Millimeter	1	0.01	1978.6	1550.1	.00155	.0000108
Square Centimeter	100	1	197,861	155,007	.155007	.001076
Circular Mil.	.000507	.0000051	1	.78540	8X10 ⁻⁷	
Square Mil.	.000645	.0000065	1.2788	1	.000001	
Square Inch	645.182	6.451	1,278,288	1,000,000	1	.006944
Square Foot	42,898.9	928.989			144	1

III.—EQUIVALENTS OF UNITS OF VOLUME.

	Cubic Inch	Fluid Ounce	Gallon	Cubic Foot	Cubic Yard	Cu. Cen- timeter	Liter	Cubic Meter
Cubic Inch	1	.554112	.004829	.000578		16.3862	.016896	
Fluid Oz.	1.80469	1	.007812	.001044		29.5720	.029572	
Gallon	231	128	1	.188681	.00495	8785.21	8.78521	.008785
Cubic Ft.	1728	957.506	7.48052	1	.087087	28315.8	28.3158	.028315
Cubic Yd.	46,656	25,852.6	201.974	27	1	764,505	764.505	.764505
Cu. Centl.	.061027	.038816	.000264	.000035		1	.001	.000001
Liter	61.027	88.8160	.264189	.035317		1000	1	.001
Cu. Meter	61027	88816	264.189	85.8169	1.3080		1000	1

IV.—EQUIVALENTS OF UNITS OF WEIGHT.

	Grain.	Troy Ounce.	Pound Avo.	Ton.	Milli- gram.	Gram.	Kilo- gram.	Metric Ton.
Grain	1	.020833	.000143		64.799	.064799	.000065	
Troy Ounce	480	1	.068641		31,103.5	31.1035	.031104	
Pound Avo.	7,000	14.5833	1	.000447		453.593	.453593	.000454
Ton		32,666.6	2240	1			.001016	1.01605
Milligram	.015432	.000082	.000002		1	.001	.000001	
Gram	15.4323	.032151	.002205		1000	1	.001	
Kilogram	15,432.3	32.1507	2.20462	.000934	1,000,000	1000	1	.001
Metric Ton		32,150.7	2204.62	.98421		1,000,000	1000	1

V.—EQUIVALENTS OF UNITS

	Erg.	Meg- erg.	Gram-de- gree C.	Kilogram- degree C.	Pound- degree C.	Pound- degree F.
Erg.	1	.000001				
Meg.-erg.	1,000,000	1	.024068	.00024	.000058	.000095
Gram-degree C.		41.5487	1	.001	.002205	.003968
Kilogram-degree C.		41,548.7	1000	1	2.2046	3.9688
Pound-degree C.		18,846.5	458.59	.45359	1	1.8
Pound-degree F.		10,470.1	251.995	.251995	.555556	1
Watt-Second.	10 ⁷	10	.24068	.000241	.000581	.000955
Gram-centimeter.	981	.000981	.0000285			
Kilogram-meter.	98.1X10 ⁶	98.1	2.86108	.002861	.006205	.009870
Foot-Pound.		18.5626	.326425	.000826	.000720	.001295
Horse-Power-Sec. English.		7459.48	179.486	.179486	.3957	.71948
Horse-Power-Sec. Metric.		7357.5	177.075	177.075	.390875	.70275

OF ENERGY AND WORK.

Watt-Second.	Gram-Centim'lr.	Kilogram-meter.	Foot-Pound.	Horse-power-second English.	Horse-power-second Metric.	
10 ⁻⁷	.001019					Erg.
.1	1019.87	.010194	.078784	.000184	.000186	Meg-erg.
4.15487	42,858.5	.428585	3.06855	.00557	.005647	Gram-degree C.
4154.87		428.585	3068.55	5.57	5.64708	Kilogram-degree C.
1884.65		192.114	1889.6	2.52658	2.56149	Pound-degree C.
1047.08		106.780	772	1.40864	1.42805	Pound-degree F.
1	10,198.7	.101987	.787387	.0018406	.0018592	Watt-Second.
.000098	1	.00001	.000072			Gram-Centimeter.
9.81	100,000	1	7.23828	.018152	.018384	Kilogram-meter.
1.85626	18,825.8	.188258	1	.0018182	.001842	Foot-Pound.
745.948		76.0892	550	1	1.01388	Horse-Power-Sec. English.
735.75		75	542.496	.963856	1	Horse-Power-Sec. Metric.

VI.—TABLE OF SPECIFIC RESISTANCES IN MICROHMS AND OF COEFFICIENTS OF SPECIFIC RESISTANCES OF METALS.

	Specific Resistance. Microhms.	Coefficients of Sp. Res.		Specific Resistance. Microhms.	Coefficients of Sp. Res.
Annealed Silver.....	1.521	.9419	Annealed Nickel.....	12.60	7.7970
Hard Silver.....	1.652	1.0228	Compressed Tin.....	18.86	8.2678
Annealed Copper.....	1.616	1.0000	“ Lead.....	19.85	12.2884
Hard Copper.....	1.652	1.0228	“ Antimony.....	85.90	22.2158
Annealed Gold.....	2.081	1.2877	“ Bismuth.....	182.70	82.1170
Hard Gold.....	2.118	1.8107	Liquid Mercury.....	99.74	61.7908
Annealed Aluminum.....	2.945	1.8224	2 Silver, 1 Platinum.....	24.66	15.2599
Compressed Zinc.....	5.689	8.5204	German Silver.....	21.17	18.1002
Annealed Platinum.....	2.158	5.6671	2 Gold, 1 Silver.....	10.99	6.8008
“ Iron.....	9.825	6.0798			

SPECIFIC RESISTANCE OF SOLUTIONS AND LIQUIDS.

MATTHIJSSEN AND OTHERS.

Names of Solutions.	Temperature Centigrade.	Temperature Fahrenheit.	Specific Resistance. Ohms.
Copper Sulphate, concentrated.....	9°	48.2°	29.82
“ with an equal volume of water.....	“	“	46.54
“ with three volumes of water.....	“	“	77.63
Common Salt, concentrated.....	18°	55.4°	5.98
“ with an equal volume of water.....	“	“	6.00
“ with two volumes of water.....	“	“	9.24
“ with three volumes of water.....	“	“	11.89
Zinc Sulphate, concentrated.....	14°	57.2°	28.00
“ with an equal volume of water.....	“	“	22.75
“ with two volumes of water.....	“	“	29.75
Sulphuric Acid, concentrated.....	14.8°	57.8°	5.82
“ 50.5%, Specific Gravity 1.898.....	14.5°	58.1°	1.086
“ 29.6%, Specific Gravity 1.215.....	12.8°	54.5°	.88
“ 12% Specific Gravity 1.080.....	12.8°	55.0°	1.268
Nitric Acid, Specific Gravity 1.86 (Blavier).....	14°	57.2°	1.45
“ “ “ “.....	24°	75.2°	1.22
Distilled Water, (Temp'ture unknown) (Pouillet)			962.

VII.—RELATIVE RESISTANCE AND CONDUCTANCE OF PURE
COPPER AT DIFFERENT TEMPERATURES.

MATTHIJSSEN.

Temperature Centigrade.	Temperature Fahrenheit.	Relative Resistance.	Relative Conductance	Temperature Centigrade.	Temperature Fahrenheit.	Relative Resistance.	Relative Conductance
0°	32°	1.	1.	16°	60.8°	1.06168	.9419
1	33.8	1.00881	.99920	17	62.6	1.06568	.93841
2	35.6	1.00756	.99925	18	64.4	1.06959	.93494
3	37.4	1.01185	.99878	19	66.2	1.07356	.93148
4	39.2	1.01515	.99808	20	68.	1.07754	.92804
5	41	1.01896	.99719	21	69.8	1.08152	.92469
6	42.8	1.0228	.97771	22	71.6	1.08558	.92120
7	44.6	1.02668	.97406	23	73.4	1.08954	.91789
8	46.4	1.03048	.97042	24	75.2	1.09356	.91445
9	48.2	1.03435	.96679	25	77.	1.09759	.9111
10	50	1.03829	.96319	26	78.8	1.10162	.90776
11	51.8	1.04210	.95960	27	80.6	1.10567	.90443
12	53.6	1.04599	.95608	28	82.4	1.10972	.90118
13	55.4	1.0499	.95247	29	84.2	1.11389	.89794
14	57.2	1.05381	.94898	30	86.	1.11785	.89477
15	59	1.05774	.94541				

VIII.—AMERICAN WIRE GAUGE TABLE.

Properties of Copper Wire : Specific Gravity, 8.878 ; Specific Conductivity, 1.765 at 75° F.

Gauge Number	SIZE.		WEIGHT AND LENGTH.			RESISTANCE.			Carrying Capacity, 2,000 Amperes p. sq. in. section. Amperes
	Diam-eter in Mils.	Square of Diameter or circular Mils.	Grains per Foot.	Po'nds per 1000 Feet.	Feet per Pound.	Ohms per 1000 Feet.	Feet per Ohm	Ohms per Pound.	
0000	460.000	211600.0	4477.2	639.60	1.564	.051	19929.7	.0000785	430
000	409.640	167804.9	3550.5	507.22	1.971	.063	15804.9	.000125	262
00	364.800	133079.0	2815.8	402.25	2.486	.080	12584.2	.000198	208
0	324.950	105592.5	2236.2	319.17	3.133	.101	9945.8	.000315	165
1	289.800	83694.49	1770.9	252.98	3.952	.127	7882.8	.000501	130
2	257.630	66373.22	1404.4	200.68	4.994	.160	6251.4	.000799	103
3	229.420	52638.53	1118.6	159.09	6.285	.202	4957.8	.001268	81
4	204.810	41742.57	889.2	126.17	7.925	.254	3931.6	.002016	65
5	181.940	33102.16	700.4	100.05	9.995	.321	3117.8	.003206	52
6	162.020	26250.48	555.4	79.84	12.604	.404	2472.4	.005098	41
7	144.280	20816.72	440.4	62.92	15.893	.509	1960.6	.008106	32
8	128.490	16509.68	349.3	49.90	20.040	.643	1555.0	.01289	26
9	114.480	13094.22	277.1	39.58	25.265	.811	1233.3	.02048	20
10	101.890	10381.67	219.7	31.88	31.367	1.023	977.3	.03259	16
11	90.742	8234.11	174.2	24.89	40.176	1.289	775.5	.05181	13
12	80.808	6529.93	138.2	19.74	50.659	1.626	615.02	.08237	10.9
13	71.961	5173.39	109.6	15.65	63.898	2.048	488.25	.13087	8.1
14	64.084	4106.75	86.87	12.41	80.580	2.585	386.50	.20880	6.4
15	57.065	3256.76	68.88	9.84	101.626	3.177	306.74	.33183	5.1
16	50.820	2582.67	54.67	7.81	128.041	4.582	243.25	.52683	4.0
17	45.257	2048.19	43.33	6.19	161.551	5.183	192.81	.89744	3.2
18	40.303	1624.33	34.87	4.91	203.666	6.536	152.99	1.3312	2.5
19	35.890	1282.45	26.50	3.786	264.136	8.477	117.96	2.2392	1.96
20	31.961	1021.51	21.60	3.086	324.045	10.394	96.21	3.8438	1.60
21	28.462	810.09	17.14	2.448	408.497	13.106	76.50	5.8539	1.28
22	25.347	642.47	13.59	1.942	514.983	16.525	60.51	8.5099	1.08
23	22.571	509.45	10.77	1.539	649.773	20.842	47.98	13.334	.80
24	20.100	404.01	8.55	1.221	819.001	26.284	38.05	21.524	.63
25	17.900	320.41	6.77	.967	1034.126	33.135	30.18	34.293	.50
26	15.940	254.08	5.38	.768	1302.083	41.739	23.93	54.410	.40
27	14.195	201.49	4.26	.608	1644.737	52.687	18.98	86.657	.31
28	12.641	159.79	3.39	.484	2066.116	66.445	15.05	137.283	.25
29	11.257	126.72	2.69	.384	2604.167	83.752	11.94	218.104	.20
30	10.025	100.50	2.11	.302	3311.258	105.641	9.466	349.805	.16
31	8.928	79.71	1.67	.239	4184.100	133.191	7.508	507.256	.13
32	7.950	63.20	1.33	.190	5263.158	168.011	5.952	884.267	.098
33	7.080	50.18	1.06	.151	6622.517	211.820	4.721	1402.75	.078
34	6.304	39.74	.847	.121	8264.468	267.165	3.748	2207.95	.062
35	5.614	31.52	.658	.094	10638.30	336.81	2.969	3583.12	.049
36	5.000	25.00	.525	.075	13333.33	424.65	2.355	5661.71	.039
37	4.453	19.83	.420	.060	16666.66	535.33	1.868	8922.20	.031
38	3.965	15.72	.315	.045	22222.22	675.22	1.481	15000.5	.025
39	3.531	12.47	.266	.038	26315.79	851.789	1.174	22415.5	.020
40	3.144	9.88	.210	.030	33333.33	1074.11	.931	35808.8	.015

IX.—CHEMICAL AND THERMO-CHEMICAL EQUIVALENTS.

FORMATION OF OXIDES.

Name of Compound.	Formula.	Valency.	Chemical Equiv- alents.	Combining Weights.	Thermo- Chemical Equiv- alents.
Water.....	H ² O	II	18	9	34.5
Iron Protoxide.....	Fe O	II	73	36	34.5
Iron Sesquioxide.....	Fe ² O ³	III	160	58.3	31.9x3
Zinc Oxide.....	Zn O	II	81	40.5	48.2
Copper Oxide.....	Cu O	II	79.4	39.7	19.2
Mercury Oxide.....	Hg O	II	216	108	15.5

FORMATION OF SALTS.

Name of Base.	Valency.		Nitrates	Sul- phates	Chlo- rides	Cya- nides.
Iron	II	FORMULA.	Fe (NO ³) ²	Fe SO ⁴	Fe Cl ²	Fe Cy ²
		Chemical Equivalents.....	160	126	127	119
		Combining Weights.....	90	68	68.5	66
		Thermo-Chemical Equiv'ls	18.9	12.5	80	8.2
Zinc	II	FORMULA	Zn (NO ³) ²	Zn SO ⁴	Zn Cl ²	Zn Cy ²
		Chemical Equivalents.....	189	161	136	117
		Combining Weights.....	94.5	80.5	68	58.5
		Thermo-Chemical Equiv'ls	9.8	11.7	56.4	7.8
Copper	II	FORMULA.	Cu (NO ³) ²	Cu SO ⁴	Cu Cl ²	Cu Cy ²
		Chemical Equivalents....	187.4	159.4	134.4	125.4
		Combining Weights.....	98.7	79.7	67.2	62.7
		Thermo-Chemical Equiv'ls	7.5	9.2	81.8	7.8
Mercury	II	FORMULA.	Hg(NO ³) ²	Hg SO ⁴	Hg Cl ²	Hg Cy ²
		Chemical Equivalents.....	294	290	271	262
		Combining Weights.....	163	140	185.5	196
		Thermo-Chemical Equiv'ls	7.5	9.2	9.45	15.5

X.—CHEMICAL AND ELECTRO-CHEMICAL EQUIVALENTS.

Name	Symbols	Valen- des	Chemical Equivalents	Combining Weights	Electro- Chemical Equivalents
Hydrogen	H	I	1	1	.0108
Gold	Au	III	196.6	65.5	.6877
Silver	Ag	I	108	108	1.124
Copper (Cupric)	Cu "	II	63	31.5	.3807
Mercury (Mercuric)	Hg "	II	200	100	1.05
" (Mercurous)	Hg ,	I	200	200	2.10
Iron (ferric)	Fe ""	III	56	18.7	.1964
" (ferrous)	Fe,,	II	56	28	.294
Nickel	Ni	II	59	29.5	.3098
Zinc	Zn	II	65	32.5	.3413
Lead	Pb	II	207	103.5	1.0868
Oxygen	O	II	16	8	.084
Chlorine	Cl	I	35.5	35.5	.3728

XI.—MAGNETIZATION AND MAGNETIC TRACTION.

B Lines per sq. cm.	B, Lines per sq. in.	Dynes per sq. centim.	Grammes per sq. centim.	Kilogra. per sq. centim.	Pounds per sq. inch.
1,000	6,450	39,790	40.56	.0456	.577
2,000	12,900	159,200	162.3	.1623	2.308
3,000	19,350	358,100	365.1	.3651	5.190
4,000	25,800	636,600	648.9	.6489	9.228
5,000	32,250	994,700	1,014	1.014	14.39
6,000	38,700	1,432,000	1,460	1.460	20.75
7,000	45,150	1,950,000	1,937	1.937	28.26
8,000	51,600	2,547,000	2,596	2.596	36.95
9,000	58,050	3,228,000	3,288	3.288	46.73
10,000	64,500	3,979,000	4,058	4.058	57.68
11,000	70,950	4,815,000	4,907	4.907	69.77
12,000	77,400	5,730,000	5,841	5.841	83.07
13,000	83,850	6,725,000	6,855	6.855	97.47
14,000	90,300	7,800,000	7,550	7.550	113.1
15,000	96,750	8,958,000	9,124	9.124	129.7
16,000	103,200	10,170,000	10,390	10.39	147.7
17,000	109,650	11,500,000	11,730	11.73	166.6
18,000	116,100	12,890,000	13,140	13.14	186.8
19,000	122,550	14,680,000	14,680	14.68	208.1
20,000	129,000	15,920,000	16,230	16.23	230.2

III.—PERMEABILITY OF WROUGHT AND CAST IRON.

SQUARE CENTIMETER MEASUREMENT.

Annealed Wrought Iron.			Gray Cast Iron.		
B	μ	H	B	μ	H
5,000	8,000	1.66	4,000	800	5
9,000	2,250	4	5,000	600	10
10,000	2,000	5	6,000	279	21.5
11,000	1,692	6.5	7,000	188	49
12,000	1,412	8.5	8,000	100	80
13,000	1,068	12	9,000	71	127
14,000	828	17	10,000	58	183
15,000	626	28.5	11,000	37	292
16,000	520	50
17,000	461	105
18,000	90	200
19,000	54	350
20,000	30	666

SQUARE INCH MEASUREMENT.

Annealed Wrought Iron.			Gray Cast Iron.		
B.	μ .	H.	B.	μ .	H.
20,000	4,650	6.5	25,000	768	32.7
40,000	3,877	10.3	30,000	756	39.7
50,000	3,081	16.5	40,000	238	155
60,000	2,169	27.8	50,000	114	429
70,000	1,921	36.4	60,000	74	907
80,000	1,409	56.8	70,000	40	1,480
90,000	907	92.2
100,000	408	245
110,000	166	664
120,000	76	1,581
130,000	35	3,714
140,000	27	5,155

PERMEABILITY OF SOFT CHARCOAL WROUGHT IRON

(SHELFORD BIDWELL.)

SQUARE CENTIMETER MEASURE.

B	μ	H
7,890	1899.1	8.9
11,550	1191.4	10.8
15,460	886.4	40
17,880	150.7	115
18,470	88.8	208
19,890	45.8	427
19,890	88.9	595

SQUARE INCH MEASUREMENT.

B _s	μ_s	H _s
47,414	1897	25.0
74,104	1199	64.1
99,191	888	254
111,159	150	733
118,504	88.8	1385
124,021	45.8	2740
127,165	88.9	3758

B — Magnetic Flux.

H — Magnetizing Force.

} Both in lines of force.

 $\mu = \frac{B}{H}$ the Permeability or multiplying power of the core.

XIII.—MAGNETIC RELUCTANCE OF AIR BETWEEN TWO PARALLEL CYLINDERS OF IRON.

$\frac{b}{p}$ Ratio of least distance apart to circumference.	CENTIMETER UNITS.		INCH UNITS.	
0.1	.1954	5.1055	0.0771	12.968
0.2	.2707	8.6917	0.1066	9.877
0.3	.3251	8.0768	0.1280	7.815
0.4	.3688	2.7158	0.1450	6.897
0.5	.4046	2.4716	0.1598	6.275
0.6	.4351	2.2988	0.1717	5.825
0.8	.4887	2.0465	0.1924	5.198
1.0	.5816	1.8807	0.2098	4.777
1.2	.5684	1.7996	0.2288	4.571
1.4	.6007	1.6645	0.2365	4.298
1.6	.6289	1.5902	0.2476	4.089
1.8	.6541	1.5287	0.2575	3.888
2.0	.6774	1.4764	0.2667	3.750
4.0	.8857	1.1968	0.8290	3.040
6.0	.9819	1.0732	0.8669	2.796
8.0	1.0047	.9958	0.8955	2.583
10.0	1.0544	.9484	0.4151	2.409

In this table in columns 2 and 3 the Unit length of a cylinder is taken as 1 centimeter; in columns 4 and 5 as 1 inch. p = circumference of cylinder b = shortest distance apart.

XIV.—TABLE OF 6TH ROOTS.

Number	Sixth Root	Number	Sixth Root	Number	Sixth Root	Number	Sixth Root
$\frac{1}{2}$.69355	$\frac{1}{2}$.95820	$\frac{1}{2}$	1.0177	$\frac{1}{2}$	1.0978
$\frac{1}{3}$.70717	$\frac{1}{3}$.96850	$\frac{1}{3}$	1.0192	$\frac{1}{3}$	1.1019
$\frac{1}{4}$.72806	$\frac{1}{4}$.97006	$\frac{1}{4}$	1.0226	$\frac{1}{4}$	1.1068
$\frac{1}{5}$.74185	$\frac{1}{5}$.97468	$\frac{1}{5}$	1.0260	$\frac{1}{5}$	1.1087
$\frac{1}{6}$.76473	$\frac{1}{6}$.97798	$\frac{1}{6}$	1.0308	$\frac{1}{6}$	1.1107
$\frac{1}{7}$.79870	$\frac{1}{7}$.98053	$\frac{1}{7}$	1.0379	$\frac{1}{7}$	1.1119
$\frac{1}{8}$.82868	$\frac{1}{8}$.98258	$\frac{1}{8}$	1.0491	$\frac{1}{8}$	1.1139
$\frac{1}{9}$.86090			$\frac{1}{9}$	1.0599	$\frac{1}{9}$	1.1287
$\frac{1}{10}$.88463			$\frac{1}{10}$	1.0888		

XV.—STANDARD AND BIRMINGHAM WIRE GAUGES.

STANDARD.			BIRMINGHAM.		
Number of Gauge.	Diameter in Mils.	Square of Diameter or Circ'l'r Mils.	Number of Gauge.	Diameter in Mils.	Square of Diameter or Circ'l'r Mils.
0000000	500	250000	0000	454	206116
000000	484	215296	000	425	180625
00000	432	186824	00	380	144400
0000	400	160000	0	340	115600
000	372	138384	1	300	90000
00	348	121104	2	294	86436
0	324	104976	3	259	67081
1	300	90000	4	238	56644
2	276	76176	5	220	48400
3	252	63504	6	208	43264
4	228	51824	7	180	32400
5	212	44944	8	165	27225
6	192	36864	9	148	21904
7	176	30976	10	134	17956
8	160	25600	11	120	14400
9	144	20736	12	109	11881
10	128	16384	13	995	99005
11	116	13456	14	988	97616
12	104	10816	15	979	95841
13	92	8464	16	965	93125
14	80	6400	17	958	91764
15	72	5184	18	949	90061
16	64	4096	19	942	88736
17	56	3136	20	935	87425
18	48	2304	21	922	85008
19	40	1600	22	928	86112
20	36	1296	23	925	85563
21	32	1024	24	922	85008
22	28	784	25	920	84640
23	24	576	26	918	84276
24	22	484			
25	20	400			
26	18	324			

**XVI.—CURRENT CAPACITY OF BARE OR INSULATED OVERHEAD WIRES CORRESPONDING
TO A RISE IN TEMPERATURE OF 18°, 38°, 54° AND 72° F. RESPECTIVELY.**

Diameter in Inches.	Area in Circular Mils.	Amperes.				R. & S. Gauge Numbers.	Area in Circular Mils.	Amperes.			
		18°	38°	54°	72°			18°	38°	54°	72°
1.	1,000,000	410	570	700	800	0000	211,600	145	200	240	275
.95	902,500	380	530	650	750	000	187,805	125	170	210	235
.9	810,000	350	490	600	700	00	133,079	110	145	180	205
.85	722,500	320	455	560	645	0	105,568	95	125	150	180
.8	640,000	290	420	520	595	1	83,694	80	110	130	150
.75	562,500	265	385	470	545	2	66,373	70	95	115	130
.7	490,000	240	350	430	500	3	52,634	60	80	100	115
.65	422,500	220	310	390	450	4	41,743	55	70	85	100
.6	360,000	200	280	350	405	5	33,102	50	63	75	87
.55	302,500	180	250	310	360	6	26,250	40	52	64	75
.5	250,000	160	220	270	310	7	20,817	35	45	55	65

* From I. C. S. Papers on Electric Railway Engineering.

XVII.—WATTS AND HORSE POWER TABLES FOR VARIOUS PRESSURES AND CURRENTS.

These tables will be found very convenient for quickly finding the watts and electrical horse power on lighting and power circuits.

To find the watts or h. p. for any current up to 1,000 amperes at a standard voltage add the watts or h. p. corresponding to the units, tens and hundreds digits of the current.

Example: Find the electrical h. p. of 436 amperes at 105 volts.

Solution: The h. p. for 400 amp. is 56.3, for 30 amp. it is 4.22 and for 6 amp., .845. Adding these quantities gives 61.365 h. p., which we will call 61.4 h. p., as the tabular values are computed to three figures only, which are sufficient for engineering purposes.

To find values for voltages higher or lower than in the tables, select a voltage 1-10 or ten times that required, and multiply the result by 10 or 1-10. Thus: to find h. p. at 7 amp., 65 volts, take 7 amp. at 550 volts=5.16 h. p.; multiply by 1-10, which gives .516 h. p. To find h. p. at 9 amp., 1,200 volts, take 9 amp. at 120 volts=1.45; multiply by 10=14.5 h. p.

To read in kilowatts place a decimal point before the watts when less than 1,000 in value, or substitute it for the comma in the larger values.

HORSE POWER AT VARIOUS PRESSURES AND CURRENTS.

Amperes.	100 volts.		105 volts.		110 volts.	
	Watts.	h. p.	Watts.	h. p.	Watts.	h. p.
1	100	.134	105	.141	110	.147
2	200	.268	210	.282	220	.296
3	300	.402	315	.422	330	.442
4	400	.536	420	.563	440	.590
5	500	.670	525	.704	550	.737
6	600	.804	630	.845	660	.885
7	700	.938	735	.985	770	1.03
8	800	1.07	840	1.13	880	1.18
9	900	1.21	945	1.27	990	1.33
10	1,000	1.34	1,050	1.41	1,100	1.47
20	2,000	2.68	2,100	2.82	2,200	2.96
30	3,000	4.02	3,150	4.22	3,300	4.42
40	4,000	5.36	4,200	5.63	4,400	5.90
50	5,000	6.70	5,250	7.04	5,500	7.37
60	6,000	8.04	6,300	8.45	6,600	8.85
70	7,000	9.38	7,350	9.85	7,700	10.3
80	8,000	10.7	8,400	11.3	8,800	11.8
90	9,000	12.1	9,450	12.7	9,900	13.3
100	10,000	13.4	10,500	14.1	11,000	14.7
200	20,000	26.8	21,000	28.2	22,000	29.6
300	30,000	40.2	31,500	42.2	33,000	44.2
400	40,000	53.6	42,000	56.3	44,000	59.0
500	50,000	67.0	52,500	70.4	55,000	73.7
600	60,000	80.4	63,000	84.5	66,000	88.5
700	70,000	93.8	73,500	98.5	77,000	103
800	80,000	107	84,000	113	88,000	118
900	90,000	121	94,500	127	99,000	133
1,000	100,000	134	105,000	141	110,000	147

HORSE POWER AT VARIOUS PRESSURES AND CURRENTS.

(Continued.)

Amp.	115 volts.		120 volts.		125 volts.	
	Watts.	h. p.	Watts.	h. p.	Watts.	h. p.
1	115	.154	120	.161	125	.168
2	230	.308	240	.322	250	.335
3	345	.462	360	.483	375	.505
4	460	.617	480	.644	500	.670
5	575	.770	600	.805	625	.840
6	690	.925	720	.966	750	1.01
7	805	1.08	840	1.13	875	1.18
8	920	1.23	960	1.29	1,000	1.34
9	1,035	1.39	1,080	1.45	1,125	1.51
10	1,150	1.54	1,200	1.61	1,250	1.68
20	2,300	3.08	2,400	3.22	2,500	3.35
30	3,450	4.62	3,600	4.83	3,750	5.05
40	4,600	6.17	4,800	6.44	5,000	6.70
50	5,750	7.70	6,000	8.04	6,250	8.40
60	6,900	9.25	7,200	9.66	7,500	10.1
70	8,050	10.8	8,400	11.3	8,750	11.8
80	9,200	12.3	9,600	12.9	10,000	13.4
90	10,350	13.9	10,800	14.5	11,250	15.1
100	11,500	15.4	12,000	16.1	12,500	16.8
200	23,000	30.8	24,000	32.2	25,000	33.5
300	34,500	46.2	36,000	48.3	37,500	50.5
400	46,000	61.7	48,000	64.4	50,000	67.0
500	57,500	77.0	60,000	80.4	62,500	84.0
600	69,000	92.5	72,000	96.6	75,000	101
700	80,500	108	84,000	113	87,500	118
800	92,000	123	96,000	129	100,000	134
900	103,500	139	108,000	145	112,500	151
1,000	115,000	154	120,000	161	125,000	168

HORSE POWER AT VARIOUS PRESSURES AND CURRENTS.

(Continued.)

Amp.	200 volts.		210 volts.		220 volts.	
	Watts.	h. p.	Watts.	h. p.	Watts.	h. p.
1	200	.268	210	.282	220	.295
2	400	.536	420	.563	440	.590
3	600	.804	630	.845	660	.885
4	800	1.07	840	1.13	880	1.18
5	1,000	1.34	1,050	1.41	1,100	1.47
6	1,200	1.61	1,260	1.69	1,320	1.77
7	1,400	1.88	1,470	1.97	1,540	2.06
8	1,600	2.14	1,680	2.25	1,760	2.36
9	1,800	2.41	1,890	2.53	1,980	2.65
10	2,000	2.68	2,100	2.82	2,200	2.95
20	4,000	5.36	4,200	5.63	4,400	5.90
30	6,000	8.04	6,300	8.45	6,600	8.85
40	8,000	10.7	8,400	11.3	8,800	11.8
50	10,000	13.4	10,500	14.1	11,000	14.7
60	12,000	16.1	12,600	16.9	13,200	17.7
70	14,000	18.8	14,700	19.7	15,400	20.6
80	16,000	21.4	16,800	22.5	17,600	23.6
90	18,000	24.1	18,900	25.3	19,800	26.5
100	20,000	26.8	21,000	28.2	22,000	29.5
200	40,000	53.6	42,000	56.3	44,000	59.0
300	60,000	80.4	63,000	84.5	66,000	88.5
400	80,000	107	84,000	113	88,000	118
500	100,000	134	105,000	141	110,000	147
600	120,000	161	126,000	169	132,000	177
700	140,000	188	147,000	197	154,000	206
800	160,000	214	168,000	225	176,000	236
900	180,000	241	189,000	253	198,000	265
1,000	200,000	268	210,000	282	220,000	295

HORSE POWER AT VARIOUS PRESSURES AND CURRENTS.

(Continued.)

Amp	230 volts.		240 volts.		250 volts.	
	Watts.	h. p.	Watts.	h. p.	Watts.	h. p.
1	230	.308	240	.322	250	.335
2	460	.617	480	.644	500	.670
3	690	.925	720	.966	750	1.01
4	920	1.23	960	1.29	1,000	1.34
5	1,150	1.54	1,200	1.61	1,250	1.68
6	1,380	1.85	1,440	1.93	1,500	2.01
7	1,610	2.16	1,680	2.25	1,750	2.35
8	1,840	2.47	1,920	2.58	2,000	2.68
9	2,070	2.77	2,160	2.90	2,250	3.02
10	2,300	3.08	2,400	3.22	2,500	3.35
20	4,600	6.17	4,800	6.44	5,000	6.70
30	6,900	9.25	7,200	9.66	7,500	10.1
40	9,200	12.3	9,600	12.9	10,000	13.4
50	11,500	15.4	12,000	16.1	12,500	16.8
60	13,800	18.5	14,400	19.3	15,000	20.1
70	16,100	21.6	16,800	22.5	17,500	23.5
80	18,400	24.7	19,200	25.8	20,000	26.8
90	20,700	27.7	21,600	29.0	22,500	30.2
100	23,000	30.8	24,000	32.2	25,000	33.5
200	46,000	61.7	48,000	64.4	50,000	67.0
300	69,000	92.5	72,000	96.6	75,000	101
400	92,000	123	96,000	129	100,000	134
500	115,000	154	120,000	161	125,000	168
600	138,000	185	144,000	193	150,000	201
700	161,000	216	168,000	225	175,000	235
800	184,000	247	192,000	258	200,000	268
900	207,000	277	216,000	290	225,000	302
1,000	230,000	308	240,000	322	250,000	335

HORSE POWER AT VARIOUS PRESSURES AND CURRENTS.

(Continued.)

Amp.	500 volts.		550 volts.		600 volts.	
	Watts and k. w.	h. p.	Watts and k. w.	h. p.	Watts and k. w.	h. p.
1	500	.87	550	.74	600	.804
2	1,000	1.34	1,100	1.47	1,200	1.61
3	1,500	2.01	1,650	2.21	1,800	2.41
4	2,000	2.68	2,200	2.95	2,400	3.23
5	2,500	3.35	2,750	3.69	3,000	4.02
6	3,000	4.02	3,300	4.42	3,600	4.82
7	3,500	4.69	3,850	5.16	4,200	5.68
8	4,000	5.36	4,400	5.90	4,800	6.43
9	4,500	6.03	4,950	6.64	5,400	7.24
10	5 k.w.	6.7	5.5 k.w.	7.4	6 k.w.	8.04
20	10	13.4	11.0	14.7	12	16.1
30	15	20.1	16.5	22.1	18	24.1
40	20	26.8	22.0	29.5	24	32.2
50	25	33.5	27.5	36.9	30	40.2
60	30	40.2	33.0	44.2	36	48.2
70	35	46.9	38.5	51.6	42	56.3
80	40	53.6	44.0	59.0	48	64.3
90	45	60.3	49.5	66.4	54	72.4
100	50	67	55	74.0	60	80.4
200	100	134	110	147	120	161
300	150	201	165	221	180	241
400	200	268	220	295	240	322
500	250	335	275	369	300	402
600	300	402	330	442	360	482
700	350	469	385	516	420	563
800	400	536	440	590	480	643
900	450	603	495	664	540	724
1,000	500	670	550	740	600	804

INDEX.

ALTERNATING current system	47-49	Battery, efficiency, to calculate	72
Alternating currents	115	Battery, electromotive force of	67
Amperage of armature	99	Battery, how rated	65
Ampere	11-12	Battery, resistance of	67
Ampere-second	57	Battery, to calculate current and arrangement	69-72
Ampere-turns	87	Battery, to calculate its voltage	76-77
Ampere-turns, rules for calculating	87	Battery, work of	77-78
Armature amperage of, on short circuit	99	CALORIE, gram and kilogram, defined	54
Armature calculations	99-103	Calorie, relation to watts and ergs	54-55
Armature, capacity of	99	Capacity of armature winding	97
Armature, general features of	96	Cars, power to move	111
Armature, resistance of	98	Cell constants	65
Armatures, rules for calculating	98-99	Chemicals consumed in a battery	78
Armature, voltage of	99	Circuits, divided, branched or shunt	19-25
Armature winding iron or copper	96	Circuits, portions of	17-19
BRIDGE, Wheatstone, principle of	25	Circuits, single conductor, closed	14-15
Batteries, illustrations of arrangements	66	Circular mils calculations	44-45
Batteries or generators in opposition	15	Circular mils	43-45
Batteries, storage, resistance of	65	Condensers	121
Battery arrangement and size for given efficiency	73	Conductance	36-37
Battery, arrangement of cells in	67	Conductors of same material	26
Battery calculations, discrepancies in	72	Conductors, resistance of different	26
Battery, chemicals consumed in	78	Contact, area of in electro-magnets and armatures	86
Battery constants	65	Convection and radiation, loss of heat by	58
Battery, current of	68	Conversion, ratio of	47
Battery, effective rate of work of	77-78		

- Converters, rule for winding 49
 Cores of field-magnet, to calculate 104
 Counter-electromotive force of plating-bath 80
 Current, battery required for a given 69-72
 Current, distribution in parallel circuits 20-21
 Current, its heating effect and energy 50
 Currents passed by branches of a circuit.. 19
 Current, work of 60
 Current yielded by a battery 65
- DEFINITIONS, general 9
 Demonstrations of rules. 127
 Derived units 10
 Dimensions, units of.... 10
 Drop of potential in leads 38-41
 Drum type closed circuit armatures 98-99
 Duty and commercial efficiency 63-64
 Duty of generators 63
- EFFECTIVE E. M. F. 16
 Efficiency, its relation to resistances 64
 Efficiency of generators, commercial 64
 Efficiency of generators, electrical 63
 Efficiency, to calculate battery for a given.. 73-74
 Electrical railways 109
 Electro-magnets and dynamos 82
 Electro-magnets, general rules for 85
 Electro-magnets, to magnetize 86-87
 Electro-magnets, traction of 85-86
 Electromotive force of battery 67
 Electro-plating calculations 79
 Energy defined 9
 Energy in circuit, rules for determining 50-53
 Energy of current 50-53
- E. M. F., its meaning... 10
 E. M. F., primary and secondary 47
 Erg 54
- FORCE defined 9
 Force, magnetic 84
 Fundamental units 10
 Field-magnet cores, to calculate 104
 Field-magnet for dynamo or motor 104-107
 Field, unit intensity of magnetic 82-83
- GENERATORS, efficiency of, 63-64
 Generators or batteries in opposition 15
- HEAT, absolute quantity in circuit 54
 Heating effect of current, 50-53
 Heat, specific 57
 Horse-power, electrical.. 61
 Horse-power, reduction from kilogram-meters.. 60
 Horse-power, to calculate for lamps 62
- JOULE, his law of heating, effect of currents 50
 Joule or gram-calorie... 54
- KAPP, Gisbert, his line of force 107-108
 Kilogram-meters 60
- LEADS, tapering in size.. 41-42
 Leakage between cylindrical magnet leg, to calculate 91
 Leakage between flat magnet surfaces, to calculate 91
 Leakage of lines in a magnetic circuit 95
 Leakage of lines of force. 89
 Line of force, Kapp's.. 107-108
 Lines of force 82
 Lines of force cut per second for one volt.... 96
 Lines of force, leakage of. 89
 Lines of force, to diminish leakage of 94-95

INDEX.

161

MAGNETIC circuit	84	Power to move cars.....	111
Magnetic circuit calculations	88-89	Powers of ten, notation in	136
Magnetic circuit, the law of	85	Primary E. M. F.....	47
Magnetic circuits, four parts of	88	Proving armature calculations	103
Magnetic circuits, general calculations for	92	RADIATION and convection, loss of heat by.....	58
Magnetic field	82-83	Railways, electric	109
Magnetic flux	82-83	Rate of heat-energy, units of	63
Magnetic force	84	Ratio of conversion.....	47
Magnetic potential, average difference of.....	90	Reluctance	83-84
Magnetism, no insulator of	84	Reluctance, calculation of	87
Magnetizing force	87	Resistance	26-35
Magnet legs, long and short	94	Resistance and efficiency, how related	64
Mass defined	9	Resistance defined	9
Metals, deposition of, by battery	79	Resistance of battery	67
Mho, unit of conductance	36	Resistance of circuit, note relative thereto	14
Mil, circular, calculations based on	44-45	Resistance of parallel leads	22-23
Mils, circular	43	Resistance referred to weight of conductor.....	35-36
Mils, circular, applied to alternating current	48	Resistance specific.....	29
Multiple arc connections, to calculate	38-42	Resistances, two in battery circuits.....	65
NEUTRAL wire in three wire system	46	Resistance, universal rule for	31-32
Notation in powers of ten	136	Rules, demonstrations of	127
OHM	11-12	SAFETY-CATCHES for fuses, how calculated	59
Ohm's law	13-25	Secondary E. M. F.....	47
Ohm's law, its universal application	14	Self-induction	117
Ohm's law, six expressions of	13-14	Series winding for dynamos	106
PARALLEL connections of equal resistance.....	23	Shunt circuits	19
Parallel leads, resistance of	22	Shunt circuits, resistance of	22
Permeance	83-84	Shunt winding for dynamos	107
Permeability	85	Sizes of feeders.....	109
Permeability, average range of	104	Space defined.....	9
Potential, diagram for calculating fall of.....	41	Specific heat.....	57
Potential difference	38-42	Specific resistance.....	30-31
Potential difference, drop, or fall of.....	17	System, alternating current	47-49
Potential, drop of in leads	38-42	Systems, special.....	46-49
		System, three wire.....	46-47
		TABLES—	
		American wire gauge table	146

TABLES—*Continued.*

Chemical and electro-chemical equivalents ..	148	of coefficients of specific resistances of metals..	144
Chemical and thermo-chemical equivalents ..	147	Table of the sixth roots..	151
Current capacity of bare or insulated overhead wires	153	Three wire system.....	48
Equivalents of units of area	140	Three wire system, saving in size of wires.....	46
Equivalents of units of energy and work...142-148		Three wire system, the neutral wire.....	46
Equivalents of units of length	139	Time defined.....	9
Equivalents of units of volume	140		
Equivalents of units of weight	141	UNITS, concrete statement of	12
Magnetic reluctance of air between two parallel cylinders of iron	151	Units, fundamental.....	10
Magnetization and magnetic traction.....	148	Units, original and derived	10
Permeability of soft charcoal wrought iron	150		
Permeability of wrought and cast iron	149	VOLT	10-12
Relative resistance and conductance of pure copper at different temperatures	145	Voltage of battery, to calculate	76-77
Specific resistance of solutions and liquids.....	144	Volt amperes.....	56-60
Standard and Birmingham wire gauges	152		
Table of specific resistances in microhms and		WATT	56-60
		Watts and horse power tables for various pressures and currents....	154
		Weight defined.....	9
		Weight of conductor, resistance referred to....	35-36
		Wheatstone bridge, principle of.....	25
		Winding, series and shunt	106-107
		Wire, rule for heating of, by a current.....	59
		Work defined	9
		Work of current.....	60

JUN 8 1918


CATALOGUE

OF

Latest and Best

Mechanical, Scientific and Practical Books

PRACTICAL BOOKS FOR PRACTICAL MEN

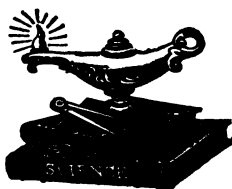

*Any of these books will be sent prepaid to any
part of the world, on receipt of price.*

*Remit by Draft, Postal Order, Express
Order or Registered Letter.*

□ □ □ □

PUBLISHED AND FOR SALE BY

The Norman W. Henley Publishing Co.

132 Nassau St., New York, U. S. A.

INDEX TO SUBJECTS

Automobiles	3
Balloons	4
Brazing and Soldering.....	4
Cams	15
Charts	4
Chemistry	26
Civil Engineering	6
Coke	6
Compressed Air	6
Concrete	6, 7, 8
Dictionaries	9
Dies—Metal Work	8, 9
Drawing—Sketching Paper	9
Electricity	10, 11, 12, 13
Enameling	13
Factory Management, etc.	13
Fuel	13
Flying Machines	4
Gas Engines and Gas.....	14, 15
Gearing and Cams.....	15
Hydraulics	16
Ice and Refrigeration.....	16
Inventions—Patents	16
Knots	16
Lathe Work	17
Liquid Air	17
Locomotive Engineering.....	18, 19, 20
Machine Shop Practice.....	20, 21, 22, 23
Manual Training	24
Marine Engineering	23, 24
Mechanical Movements	22
Metal Work—Dies	8, 9
Mining	24
Motor Cycles	3, 4
Patents and Inventions.....	16
Patterz making	25
Perfumery	25
Plumbing	26
Receipt Book	26
Refrigeration and Ice.....	16
Rubber	27
Saws	27
Screw Cutting	28
Sheet Metal Work.....	8
Soldering	4
Steam Engineering	28, 29
Steam Heating and Ventilation.....	30
Steam Pipes	29
Steel	30
Tractor	31
Turbines	31
Watch Making	32
Wireless Telephones	13

Any of these books will be sent prepaid to any part of the world, on receipt of price.

REMIT by Draft, Postal Money Order, Express Money Order, or by Registered Mail.

GOOD, USEFUL BOOKS

AUTOMOBILES AND MOTORCYCLES

MODERN GASOLINE AUTOMOBILE, ITS DESIGN, CONSTRUCTION AND REPAIR. By Victor W. Pagé. The most complete, practical and up-to-date treatise on gasoline automobiles, explaining fully all principles pertaining to gasoline automobiles and their component parts. It contains the latest and most reliable information on all phases of automobile construction, operation, maintenance and repair. Every part of the automobile, its equipment, accessories, tools, supplies, spare parts necessary, etc., are fully discussed. It is clearly and concisely written by an expert familiar with every branch of the automobile industry. It is not too technical for the layman nor too elementary for the more expert, and is right up-to-date and complete in every detail. New Edition just published. 5½ x 7¾. Cloth, 816 pages, 575 illustrations, 11 folding plates. **Price, \$2.50**

QUESTIONS AND ANSWERS RELATING TO MODERN AUTOMOBILE CONSTRUCTION, DRIVING AND REPAIR. By Victor W. Pagé. A practical self-instructor for students, mechanics and motorists, consisting of thirty-six lessons in the form of questions and answers, written with special reference to the requirements of the non-technical reader desiring easily understood explanatory matter relating to all branches of automobilism. A popular work at a popular price. 5¼ x 7¾. Cloth. 622 pages, 392 illustrations, 3 folding plates. **Price, \$1.50**

THE MODEL T FORD CAR, ITS CONSTRUCTION, OPERATION AND REPAIR. By Victor W. Pagé. This is a complete instruction book. All parts of the Ford Model T Car are described and illustrated; the construction is fully described and operating principles made clear to everyone. Every Ford owner needs this practical book. 1915 Edition. 75 illustrations. 200 pages. Large folding plate. **Price, \$1.00**

MOTORCYCLES, SIDE CARS AND CYCLE-CARS, THEIR CONSTRUCTION, MANAGEMENT AND REPAIR. By Victor W. Pagé. The only complete work published for the motorcyclist and cyclecarist. Describes fully all leading types of machines, their design, construction, maintenance, operation and repair. 550 pages. 350 specially made illustrations, 5 folding plates. **\$1.50**

GASOLINE ENGINE TROUBLES MADE EASY. Arranged by Victor W. Pagé. A chart showing clearly all parts of a typical four-cylinder gasoline engine of the four-cycle type. It outlines distinctly all parts liable to give trouble, and also details the derangements apt to interfere with smooth engine operation. It simplifies the location of all engine troubles. Size 24 x 38 inches. **Price, 25 cents**

LUBRICATION OF THE MOTOR CAR CHASSIS. This chart presents the plan view of a typical six cylinder chassis of standard design and all parts are clearly indicated that demand oil, also the frequency with which they must be lubricated and the kind of oil to use. A practical chart for all interested in motor car maintenance. Size 24 x 38 inches. **Price, 25 cents**

MOTORCYCLE TROUBLES MADE EASY. A chart showing sectional view of a single cylinder gasoline engine. Compiled by VICTOR W. PAGE, M. E. This chart simplifies location of all power plant troubles. A single cylinder motor is shown for simplicity. It outlines distinctly all parts liable to give trouble and also details the derangements apt to interfere with smooth engine operation. This chart will prove of value to all who have to do with the operation, repair or sale of motor cycles. No details omitted. Size 30 x 20 inches. **Price, 25 cents**

BALLOONS AND FLYING MACHINES

MODEL BALLOONS AND FLYING MACHINES, WITH A SHORT ACCOUNT OF THE PROGRESS OF AVIATION. By J. H. ALEXANDER. This book has been written with a view to assist those who desire to construct a model airship or flying machine. It shows the working drawings of five different sized machines. A short account of the progress of aviation is included, which renders the book of great interest. Several illustrations of full sized airship and flying machines of the latest types are shown. This practical work gives data, working drawings and details which will assist materially those interested in the problems of flight. 127 pages, 45 illustrations, 5 folding plates. **Price, \$1.50**

BRAZING AND SOLDERING

BRAZING AND SOLDERING. By JAMES F. HOBART. The only book that shows you just how to handle any job of brazing or soldering that comes along; it tells you what mixture to use, how to make a furnace if you need one. Full of valuable kinks. The fifth edition of this book has just been published, and to it much new matter and a large number of tested formulas for all kinds of solders and fluxes have been added. Illustrated. **25 cents**

CHARTS

GASOLINE ENGINE TROUBLES MADE EASY—A CHART SHOWING SECTIONAL VIEW OF GASOLINE ENGINE. Compiled by VICTOR W. PAGE. It shows clearly all parts of a typical four-cylinder gasoline engine of the four-cycle type. It outlines distinctly all parts liable to give trouble and also details the derangements apt to interfere with smooth engine operation. This sectional view of engine is a complete review of all motor troubles. It is prepared by a practical motorist for all who motor. No details omitted. Size 25 x 38 inches. **Price, 25 cents**

LUBRICATION OF THE MOTOR CAR CHASSIS. This chart presents the plan view of a typical six cylinder chassis of standard design and all parts are clearly indicated that demand oil, also the frequency with which they must be lubricated and the kind of oil to use. A practical chart for all interested in motor car maintenance. Size 24 x 38 inches. **Price, 25 cents**

MOTORCYCLE TROUBLES MADE EASY—A CHART SHOWING SECTIONAL VIEW OF SINGLE CYLINDER GASOLINE ENGINE. Compiled by VICTOR W. PAGE. This chart simplifies location of all power plant troubles, and will prove invaluable to all who have to do with the operation, repair or sale of motorcycles. No details omitted. Size 25 x 38 inches. **Price, 25 cents**

MODERN SUBMARINE CHART—WITH 200 PARTS NUMBERED AND NAMED. A cross-section view, showing clearly and distinctly all the interior of a submarine of the latest type. No details omitted—everything is accurate and to scale. This chart is really an encyclopedia of a submarine. **Price, 25 cents**

BOX CAR CHART. A chart showing the anatomy of a box car, having every part of the car numbered and its proper name given in a reference list. **Price, 25 cents**

GONDOLA CAR CHART. A chart showing the anatomy of a gondola car, having every part of the car numbered and its proper reference name given in a reference list. **Price, 25 cents**

PASSENGER CAR CHART. A chart showing the anatomy of a passenger car, having every part of the car numbered and its proper name given in a reference list. **Price, 25 cents**

STEEL HOPPER BOTTOM COAL CAR. A chart showing the anatomy of a steel hopper bottom coal car, having every part of the car numbered and its proper name given in a reference list. **Price, 25 cents**

TRACTIVE POWER CHART. A chart whereby you can find the tractive power or drawbar pull of any locomotive without making a figure. Shows what cylinders are equal, how driving wheels and steam pressure affect the power. What sized engine you need to exert a given drawbar pull or anything you desire in this line. **50 cents**

HORSE POWER CHART. Shows the horse power of any stationary engine without calculation. No matter what the cylinder diameter of stroke, the steam pressure or cut-off, the revolutions, or whether condensing or non-condensing, it's all there. Easy to use, accurate and saves time and calculations. Especially useful to engineers and designers. **Price, 50 cents**

BOILER ROOM CHART. By GEO. L. FOWLER. A chart—size 14 x 28 inches—showing in isometric perspective the mechanisms belonging in a modern boiler room. This chart is really a dictionary of the boiler room—the names of more than 200 parts being given. **Price, 25 cents**

CIVIL ENGINEERING

HENLEY'S ENCYCLOPEDIA OF PRACTICAL ENGINEERING AND ALLIED TRADES. Edited by JOSEPH G. HORNER, A.M.I.M.E. This set of five volumes contains about 2,500 large quarto pages with thousands of illustrations, including diagrammatic and sectional drawings with full explanatory details. This work covers the entire practice of civil and mechanical engineering. As a work of reference it is without a peer. \$6.00 per single volume. For complete set of five volumes, **Price, \$25.00**

COKE

COKE—MODERN COKING PRACTICE; INCLUDING THE ANALYSIS OF MATERIALS AND PRODUCTS. By T. H. BYROM and J. E. CHRISTOPHER. A handbook for those engaged in coke manufacture and the recovery of by-products. Fully illustrated with folding plates. **Price, \$3.50 net**

COMPRESSED AIR

COMPRESSED AIR IN ALL ITS APPLICATIONS. By GARDNER D. HISCOX. This is the most complete book on the subject of air that has ever been issued, and its thirty-five chapters include about every phase of the subject one can think of. It may be called an encyclopedia of compressed air. It is written by an expert, who, in its 665 pages, has dealt with the subject in a comprehensive manner, no phase of it being omitted. Over 500 illustrations. Fifth Edition, revised and enlarged. Cloth bound, \$5.00. Half Morocco, **Price, \$6.50**
This is the standard work on this important subject.

CONCRETE

CONCRETE WALL FORMS. By A. A. HOUGHTON. A new automatic wall clamp is illustrated with working drawings. Other types of wall forms, clamps, separators, etc., are also illustrated and explained. **Price, 50 cents**

CONCRETE FLOORS AND SIDEWALKS. By A. A. HOUGHTON. The molds for molding squares, hexagonal and many other styles of mosaic floor and sidewalk blocks are fully illustrated and explained. **Price, 50 cents**

PRACTICAL CONCRETE SILO CONSTRUCTION. By A. A. HOUGHTON. Complete working drawings and specifications are given for several styles of concrete silos, with illustrations of molds for monolithic and block silos. The tables, data, and information presented in this book are of the utmost value in planning and constructing all forms of concrete silos. **Price, 50 cents**

MOLDING CONCRETE BATH TUBS, AQUARIUMS AND NATATORIUMS. By A. A. HOUGHTON. Simple molds and instruction are given for molding different styles of concrete bath tubs, swimming pools, etc.

Price, 50 cents

MOLDING CONCRETE CHIMNEYS, SLATE AND ROOF TILES. By A. A. HOUGHTON. The manufacture of all types of concrete slate and roof tile is fully treated. Valuable data on all forms of reinforced concrete roofs are contained within its pages. The construction of concrete chimneys by block and monolithic systems is fully illustrated and described. A number of ornamental designs of chimney construction with molds are shown in this valuable treatise.

Price, 50 cents

MOLDING AND CURING ORNAMENTAL CONCRETE. By A. A. HOUGHTON. The proper proportions of cement and aggregates for various finishes, also the methods of thoroughly mixing and placing in the molds, are fully treated. An exhaustive treatise on this subject that every concrete worker will find of daily use and value.

Price, 50 cents

CONCRETE MONUMENTS, MAUSOLEUMS AND BURIAL VAULTS. By A. A. HOUGHTON. The molding of concrete monuments to imitate the most expensive cut stone is explained in this treatise, with working drawings of easily built molds. Cutting inscriptions and designs is also fully treated.

Price, 50 cents

CONCRETE BRIDGES, CULVERTS AND SEWERS. By A. A. HOUGHTON. A number of ornamental concrete bridges with illustrations of molds are given. A collapsible center or core for bridges, culverts and sewers is fully illustrated with detailed instructions for building.

Price, 50 cents

CONSTRUCTING CONCRETE PORCHES. By A. A. HOUGHTON. A number of designs with working drawings of molds are fully explained so any one can easily construct different styles of ornamental concrete porches without the purchase of expensive molds.

Price, 50 cents

MOLDING CONCRETE FLOWER POTS, BOXES, JARDINIERES, ETC. By A. A. HOUGHTON. The molds for producing many original designs of flower pots, urns, flower boxes, jardinieres, etc., are fully illustrated and explained, so the worker can easily construct and operate same.

Price, 50 cents

MOLDING CONCRETE FOUNTAINS AND LAWN ORNAMENTS. By A. A. HOUGHTON. The molding of a number of designs of lawn seats, curbing, hitching posts, pergolas, sun dials and other forms of ornamental concrete, for the ornamentation of lawns and gardens, is fully illustrated and described.

Price, 50 cents

CONCRETE FOR THE FARM AND SHOP. By A. A. HOUGHTON. The molding of drain tile, tanks, cisterns, fence posts, stable floors, hog and poultry houses and all the purposes for which concrete is an invaluable aid to the farmer are numbered among the contents of this handy volume.

Price, 50 cents

CONCRETE FROM SAND MOLDS. By A. A. HOUGHTON. A practical work treating on a process which has heretofore been held as a trade secret by the few who possessed it, and which will successfully mold every and any class of ornamental concrete work. The process of molding concrete with sand molds is of the utmost practical value, possessing the manifold advantages of a low cost of molds, the ease and rapidity of operation, perfect details to all ornamental designs, density and increased strength of the concrete, perfect curing of the work without attention and the easy removal of the molds regardless of any undercutting the design may have. 192 pages. Fully illustrated. Cloth.
Price, \$2.00

ORNAMENTAL CONCRETE WITHOUT MOLDS. By A. A. HOUGHTON. The process for making ornamental concrete without molds has long been held as a secret, and now, for the first time, this process is given to the public. The book reveals the secret and is the only book published which explains a simple, practical method whereby the concrete worker is enabled, by employing wood and metal templates of different designs, to mold or model in concrete any cornice, archivolt, column, pedestal, base cap, urn or pier in a monolithic form—right upon the job. These may be molded in units or blocks, and then built up to suit the specifications demanded. This work is fully illustrated, with detailed engravings. Cloth.
Price, \$2.00

POPULAR HANDBOOK FOR CEMENT AND CONCRETE USERS. By MYRON H. LEWIS. Everything of value to the concrete user is contained, including kinds of cement employed in construction, concrete architecture, inspection and testing, waterproofing, coloring and painting, rules, tables, working and cost data. The book comprises thirty-three chapters. A valuable addition to the library of every cement and concrete user. Cloth, 430 pages, 126 illustrations.
Price, \$2.50

WATERPROOFING CONCRETE. By MYRON H. LEWIS. Modern methods of waterproofing concrete and other structures. A condensed statement of the principles, rules and precautions to be observed in waterproofing and damp-proofing structures and structural materials. Paper binding. Illustrated. Second Edition.
Price, 50 cents

DIES—METAL WORK

PUNCHES, DIES AND TOOLS FOR MANUFACTURING IN PRESSES. By J. V. WOODWORTH. An encyclopedia of die-making, punch-making, die-sinking, sheet-metal working, and making of special tools, subpresses, devices and mechanical combinations for punching, cutting, bending, forming, piercing, drawing, compressing, and assembling sheet-metal parts and also articles of other materials in machine tools. This is a distinct work from the author's book entitled "Dies; Their Construction and Use." 500 pages, 700 engravings. Second edition. Cloth.
Price, \$4.00

DIES, THEIR CONSTRUCTION AND USE FOR THE MODERN WORKING OF SHEET METALS.

By J. V. WOODWORTH. A new book by a practical man, for those who wish to know the latest practice in the working of sheet metals. It shows how dies are designed, made and used, and those who are engaged in this line of work can secure many valuable suggestions. Fifth edition. 505 illustrations, 384 pages. Cloth. Price, \$3.00

DROP FORGING, DIE-SINKING AND MACHINE-FORMING OF STEEL. By J. V. WOODWORTH.

The processes of die-sinking and force-making, which are thoroughly described and illustrated in this admirable work, are rarely to be found explained in such a clear and concise manner as is here set forth. The process of die-sinking relates to the engraving or sinking of the female or lower dies, such as are used for drop forgings, hot and cold machine forging, swedging and the press working of metals. The process of force-making relates to the engraving or raising of the male or upper dies used in producing the lower dies for the press-forming and machine-forging of duplicate parts of metal. The book contains eleven chapters, and the information contained in these chapters is just what will prove most valuable to the forged-metal worker. All operations described in the work are thoroughly illustrated by means of perspective half-tones and outline sketches of the machinery employed. 300 detailed illustrations. 339 pages. cloth. Price, \$2.50

DICTIONARIES

STANDARD ELECTRICAL DICTIONARY. By

T. O'CONOR SLOANE. A practical handbook of reference containing definitions of about 5,000 distinct words, terms and phrases. The definitions are terse and concise and include every term used in electrical science. Recently issued. Twelfth Edition. 682 pages, 393 illustrations. Price, \$3.00

DRAWING—SKETCHING PAPER

LINEAR PERSPECTIVE SELF-TAUGHT. By

HERMAN T. C. KRAUS. This work gives the theory and practice of linear perspective, as used in architectural, engineering and mechanical drawings. The arrangement of the book is good; the plate is on the left-hand, while the descriptive text follows on the opposite page, so as to be readily referred to. The drawings are on sufficiently large scale to show the work clearly and are plainly figured. The whole work makes a very complete course on perspective drawing. Cloth. Price, \$2.50

SELF-TAUGHT MECHANICAL DRAWING AND ELEMENTARY MACHINE DESIGN. By F.

L. SYLVESTER, M.E., Draftsman, with additions by Erik Oberg, associate editor of "Machinery." A practical elementary treatise on Mechanical Drawing and Machine Design, comprising the first principles of geometric and mechanical drawing, workshop mathematics, mechanics, strength of materials and the calculation and design of machine details, compiled for the use of practical mechanics and young draftsmen. 330 pages, 215 engravings, cloth. Price, \$2.00

A NEW SKETCHING PAPER. A new specially ruled paper to enable you to make sketches or drawings in isometric perspective without any figuring or fussing. It is being used for shop details as well as for assembly drawings, as it makes one sketch do the work of three, and no workman can help seeing just what is wanted. Pads of 40 sheets,
 6 x 9 inches, Price, 25 cents
 9 x 12 inches, Price, 50 cents
 12 x 18 inches, Price, \$1.00

PRACTICAL PERSPECTIVE. By RICHARDS and COLVIN. Shows just how to make all kinds of mechanical drawings in the only practical perspective isometric. Makes everything plain so that any mechanic can understand a sketch or drawing in this way. Saves time in the drawing room and mistakes in the shops. Contains practical examples of various classes of work. Third edition. Limp cloth. Price, 50 cents

ELECTRICITY

ARITHMETIC OF ELECTRICITY. By PROF. T. O'CONOR SLOANE. A practical treatise on electrical calculations of all kinds reduced to a series of rules, all of the simplest forms, and involving only ordinary arithmetic; each rule illustrated by one or more practical problems with detailed solution of each one. This book is classed among the most useful works published on the science of electricity, covering as it does the mathematics of electricity in a manner that will attract the attention of those who are not familiar with algebraical formulas. 160 pages. Twentieth edition. Cloth. Price, \$1.00

DYNAMO BUILDING FOR AMATEURS, OR HOW TO CONSTRUCT A FIFTY WATT DYNAMO. By ARTHUR J. WEED. A practical treatise showing in detail the construction of a small dynamo or motor, the entire machine work of which can be done on a small foot lathe. Dimensioned working drawings are given for each piece of machine work, and each operation is clearly described. This machine, when used as a dynamo, has an output of fifty watts; when used as a motor it will drive a small drill press or lathe. It can be used to drive a sewing machine on any and all ordinary work. The book is illustrated with more than sixty original engravings showing the actual construction of the different parts. Price, paper binding, 50 cents; Cloth, \$1.00

ELECTRIC WIRING, DIAGRAMS AND SWITCHBOARDS. By NEWTON HARRISON. This is the only complete work issued showing and telling you what you should know about direct and alternating current wiring. It is a ready reference. The work is free from advanced technicalities and mathematics, arithmetic being used throughout. It is in every respect a handy, well-written, instructive, comprehensive volume on wiring for the wireman, foreman, contractor or electrician. 272 pages, 105 illustrations. Cloth. Price, \$1.50

COMMUTATOR CONSTRUCTION. By WM. BAXTER, JR. The business end of any dynamo or motor of the direct current type is the commutator. This book goes into the designing, building and maintenance of commutators, shows how to locate troubles and how to remedy them; everyone who fusses with dynamos needs this. Fourth edition. **Price, 25 cents**

ELECTRIC FURNACES AND THEIR INDUSTRIAL APPLICATIONS. By J. WRIGHT. This is a book which will prove of interest to many classes of people; the manufacturer who desires to know what product can be manufactured successfully in the electric furnace, the chemist who wishes to post himself on the electro-chemistry, and the student of science who merely looks into the subject from curiosity. 288 pages. Fully illustrated, cloth. **Price, \$3.00**

ELECTRIC LIGHTING AND HEATING POCKET BOOK. By SYDNEY F. WALKER. This book puts in convenient form useful information regarding the apparatus which is likely to be attached to the mains of an electrical company. Tables of units and equivalents are included and useful electrical laws and formulas are stated. 438 pages, 300 engravings. Bound in leather. Pocket book form. **Price, \$3.00**

ELECTRIC TOY MAKING, DYNAMO BUILDING, AND ELECTRIC MOTOR CONSTRUCTION. This work treats of the making at home of electrical toys, electrical apparatus, motors, dynamos and instruments in general, and is designed to bring within the reach of young and old the manufacture of genuine and useful electrical appliances. 210 pages, cloth. Fully illustrated. Twentieth edition, enlarged. **Price, \$1.00**

PRACTICAL ELECTRICITY. By PROF. T. O'CONOR SLOANE. This work of 768 pages was previously known as Sloane's Electricians' Hand Book, and is intended for the practical electrician who has to make things go. The entire field of electricity is covered within its pages. It contains no useless theory; everything is to the point. It teaches you just what you should know about electricity. It is the standard work published on the subject. Forty-one chapters, 610 engravings, 761 pages, handsomely bound in cloth. Third edition. **Price, \$2.50**

ELECTRICITY SIMPLIFIED. By PROF. T. O'CONOR SLOANE. The object of "Electricity Simplified" is to make the subject as plain as possible and to show what the modern conception of electricity is; to show how two plates of different metals immersed in acid can send a message around the globe; to explain how a bundle of copper wire rotated by a steam engine can be the agent in lighting our streets, to tell what the volt, ohm and ampere are, and what high and low tension mean; and to answer the questions that perpetually arise in the mind in this age of electricity. 172 pages. Illustrated. Thirteenth edition. Cloth. **Price, \$1.00**

HOUSE WIRING. By THOMAS W. POPPE. Describing and illustrating up-to-date methods of installing electric light wiring. Intended for the electrician, helper and apprentice. Contains just the information needed for successful wiring of a building. Fully illustrated with diagrams and plans. It solves all wiring problems and contains nothing that conflicts with the rulings of the National Board of Fire Underwriters. It gives just the information essential to the successful wiring of a building. 125 pages, fully illustrated, flexible cloth. **Price, 50 cents**

MANAGEMENT OF DYNAMOS. By LUMMIS-PATERSON. A handbook of theory and practice. This work is arranged in three parts. The first part covers the elementary theory of the dynamo. The second part, the construction and action of the different classes of dynamos in common use are described; while the third part relates to such matters as affect the practical management and working of dynamos and motors. Fourth edition. 292 pages, 117 illustrations. **Price, \$1.50**

ELECTRICITY IN FACTORIES AND WORKSHOPS. Its cost and convenience. A handy book for power producers and power users. By ARTHUR P. HASLAM. $5\frac{1}{2}$ x 8. Cloth, 312 pages, 70 illustrations. **Price, \$2.50**

HOW TO BECOME A SUCCESSFUL ELECTRICIAN. By PROF. T. O'CONOR SLOANE. An interesting book from cover to cover. Telling in simplest language the surest and easiest way to become a successful electrician. The studies to be followed, methods of work, field of operation and the requirements of the successful electrician are pointed out and fully explained. 202 pages. Illustrated. Eighteenth revised edition. Cloth. **Price, \$1.00**

STANDARD ELECTRICAL DICTIONARY. By PROF. T. O'CONOR SLOANE. A practical handbook of reference containing definitions of about 5,000 distinct words, terms and phrases. The definitions are terse and concise and include every term used in electrical science. Twelfth edition. 682 pages, 393 illustrations. **Price, \$3.00**

SWITCHBOARDS. By WILLIAM BAXTER, JR. This book appeals to every engineer and electrician who wants to know the practical side of things. All sorts and conditions of dynamos, connections and circuits are shown by diagram and illustrate just how the switchboard should be connected. Includes direct and alternating current boards, also those for arc lighting, incandescent and power circuits. Special treatment on high voltage boards for power transmission. Second edition. 190 pages. Illustrated. **Price, \$1.50**

TELEPHONE CONSTRUCTION, INSTALLATION, WIRING, OPERATION AND MAINTENANCE. By W. H. RADCLIFFE and H. C. CUSHING. This book gives the principles of construction and operation of both the Bell and Independent instruments; approved methods of installing and wiring them; the means of protecting them from lightning and abnormal currents; their connection together for operation as series or bridging stations; and rules for their inspection and maintenance. Line wiring and the wiring and operation of special telephone systems are also treated. 224 pages, 132 illustrations. Second revised edition. **Price, \$1.00**

WIRELESS TELEGRAPHY AND TELEPHONY SIMPLY EXPLAINED. By ALFRED P. MORGAN. This is undoubtedly one of the most complete and comprehensible treatises on the subject ever published, and a close study of its pages will enable one to master all the details of the wireless transmission of messages. The author has filled a long-felt want and has succeeded in furnishing a lucid, comprehensible explanation in simple language of the theory and practice of wireless telegraphy and telephony. 154 pages, 156 engravings. **Price, \$1.00**

WIRING A HOUSE. By HERBERT PRATT. Shows a house already built; tells just how to start about wiring it; where to begin; what wire to use; how to run it according to insurance rules; in fact, just the information you need. Directions apply equally to a shop. Fourth edition. **Price, 25 cents**

ENAMELING

HENLEY'S TWENTIETH CENTURY RECEIPT BOOK. Edited by GARDNER D. HISCOX. A work of 10,000 practical receipts, including enameling receipts for hollow ware, for metals, for signs, for china and porcelain, for wood, etc. Thorough and practical. 1914 edition. **Price, \$3.00**

FACTORY MANAGEMENT, ETC.

MODERN MACHINE SHOP CONSTRUCTION, EQUIPMENT AND MANAGEMENT. By O. E. PERRIGO, M.E. A work designed for the practical and everyday use of the architect who designs, the manufacturers who build, the engineers who plan and equip, the superintendents who organize and direct, and for the information of every stockholder, director, officer, accountant, clerk, superintendent, foreman and workman of the modern machine shop and manufacturing plant of Industrial America. **Price, \$5.00**

FUEL

COMBUSTION OF COAL AND THE PREVENTION OF SMOKE. By WM. M. BARR. This book has been prepared with special reference to the generation of heat by the combustion of the common fuels found in the United States, and deals particularly with the conditions necessary to the economic and smokeless combustion of bituminous coals in stationary and locomotive steam boilers. The presentation of this important subject is systematic and progressive. The arrangement of the book is in a series of practical questions to which are appended accurate answers, which describe in language, free from technicalities, the several processes involved in the furnace combustion of American fuels; it clearly states the essential requisites for perfect combustion, and points out the best methods for furnace construction for obtaining the greatest quantity of heat from any given quality of coal. Nearly 350 pages, fully illustrated. Fifth edition. **Price, \$1.00**

SMOKE PREVENTION AND FUEL ECONOMY. By BOOTH and KERSHAW. As the title indicates, this book of 197 pages and 75 illustrations deals with the problem of complete combustion, which it treats from the chemical and mechanical standpoints, besides pointing out the economical and humanitarian aspects of the question. **Price, \$2.50**

GAS ENGINES AND GAS

GAS ENGINE CONSTRUCTION, Or How to Build a Half-Horse-power Gas Engine. By PARSELL and WEEK. A practical treatise describing the theory and principles of the action of gas engines of various types, and the design and construction of a half-horse-power gas engine, with illustrations of the work in actual progress, together with dimensioned working drawings giving clearly the sizes of the various details. 300 pages. Third edition. Cloth. Price, \$2.50

CHEMISTRY OF GAS MANUFACTURE. By H. M. ROYLES. This book covers points likely to arise in the ordinary course of the duties of the engineer or manager of a gas works not large enough to necessitate the employment of a separate chemical staff. It treats of the testing of the raw materials employed in the manufacture of illuminating coal gas and of the gas produced. The preparation of standard solutions is given as well as the chemical and physical examination of gas coal. $5\frac{1}{4} \times 8\frac{1}{4}$. Cloth, 328 pages, 82 illustrations, 1 colored plate. Price, \$4.50

THE GASOLINE ENGINE ON THE FARM: ITS OPERATION, REPAIR AND USES. By XENO W. PUTNAM. A useful and practical treatise on the modern gasoline and kerosene engine, its construction, management, repair and the many uses to which it can be applied in present-day farm life. It considers all the various household, shop and field uses of this up-to-date motor and includes chapters on engine installation, power transmission and the best arrangement of the power plant in reference to the work. $5\frac{1}{4} \times 7\frac{1}{4}$. Cloth. 527 pages, 179 illustrations. Price, \$2.00

GASOLINE ENGINES: THEIR OPERATION, USE AND CARE. By A. HYATT VERRILL. A comprehensive, simple and practical work, treating of gasoline engines for stationary, marine or vehicle use; their construction, design, management, care, operation, repair, installation and troubles. A complete glossary of technical terms and an alphabetically arranged table of troubles and symptoms form a most valuable and unique feature of the book. $5\frac{1}{4} \times 7\frac{1}{4}$. Cloth. 275 pages, 152 illustrations. Price, \$1.50

GAS, GASOLINE AND OIL ENGINES. By GARDNER D. HISCOX. Revised by VICTOR W. PAGE. Just issued 1915 revised and enlarged edition. Every user of a gas engine needs this book. Simple, instructive and right up-to-date. The only complete work on the subject. Tells all about internal combustion engineering, treating exhaustively on the design, construction and practical application of all forms of gas, gasoline, kerosene and crude petroleum-oil engines. Describes minutely all auxiliary systems, such as lubrication, carburetion and ignition. Considers the theory and management of all forms of explosive motors for stationary and marine work, automobiles, aeroplanes and motor-cycles. Includes also Producer Gas and Its Production. Invaluable instructions for all students, gas-engine owners, gas-engineers, patent experts, designers, mechanics, draftsmen and all having to do with the modern power. Illustrated by over 400 engravings, many specially made from engineering drawings, all in correct proportion. 650 pages, 435 engravings. Price, net, \$2.50

MODERN GAS ENGINES AND PRODUCER GAS PLANTS. By R. E. MATHOT, M.E. A practical treatise of 320 pages, fully illustrated by 175 detailed illustrations, setting forth the principles of gas engines and producer design, the selection and installation of an engine, conditions of perfect operation, producer-gas engines and their possibilities, the care of gas engines and producer-gas plants, with a chapter on volatile hydrocarbon and oil engines. This book has been endorsed by Dugal Clerk as a most useful work for all interested in gas engine installation and producer gas. **Price, \$2.50**

HOW TO RUN AND INSTALL GASOLINE ENGINES. By C. VON CULIN. 1915 revised and enlarged edition just issued. The object of this little book is to furnish a pocket instructor for the beginner, the busy man who uses an engine for pleasure or profit, but who does not have the time or inclination for a technical book, but simply to thoroughly understand how to properly operate, install and care for his own engine. The index refers to each trouble, remedy and subject alphabetically. Being a quick reference to find the cause, remedy and prevention for troubles, and to become an expert with his own engine. Pocket size. Paper binding. **Price, 25 cents**

MODERN GAS TRACTOR, ITS CONSTRUCTION, UTILITY, OPERATION AND REPAIR. By VICTOR W. PAGE. Treats exhaustively on the design and construction of farm tractors and tractor power-plants, and gives complete instructions on their care, operation and repair. All types and sizes of gasoline, kerosene and oil tractors are described, and every phase of traction engineering practice fully covered. Invaluable to all desiring reliable information on gas motor propelled traction engines and their use. $5\frac{1}{4} \times 7\frac{1}{2}$. Cloth. 475 pages, 204 illustrations, 3 folding plates. **Price, \$2.00**

GEARING AND CAMS

BEVEL GEAR TABLES. By D. AG. ENGSTROM. No one who has to do with bevel gears in any way should be without this book. The designer and draftsman will find it a great convenience, while to the machinist who turns up the blanks or cuts the teeth, it is invaluable, as all needed dimensions are given and no fancy figuring need be done. Third edition. Cloth. **Price, \$1.00**

CHANGE GEAR DEVICES. By OSCAR E. PERRIGO. A book for every designer, draftsman and mechanic who is interested in feed changes for any kind of machines. This shows what has been done and how. Gives plans, patents and all information that you need. Saves hunting through patent records and reinventing old ideas. A standard work of reference. Cloth. **Price, \$1.00**

DRAFTING OF CAMS. By LOUIS ROUILLION. The laying out of cams is a serious problem unless you know how to go at it right. This puts you on the right road for practically any kind of cam you are likely to run up against. Third edition. **Price, 25 cents**

HYDRAULICS

HYDRAULIC ENGINEERING. By GARDNER D. HISCOX. A treatise on the properties, power, and resources of water for all purposes. Including the measurement of streams; the flow of water in pipes or conduits; the horsepower of falling water; turbine and impact water-wheels; wave-motors, centrifugal, reciprocating and air-lift pumps. With 300 figures and diagrams and 36 practical tables. 320 pages. **Price, \$4.00**

ICE AND REFRIGERATION

POCKETBOOK OF REFRIGERATION AND ICE MAKING. By A. J. WALLIS-TAYLOR. This is one of the latest and most comprehensive reference books published on the subject of refrigeration and cold storage. It explains the properties and refrigerating effect of the different fluids in use, the management of refrigerating machinery and the construction and insulation of cold rooms with their required pipe surface for different degrees of cold; freezing mixtures and non-freezing brines, temperatures of cold rooms for all kinds of provisions, cold storage charges for all classes of goods, ice making and storage of ice, data and memoranda for constant reference by refrigerating engineers, with nearly one hundred tables containing valuable references to every fact and condition required in the installment and operation of a refrigerating plant. New edition just published. **Price, \$1.50**

INVENTIONS—PATENTS

INVENTOR'S MANUAL, HOW TO MAKE A PATENT PAY. This is a book designed as a guide to inventors in perfecting their inventions, taking out their patents, and disposing of them. It is not in any sense a Patent Solicitor's circular nor a Patent Broker's advertisement. No advertisements of any description appear in the work. It is a book containing a quarter of a century's experience of a successful inventor, together with notes based upon the experience of many other inventors. Revised edition. 120 pages. Cloth. **Price, \$1.00**

KNOTS

KNOTS, SPLICES AND ROPE WORK. By A. HYATT VERRILL. This is a practical book giving complete and simple directions for making all the most useful and ornamental knots in common use, with chapters on Splicing, Pointing, Seizing, Serving, etc. This book is fully illustrated with one hundred and fifty original engravings, which shows how each knot, tie or splice is formed, and its appearance when finished. The book will be found of the greatest value to campers, yachtsmen, travelers or Boy Scouts, in fact, to anyone having occasion to use or handle rope or knots for any purpose. The book is thoroughly reliable and practical, and is not only a guide but a teacher. It is the standard work on the subject. 118 pages, 150 original engravings. **Price, 60 cents**

LATHE WORK

TURNING AND BORING TAPERS. By FRED H. COLVIN. There are two ways to turn tapers; the right way and one other. This treatise has to do with the right way; it tells you how to start the work properly, how to set the lathe, what tools to use and how to use them, and forty and one other little things that you should follow. Fourth edition. **Price, 25 cents**

LATHE DESIGN, CONSTRUCTION, AND OPERATION, WITH PRACTICAL EXAMPLES OF LATHE WORK. By OSCAR E. FERRIGO. A New revised edition, and the only complete American work on the subject, written by a man who knows not only how work ought to be done, but who also knows how to do it, and how to convey this knowledge to others. It is strictly up-to-date in its descriptions and illustrations. Lathe history and the relations of the lathe to manufacturing are given; also a description of the various devices for feeds and thread cutting mechanisms from early efforts in this direction to the present time. Lathe design is thoroughly discussed, including back gearing, driving cones, thread-cutting gears, and all the essential element of the modern lathe. The classification of lathes is taken up, giving the essential differences of the several types of lathes including, as is usually understood, engine lathes, bench lathes, speed lathes, forge lathes, gap lathes, pulley lathes, forming lathes, multiple-spindle lathes, rapid-reduction lathes, precision lathes, turret lathes, special lathes, electrically-driven lathes, etc. In addition to the complete exposition on construction and design, much practical matter on lathe installation, care and operation has been incorporated in the enlarged 1915 edition. All kinds of lathe attachments for drilling, milling, etc., are described and complete instructions are given to enable the novice machinist to grasp the art of lathe operation as well as the principles involved in design. A number of difficult machining operations are described at length and illustrated. The new edition has nearly 500 pages and 350 illustrations. **Price, \$2.50**

PRACTICAL METAL TURNING. By JOSEPH G. HORNER. A work of 404 pages, fully illustrated, covering in a comprehensive manner the modern practice of machining metal parts in the lathe, including the regular engine lathe, its essential design, its uses, its tools, its attachments, and the manner of holding the work and performing the operations. The modernized engine lathe, its methods, tools and great range of accurate work. The turret lathe, its tools, accessories and methods of performing its functions. Chapters on special work, grinding, tool holders, speeds, feeds, modern tool steels, etc., etc. Second edition. **Price, \$3.50**

LIQUID AIR

LIQUID AIR AND THE LIQUEFACTION OF GASES. By T. O'CONOR SLOANE. Theory, history, biography, practical applications, manufacture. Second edition. 365 pages. Illustrated. **Price, \$2.00**

LOCOMOTIVE ENGINEERING

AIR-BRAKE CATECHISM. By ROBERT H. BLACKALL. This book is a standard text book. It is the only practical and complete work published. Treats on the equipment manufactured by the Westinghouse Air Brake Company, including the E-T Locomotive Brake Equipment, the K (Quick-Service) Triple Valve for freight service; the L High Speed Triple Valve; the P-C Passenger Brake Equipment, and the Cross Compound Pump. The operation of all parts of the apparatus is explained in detail and a practical way of locating their peculiarities and remedying their defects is given. Endorsed and used by air-brake instructors and examiners on nearly every railroad in the United States. Twenty-sixth edition. 411 pages, fully illustrated with folding plates and diagrams. New edition. **Price, \$2.00**

AMERICAN COMPOUND LOCOMOTIVES. By FRED H. COLVIN. The most complete book on compounds published. Shows all types, including the balanced compound. Makes everything clear by many illustrations, and shows valve setting, breakdowns and repairs. 142 pages. Cloth. **Price, \$1.00**

APPLICATION OF HIGHLY SUPERHEATED STEAM TO LOCOMOTIVES. By ROBERT GARRE. A practical book which cannot be recommended too highly to those motive-power men who are anxious to maintain the highest efficiency in their locomotives. Contains special chapters on Generation of Highly Superheated Steam; Superheated Steam and the Two-Cylinder Simple Engine; Compounding and Superheating; Designs of Locomotive Superheaters; Constructive Details of Locomotives Using Highly Superheated Steam. Experimental and Working Results. Illustrated with folding plates and tables. Cloth. **Price, \$2.50**

COMBUSTION OF COAL AND THE PREVENTION OF SMOKE. By WM. M. BARR. To be a success a fireman must be "Light on Coal." He must keep his fire in good condition, and prevent, as far as possible, the smoke nuisance. To do this, he should know how coal burns, how smoke is formed and the proper burning of fuel to obtain the best results. He can learn this, and more too, from Barr's "Combination of Coal." It is an absolute authority on all questions relating to the firing of a locomotive. Fifth edition. Nearly 350 pages, fully illustrated. **Price, \$1.00**

DIARY OF A ROUND-HOUSE FOREMAN. By T. S. REILLY. This is the greatest book of railroad experiences ever published. Containing a fund of information and suggestions along the line of handling men, organizing, etc., that one cannot afford to miss. 176 pages. **Price, \$1.00**

LINK MOTIONS, VALVES AND VALVE SETTING. By FRED H. COLVIN, Associate Editor of "American Machinist." A handy book that clears up the mysteries of valve setting. Shows the different valve gears in use, how they work, and why. Piston and slide valves of different types are illustrated and explained. A book that every railroad man in the motive-power department ought to have. Fully illustrated. New revised and enlarged edition just published. **Price, 50 cents**

TRAIN RULE EXAMINATIONS MADE EASY.

By G. E. COLLINGWOOD. This is the only practical work on train rules in print. Every detail is covered, and puzzling points are explained in simple, comprehensive language, making it a practical treatise for the train dispatcher, engineer, trainman and all others who have to do with the movements of trains. Contains complete and reliable information of the Standard Code of Train Rules for single track. Shows signals in colors, as used on the different roads. Explains fully the practical application of train orders, giving a clear and definite understanding of all orders which may be used. 256 pages. Fully illustrated with train signals in colors.

Price, \$1.25

LOCOMOTIVE BOILER CONSTRUCTION.

By FRANK A. KLEINHANS. The only book showing how locomotive boilers are built in modern shops. Shows all types of boilers used; gives details of construction; practical facts, such as life of riveting punches and dies, work done per day, allowance for bending and flanging sheets and other data that means dollars to any railroad man. Second edition. 451 pages, 334 illustrations. Six folding plates. Cloth.

Price, \$3.00

LOCOMOTIVE BREAKDOWNS AND THEIR

REMEDIES. By GEO. L. FOWLER. Revised by Wm. W. Wood, Air-Brake Instructor. Just issued. Revised pocket edition. It is out of the question to try and tell you about every subject that is covered in this pocket edition of Locomotive Breakdowns. Just imagine all the common troubles that an engineer may expect to happen some time, and then add all of the unexpected ones, troubles that could occur, but that you had never thought about, and you will find that they are all treated with the very best methods of repair. Walschaert Locomotive Valve Gear Troubles, Electric Headlight Troubles, as well as Questions and Answers on the Air Brake are all included. Seventh edition. 294 pages. Fully illustrated.

Price, \$1.00

LOCOMOTIVE CATECHISM.

By ROBERT GRIMSHAW. Twenty-eighth revised and enlarged edition. This may well be called an encyclopedia of the locomotive. Contains over 4,000 examination questions with their answers, including among them those asked at the first, second and third years' examinations. 825 pages, 437 illustrations and 3 folding plates.

Price, \$2.50

WESTINGHOUSE ET AIR-BRAKE INSTRUCTION POCKET BOOK CATECHISM.

By Wm. W. Wood, Air-Brake Instructor. A practical work containing examination questions and answers on the E. T. Equipment. Covering what the E. T. Brake is. How it should be operated. What to do when defective. Not a question can be asked of the engineman up for promotion on either the No. 5 or the No. 6 E T equipment that is not asked and answered in the book. If you want to thoroughly understand the E T equipment get a copy of this book. It covers every detail. Makes air-brake troubles and examinations easy. Fully illustrated with colored plates, showing various pressures. Cloth.

Price, \$1.50

PRACTICAL INSTRUCTOR AND REFERENCE BOOK FOR LOCOMOTIVE FIREMEN AND ENGINEERS. By CHAS. F. LOCKHART. An entirely new book on the locomotive. It appeals to every railroad man, as it tells him how things are done and the right way to do them. Written by a man who has had years of practical experience in locomotive shops and on the road firing and running. The information given in this book cannot be found in any other similar treatise. Eight hundred and fifty-one questions with their answers are included, which will prove specially helpful to those preparing for examination. 368 pages, 88 illustrations. Cloth. **Price, \$1.50**

PREVENTION OF RAILROAD ACCIDENTS, OR SAFETY IN RAILROADING. By GEORGE BRADSHAW. This book is a heart-to-heart talk with railroad employees, dealing with facts, not theories, and showing the men in the ranks, from every-day experience, how accidents occur and how they may be avoided. The book is illustrated with seventy original photographs and drawings showing the safe and unsafe methods of work. No visionary schemes, no ideal pictures. Just plain facts and practical suggestions are given. Every railroad employee who reads the book is a better and safer man to have in railroad service. It gives just the information which will be the means of preventing many injuries and deaths. All railroad employees should procure a copy; read it, and do their part in preventing accidents. 169 pages. Pocket size. Fully illustrated.

Price, 50 cents

WALSCHAERT LOCOMOTIVE VALVE GEAR. By WM. W. WOOD. If you would thoroughly understand the Walschaert Valve Gear, you should possess a copy of this book. The author divides the subject into four divisions, as follows: I. Analysis of the gear. II. Designing and erecting of the gear. III. Advantages of the gear. IV. Questions and answers relating to the Walschaert Valve Gear. This book is specially valuable to those preparing for promotion. Third edition. 245 pages. Fully illustrated. Cloth.

Price, \$1.50

MACHINE SHOP PRACTICE

MACHINE SHOP ARITHMETIC. By COLVIN CHENEY. Most popular book for shop men. Shows how all shop problems are worked out and "why." Includes change gears for cutting any threads; drills, taps, sink and force fits; metric system of measurements and threads. Used by all classes of mechanics and for instruction in Y. M. C. A. and other schools. Sixth edition. 131 pages.

Price, 50 cents

TOOLS FOR MACHINISTS AND WOOD WORKERS, INCLUDING INSTRUMENTS OF MEASUREMENT. By JOSEPH G. HORNER. The principles upon which cutting tools for wood, metal, and other substances are made are identical, whether used by the machinist, the carpenter, or by any other skilled mechanic in their daily work, and the object of this book is to give a correct and practical description of these tools as they are commonly designed, constructed, and used. 340 pages, fully illustrated.

Price, \$3.50

AMERICAN TOOL MAKING AND INTER-CHANGEABLE MANUFACTURING.

By J. V. WOODWORTH. In its 500-odd pages the one subject only, Tool Making, and whatever relates thereto, is dealt with. The work stands without a rival. It is a complete practical treatise on the art of American Tool Making and system of interchangeable manufacturing as carried on to-day in the United States. In it are described and illustrated all of the different types and classes of small tools, fixtures, devices and special appliances which are in general use in all machine-manufacturing and metal-working establishments where economy, capacity and interchangeability in the production of machined metal parts are imperative. The science of jig making is exhaustively discussed, and particular attention is paid to drill jigs, boring, profiling and milling fixtures and other devices in which the parts to be machined are located and fastened within the contrivances. All of the tools, fixtures and devices illustrated and described have been or are used for the actual production of work, such as parts of drill presses, lathes, patented machinery, typewriters, electrical apparatus, mechanical appliances, brass goods, composition parts, mould products, sheet metal articles, drop forgings, jewelry, watches, medals, coins, etc. Second edition. 531 pages.

Price, \$4.00

HENLEY'S ENCYCLOPEDIA OF PRACTICAL ENGINEERING AND ALLIED TRADES.

Edited by JOSEPH G. HORNER, A.M.I.Mech.E. This book covers the entire practice of Civil and Mechanical Engineering. The best known experts in all branches of engineering have contributed to these volumes. The Cyclopedica is admirably well adapted to the needs of the beginner and the self-taught practical man, as well as the mechanical engineer, designer, draftsman, shop superintendent, foreman and machinist.

It is a modern treatise in five volumes. Handsomely bound in half morocco, each volume containing nearly 500 pages, with thousands of illustrations, including diagrammatic and sectional drawings with full explanatory details.

Price, for the complete set of five volumes, \$25.00

MODERN MACHINE SHOP CONSTRUCTION, EQUIPMENT AND MANAGEMENT.

By OSCAR E. FERRIGO. The only work published that describes the Modern Machine Shop or Manufacturing Plant from the time the grass is growing on the site intended for it until the finished product is shipped. Just the book needed by those contemplating the erection of modern shop buildings, the rebuilding and reorganization of old ones, or the introduction of Modern Shop Methods, Time and Cost Systems. It is a book written and illustrated by a practical shop man for practical shop men who are too busy to read theories and want facts. It is the most complete all-around book of its kind ever published. 400 large quarto pages, 225 original and specially-made illustrations.

Price, \$5.00

"SHOP KINKS." By ROBERT GRIMSHAW. This shows special methods of doing work of various kinds, and releasing cost of production. Has hints and kinks from some of the largest shops in this country and Europe. You are almost sure to find some that apply to your work, and in such a way as to save time and trouble. 400 pages. Fifth edition. Cloth.

Price, \$2.50

THE WHOLE FIELD OF MECHANICAL MOVEMENTS COVERED BY MR. HISCOX'S
TWO BOOKS

We publish two books by Gardner D. Hiscox that will keep you from "inventing" things that have been done before, and suggest ways of doing things that you have not thought of before. Many a man spends time and money, pondering over some mechanical problem, only to learn, after he has solved the problem, that the same thing has been accomplished and put in practice by others long before. Time and money spent in an effort to accomplish what has already been accomplished are time and money lost. The whole field of mechanics, every known mechanical movement, and practically every device is covered by these two books. If the thing you want has been invented, it is illustrated in them. If it hasn't been invented, then you'll find in them the nearest things to what you want, some movement or device that will apply in your case, perhaps; or which will give you a key from which to work. No book or set of books ever published is of more real value to the inventor, draftsman or practical mechanic than the two volumes described below.

MECHANICAL MOVEMENTS, POWERS AND DEVICES. By GARDNER D. HISCOX. This is a collection of 1,890 engravings of different mechanical motions and appliances, accompanied by appropriate text, making it a book of great value to the inventor, the draftsman, and to all readers with mechanical tastes. The book is divided into eighteen sections or chapters, in which the subject-matter is classified under the following heads: Mechanical Powers; Transmission of Power; Measurement of Power; Steam Power; Air Power Appliances; Electric Power and Construction; Navigation and Roads; Gearing; Motion and Devices; Controlling Motion; Horological; Mining; Mill and Factory Appliances; Construction and Devices; Drafting Devices; Miscellaneous Devices, etc. Fourteenth edition. 400 octavo pages. **Price, \$2.50**

MECHANICAL APPLIANCES, MECHANICAL MOVEMENTS AND NOVELTIES OF CONSTRUCTION. By GARDNER D. HISCOX. This is a supplementary volume to the one upon mechanical movements. Unlike the first volume, which is more elementary in character, this volume contains illustrations and descriptions of many combinations of motions and of mechanical devices and appliances found in different lines of machinery, each device being shown by a line drawing with a description showing its working parts and the method of operation. From the multitude of devices described and illustrated might be mentioned, in passing, such items as conveyors and elevators, Prony brakes, thermometers, various types of boilers, solar engines, oil-fuel burners, condensers, evaporators, Corliss and other valve gears, governors, gas engines, water motors of various descriptions, air ships, motors and dynamos, automobile and motor bicycles, railway lock signals, car couplers, link and gear motions, ball bearings, breech block mechanism for heavy guns, and a large accumulation of others of equal importance. 1,000 specially made engravings. 396 octavo pages. Third revised edition. **Price, \$2.50**

MACHINE SHOP TOOLS AND SHOP PRACTICE. By W. H. VANDERVOORT. A work of 555 pages and 673 illustrations, describing in every detail the construction, operation, and manipulation of both hand and machine tools. Includes chapters on filing, fitting, and scraping surfaces; on drills, reamers, taps, and dies; the lathe and its tools; planers, shapers, and their tools; milling machines and cutters; gear cutters and gear cutting; drilling machines and drill work; grinding machines and their work; hardening and tempering; gearing, belting, and transmission machinery; useful data and tables. Sixth edition. Cloth. **Price, \$3.00**

MODERN MILLING MACHINES: THEIR DESIGN, CONSTRUCTION AND OPERATION. By JOSEPH G. HORNER. This book describes and illustrates the Milling Machine and its work in such a plain, clear, and forceful manner, and illustrates the subject so clearly and completely, that the up-to-date machinist, student, or mechanical engineer cannot afford to do without the valuable information which it contains. It describes not only the early machines of this class, but notes their gradual development into the splendid machines of the present day, giving the design and construction of the various types, forms, and special features produced by prominent manufacturers, American and foreign. 304 pages, 300 illustrations. Cloth **Price, \$4.00**

THE MODERN MACHINIST. By JOHN T. USHER. This book might be called a compendium of shop methods, showing a variety of special tools and appliances which will give new ideas to many mechanics from the superintendent down to the man at the bench. It will be found a valuable addition to any machinist's library and should be consulted whenever a new or difficult job is to be done, whether it is boring, milling, turning, or planing, as they are all treated in a practical manner. Fifth edition. 320 pages, 250 illustrations. Cloth. **Price, \$2.50**

THREADS AND THREAD CUTTING. By COLVIN and STABEL. This clears up many of the mysteries of thread-cutting, such as double and triple threads, internal threads, catching threads, use of hobs, etc. Contains a lot of useful hints and several tables. Third edition. **Price, 25 cents**

MARINE ENGINEERING

MODERN SUBMARINE CHART. A cross-section view, showing clearly and distinctly all the interior of a submarine of the latest type. You get more information from this chart about the construction and operation of a submarine than in any other way. No details omitted—everything is accurate and to scale. It is absolutely correct in every detail, having been approved by naval engineers. All the machinery and devices fitted in a modern submarine boat are shown, and to make the engraving more readily understood all the features are shown in operative form, with officers and men in the act of performing the duties assigned to them in service conditions. **THIS CHART IS REALLY AN ENCYCLOPEDIA OF SUBMARINE.** It is educational and worth many times its cost. Mailed in a tube for **25 cents**

MARINE ENGINES AND BOILERS, THEIR DESIGN AND CONSTRUCTION. By Dr. G. BAUER, LESLIE S. ROBERTSON and S. BRYAN DONKIN. In the words of Dr. Bauer, the present work owes its origin to an oft felt want of a condensed treatise embodying the theoretical and practical rules used in designing marine engines and boilers. The need of such a work has been felt by most engineers engaged in the construction and working of marine engines, not only by the younger men, but also by those of greater experience. The fact that the original German work was written by the chief engineer of the famous Vulcan Works, Stettin, is in itself a guarantee that this book is in all respects thoroughly up-to-date, and that it embodies all the information which is necessary for the design and construction of the highest types of marine engines and boilers. It may be said that the motive power which Dr. Bauer has placed in the fast German liners that have been turned out of late years from the Stettin Works represent the very best practice in marine engineering of the present day. The work is clearly written, thoroughly systematic, theoretically sound; while the character of the plans, drawings, tables, and statistics is without reproach. The illustrations are careful reproductions from actual working drawings, with some well-executed photographic views of completed engines and boilers. 744 pages, 550 illustrations and numerous tables. Cloth.

Price, \$9.00 net

MANUAL TRAINING

ECONOMICS OF MANUAL TRAINING. By LOUIS ROUILLON. The only book that gives just the information needed by all interested in manual training, regarding buildings, equipment and supplies. Shows exactly what is needed for all grades of the work from the Kindergarten to the High and Normal School. Gives itemized lists of everything needed and tells just what it ought to cost. Also shows where to buy supplies. Illustrated. Second edition. Cloth.

Price, \$1.50

MINING

ORE DEPOSITS, WITH A CHAPTER ON HINTS TO PROSPECTORS. By J. P. JOHNSON. This book gives a condensed account of the ore deposits at present known in South Africa. It is also intended as a guide to the prospector. Only an elementary knowledge of geology and some mining experience are necessary in order to understand this work. With these qualifications, it will materially assist one in his search for metalliferous mineral occurrences and, so far as simple ores are concerned, should enable one to form some idea of the possibilities of any they may find. Illustrated. Cloth.

Price, \$2.00

PRACTICAL COAL MINING. By T. H. COCKIN. An important work, containing 428 pages and 213 illustrations, complete with practical details, which will intuitively impart to the reader, not only a general knowledge of the principles of coal mining, but also considerable insight into allied subjects. The treatise is positively up to date in every instance, and should be in the hands of every colliery engineer, geologist, mine operator, superintendent, foreman, and all others who are interested in or connected with the industry. Third edition. Cloth.

Price, \$2.50

PHYSICS AND CHEMISTRY OF MINING. By T. H. BYROM. A practical work for the use of all preparing for examinations in mining or qualifying for colliery managers' certificates. The aim of the author in this excellent book is to place clearly before the reader useful and authoritative data which will render him valuable assistance in his studies. The only work of its kind published. The information incorporated in it will prove of the greatest practical utility to students, mining engineers, colliery managers, and all others who are specially interested in the present-day treatment of mining problems. 160 pages, illustrated. **Price, \$2.00**

PATTERN MAKING

PRACTICAL PATTERN MAKING. By F. W. BARROWS. This book, now in its second edition, is a comprehensive and entirely practical treatise on the subject of pattern making, illustrating pattern work in both wood and metal, and with definite instructions on the use of plaster of paris in the trade. It gives specific and detailed descriptions of the materials used by pattern makers and describes the tools; both those for the bench and the more interesting machine tools; having complete chapters on the lathe, the circular saw and the band saw. It gives many examples of pattern work, each one fully illustrated and explained with much detail. These examples, in their great variety, offer much that will be found of interest to all pattern makers, and especially to the younger ones, who are seeking information on the more advanced branches of their trade. Containing nearly 350 pages and 170 illustrations. Second edition, revised and enlarged. **Price, \$2.00**

PERFUMERY

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by G. D. HISCOX. The most valuable techno-chemical receipt book published. Contains over 10,000 practical receipts, many of which will prove of special value to the perfumer. **\$3.00**

PERFUMES AND COSMETICS, THEIR PREPARATION AND MANUFACTURE. By G. W. ASKINSON, Perfumer. A comprehensive treatise, in which there has been nothing omitted that could be of value to the perfumer or manufacturer of toilet preparations. Complete directions for making handkerchief perfumes, smelling-salts, sachets, fumigating pastilles; preparations for the care of the skin, the mouth, the hair, cosmetics, hair dyes and other toilet articles are given, also a detailed description of aromatic substances; their nature, tests of purity, and wholesale manufacture, including a chapter on synthetic products, with formulas for their use. A book of general, as well as professional interest, meeting the wants not only of the druggist and perfume manufacturer, but also of the general public. Fourth edition much enlarged and brought up-to-date. Nearly 400 pages, illustrated. **Price, \$5.00**

PLUMBING

STANDARD PRACTICAL PLUMBING. By R. M. STARBUCK. This is a complete treatise and covers the subject of modern plumbing in all its branches. It treats exhaustively on the skilled work of the plumber and the theory underlying plumbing devices and operations, and commends itself at once to everyone working in any branch of the plumbing trade. A large amount of space is devoted to a very complete and practical treatment of the subjects of hot water supply, circulation and range boiler work. Another valuable feature is the special chapter on drawing for plumbers. The illustrations, of which there are three hundred and forty-seven, one hundred being full-page plates, were drawn expressly for this book and show the most modern and best American practice in plumbing construction. $6\frac{1}{2} \times 9\frac{1}{4}$. Cloth, 406 pages, 347 illustrations. Price, \$3.00

MECHANICAL DRAWING FOR PLUMBERS. By R. M. STARBUCK. A concise, comprehensive and practical treatise on the subject of mechanical drawing in its various modern applications to the work of all who are in any way connected with the plumbing trade. Nothing will so help the plumber in estimating and in explaining work to customers and workmen as a knowledge of drawing, and to the workman it is of inestimable value if he is to rise above his position to positions of greater responsibility. 150 illustrations. Price, \$1.50

MODERN PLUMBING ILLUSTRATED. By R. M. STARBUCK. The author of this book, Mr. R. M. Starbuck, is one of the leading authorities on plumbing in the United States. The book represents the highest standard of plumbing work. A very comprehensive work, illustrating and describing the drainage and ventilation of dwellings, apartments and public buildings. The very latest and most approved methods in all branches of sanitary installation are given. The standard book for master plumbers, architects, builders, plumbing inspectors, boards of health, boards of plumbing examiners and for the property owner, as well as the workman and apprentice. It contains fifty-five entirely new and large full pages of illustrations with descriptive text, all of which have been made specially for this work. These plates show all kinds of modern plumbing work. Each plate is accompanied by several pages of text, giving notes and practical suggestions, sizes of pipe, proper measurements for setting up work, etc. Suggestions on estimating plumbing construction are also included. 400 octavo pages, fully illustrated by 55 full-page engravings. Price, \$4.00

RECIPE BOOK

HENLEY'S TWENTIETH CENTURY BOOK OF RECIPES, FORMULAS AND PROCESSES. Edited by GARDNER D. HISCOX. The most valuable technological formulae book published, including over 10,000 selected scientific, chemical, technological and practical recipes and processes. This book of 800 pages is the most complete book of recipes ever published, giving thousands of recipes for the manufacture of valuable articles for everyday use. Hints, helps, practical ideas and secret processes are revealed within its pages. It covers every branch of the useful arts

and tells thousands of ways of making money and is just the book everyone should have at his command. The pages are filled with matters of intense interest and immeasurable practical value to the photographer, the perfumer, the painter, the manufacturer of glues, pastes, cements and mucilages, the physician, the druggist, the electrician, the brewer, the engineer, the foundryman, the machinist, the potter, the tanner, the confectioner, the chiropodist, the manufacturer of chemical novelties and toilet preparations, the dyer, the electroplater, the enameler, the engraver, the provisioner, the glass worker, the goldbeater, the watchmaker and jeweler, the ink manufacturer, the optician, the farmer, the dairyman, the paper maker, the metal worker, the soap maker, the veterinary surgeon, and the technologist in general. A book to which you may turn with confidence that you will find what you are looking for. A mine of information up-to-date in every respect. Contains an immense number of formulas that every one ought to have that are not found in any other work. New edition. Cloth binding, \$3.00; Half Morocco binding, Price, \$4.00

RUBBER

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by GARDNER D. HISCOX. Contains upward of 10,000 practical receipts, including among them formulas on artificial rubber. Price, \$3.00

RUBBER HAND STAMPS AND THE MANIPULATION OF INDIA RUBBER. By T. O'CONNOR SLOANE. This book gives full details of all points, treating in a concise and simple manner the elements of nearly everything it is necessary to understand for a commencement in any branch of the India rubber manufacture. The making of all kinds of rubber hand stamps, small articles of India rubber, U. S. Government composition, dating hand stamps, the manipulation of sheet rubber, toy balloons, India rubber solutions, cements, blackings, renovating varnish, and treatment for India rubber shoes, etc.; the hektograph stamp inks, and miscellaneous notes, with a short account of the discovery, collection and manufacture of India rubber are set forth in a manner designed to be readily understood, the explanation being plain and simple. Third edition. 175 pages, illustrated. Cloth. Price, \$1.00

SAWS

SAW FILING AND MANAGEMENT OF SAWS. By ROBERT GRIMSHAW. A practical hand book on filing, gumming, swaging, hammering and the brazing of band saws, the speed, work, and power to run circular saws, etc. A handy book for those who have charge of saws, or for those mechanics who do their own filing, as it deals with the proper shape and pitches of saw teeth of all kinds and gives many useful hints and rules for gumming, setting, and filing, and is a practical aid to those who use saws for any purpose. Third edition, revised and enlarged. Illustrated. Price, \$1.00

SCREW CUTTING

THREADS AND THREAD CUTTING. By COLVIN and STABEL. This clears up many of the mysteries of thread cutting, such as double and triple threads, internal threads, catching threads, use of hobs, etc. Contains a lot of useful hints and several tables. Third edition.

Price, 25 cents

STEAM ENGINEERING

AMERICAN STATIONARY ENGINEERING. By W. E. CRANE. A new book by a well-known author. Begins at the boiler room and takes in the whole power plant. Contains the result of years of practical experience in all sorts of engine rooms and gives exact information that cannot be found elsewhere. It's plain enough for practical men and yet of value to those high in the profession. Has a complete examination for a license. Second edition. 285 pages. Illustrated. Cloth.

Price, \$2.00

STEAM ENGINE CATECHISM. By ROBERT GRIMSHAW. This volume of 413 pages is not only a catechism on the question and answer principle, but it contains formulas and worked-out answers for all the steam problems that appertain to the operation and management of the steam engine. Illustrations of various valves and valve gear with their principles of operation are given. 34 tables that are indispensable to every engineer and fireman that wishes to be progressive and is ambitious to become master of his calling are within its pages. It is a most valuable instructor in the service of steam engineering. Leading engineers have recommended it as a valuable educator for the beginner as well as a reference book for the engineer. Sixteenth edition.

Price, \$2.00

BOILER ROOM CHART. By GEO. L. FOWLER. A chart—size 14 x 28 inches—showing in isometric perspective the mechanisms belonging in a modern boiler room. Water tube boilers, ordinary grates and mechanical stokers, feed water heaters and pumps comprise the equipment. The various parts are shown broken or removed, so that the internal construction is fully illustrated. Each part is given a reference number, and these, with the corresponding name, are given in a glossary printed at the sides. This chart is really a dictionary of the boiler room—the names of more than 200 parts being given. It is educational—worth many times its cost.

Price, 25 cents

EMINENT ENGINEERS. By DWIGHT GODDARD. Everyone who appreciates the effect of such great inventions as the steam engine, steamboat, locomotive, sewing machine, steel working, and other fundamental discoveries, is interested in knowing a little about the men who made them and their achievements. Mr. Goddard has selected thirty-two of the world's engineers who have contributed most largely to the advancement of our civilization by mechanical means, giving only such facts as are of general interest and in a way which appeals to all, whether mechanics or not. 280 pages, 35 illustrations.

Price, \$1.50

ENGINE RUNNER'S CATECHISM. By ROBERT T. GRIMSHAW. Tells how to erect, adjust and run the principal steam engines in use in the United States. The work is of a handy size for the pocket. To young engineers this catechism will be of great value, especially to those who may be preparing to go forward to be examined for certificates of competency; and to engineers generally it will be of no little service, as they will find in this volume more really practical and useful information than is to be found anywhere else within a like compass. 387 pages. Seventh edition. **Price, \$2.00**

MODERN STEAM ENGINEERING IN THEORY AND PRACTICE. By GARDNER D. HISCOX. This is a complete and practical work issued for stationary engineers and firemen dealing with the care and management of boilers, engines, pumps, superheated steam, refrigerating machinery, dynamos, motors, elevators, air compressors, and all other branches with which the modern engineer must be familiar. Nearly 200 questions with their answers on steam and electrical engineering, likely to be asked by the examining board, are included. Third edition. 487 pages, 405 engravings. Cloth. **Price, \$3.00**

HORSE POWER CHART. Shows the horse power of any stationary engine without calculation. No matter what the cylinder diameter or stroke; the steam pressure or cut-off; the revolutions, or whether condensing or non-condensing, it's all there. Easy to use, accurate, and saves time and calculations. Especially useful to engineers and draftsmen. **Price, 50 cents**

STEAM ENGINEER'S ARITHMETIC. By COLVIN-CHENEY. A practical pocket book for the steam engineer. Shows how to work the problems of the engine room and shows "why." Tells how to figure horse-power of engines and boilers; area of boilers; has tables of areas and circumferences; steam tables; has a dictionary of engineering terms. Puts you onto all of the little kinks in figuring whatever there is to figure around a power plant. Tells you about the heat unit; absolute zero; adiabatic expansion; duty of engines; factor of safety; and 1,001 other things; and everything is plain and simple—not the hardest way to figure, but the easiest. Second edition. **Price, 50 cents**

STEAM PIPES

STEAM PIPES; THEIR DESIGN AND CONSTRUCTION. By WM. H. BOOTH. The work is well illustrated in regard to pipe joints, expansion offsets, flexible joints, and self-contained sliding joints for taking up the expansion of long pipes. In fact, the chapters on the flow of steam and expansion of pipes are most valuable to all steam fitters and users. The pressure strength of pipes and method of hanging them is well treated and illustrated. Valves and by-passes are fully illustrated and described, as are also flange joints and their proper proportions. Exhaust heads and separators. One of the most valuable chapters is that on superheated steam and the saving of steam by insulation with the various kinds of felting and other materials, with comparison tables of the loss of heat in thermal units from naked and felted steam pipes. Second edition. Contains 187 pages. Cloth. **Price, \$2.00**

STEAM HEATING AND VENTILATING

PRACTICAL STEAM, HOT-WATER HEATING AND VENTILATION. By A. G. KING. This book has been prepared for the use of all engaged in the business of steam, hot-water heating and ventilation. Tells how to get heating contracts, how to install heating and ventilating apparatus, the best business methods to be used, with "Tricks of the Trade" for shop use. Rules and data for estimating radiation and cost and such tables and information as make it an indispensable work for everyone interested in steam, hot-water heating and ventilation. It describes all the principal systems of steam, hot-water, vacuum, vapor and vacuum-vapor heating, together with the new accelerated systems of hot-water circulation, including chapters on up-to-date methods of ventilation and the fan or blower system of heating and ventilation. Second edition. 367 pages, 300 detailed engravings. Cloth. **Price, \$3.00**

500 PLAIN ANSWERS TO DIRECT QUESTIONS ON STEAM, HOT-WATER, VAPOR AND VACUUM HEATING PRACTICE. By ALFRED G. KING. This work, just off the press, is arranged in question and answer form; it is intended as a guide and text-book for the younger inexperienced fitter and as a reference book for all fitters. All long and tedious discussions and descriptions formerly considered so important have been eliminated, and the theory and laws of heat and the various old and modern methods and appliances used for heating and ventilating are treated in a concise manner. This is the standard Question and Answer examination book on Steam and Hot Water Heating, etc. 200 pages, 127 illustrations. Octavo. Cloth. **Price, \$1.50**

STEEL

HARDENING, TEMPERING, ANNEALING, AND FORGING OF STEEL. By J. V. WOODWORTH. A book containing special directions for the successful hardening and tempering of all steel tools. Milling cutters, taps, thread dies, reamers, both solid and shell, hollow mills, punches and dies, and all kinds of sheet-metal working tools, shear blades, saws, fine cutlery and metal-cutting tools of all descriptions, as well as for all implements of steel, both large and small, the simplest, and most satisfactory hardening and tempering processes are presented. 320 pages, 250 illustrations. Fourth edition. Cloth. **Price, \$2.50**

STEEL: ITS SELECTION, ANNEALING, HARDENING AND TEMPERING. By E. R. MARKHAM. This work was formerly known as "The American Steel Worker," but on the publication of the new, revised edition, the publishers deemed it advisable to change its title to a more suitable one. This is the standard work on hardening, tempering, and annealing steel of all kinds. This book tells how to select, and how to work, temper, harden, and anneal steel for everything on earth. It is the standard book on selecting, hardening, and tempering all grades of steel. 400 pages. Very fully illustrated. Fourth edition. **Price, \$2.50**